



ASSEMBLY INSTRUCTIONS

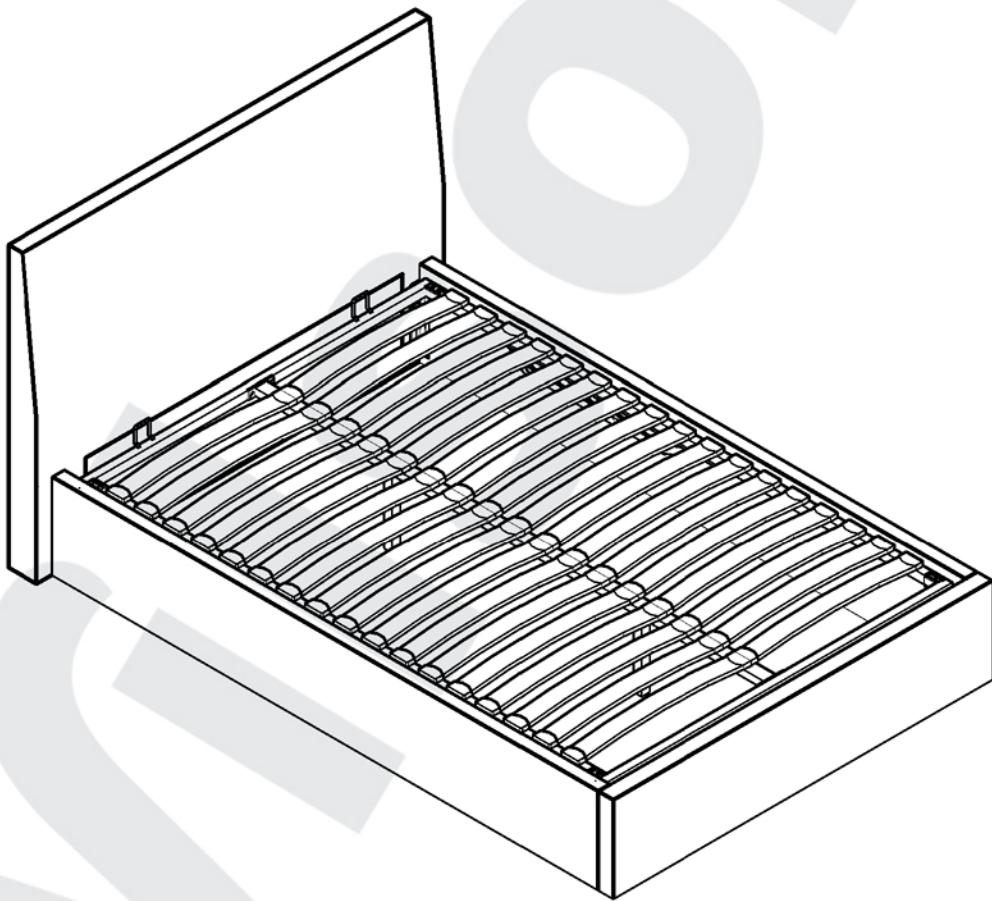

PART LIST

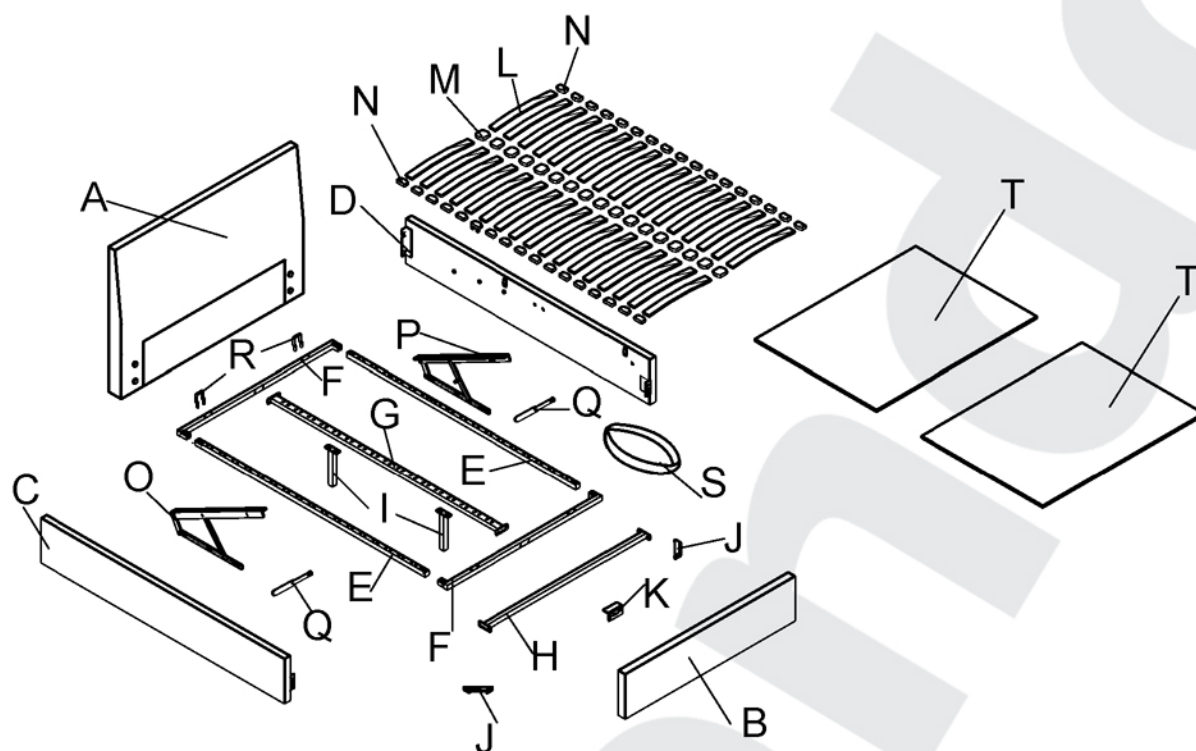

HARDWARE LIST

Label	Picture	Description	Qty	Label	Picture	Description	Qty
1		Bolt M8x20	14	6		Nut M8	6
2		Bolt M8x40	12	7		Nut M6	4
3		Bolt M6x16	12	10		Foam Pad	9
4		Bolt M6x35	4	11		Gas lifting plastic cap	6
5		Bolt M8x20	4	13		Foam Pad	18


TOOL LIST

Label	Picture	Description	Qty
8		Allen key M5 M6	2
9		Spanner M10 M12	1
12		Spanner M13	1

11	6PCS	2	6PCS
	Gas lifting plastic cap		Bolt M8x40

8	
	Allen key M6


Step 1

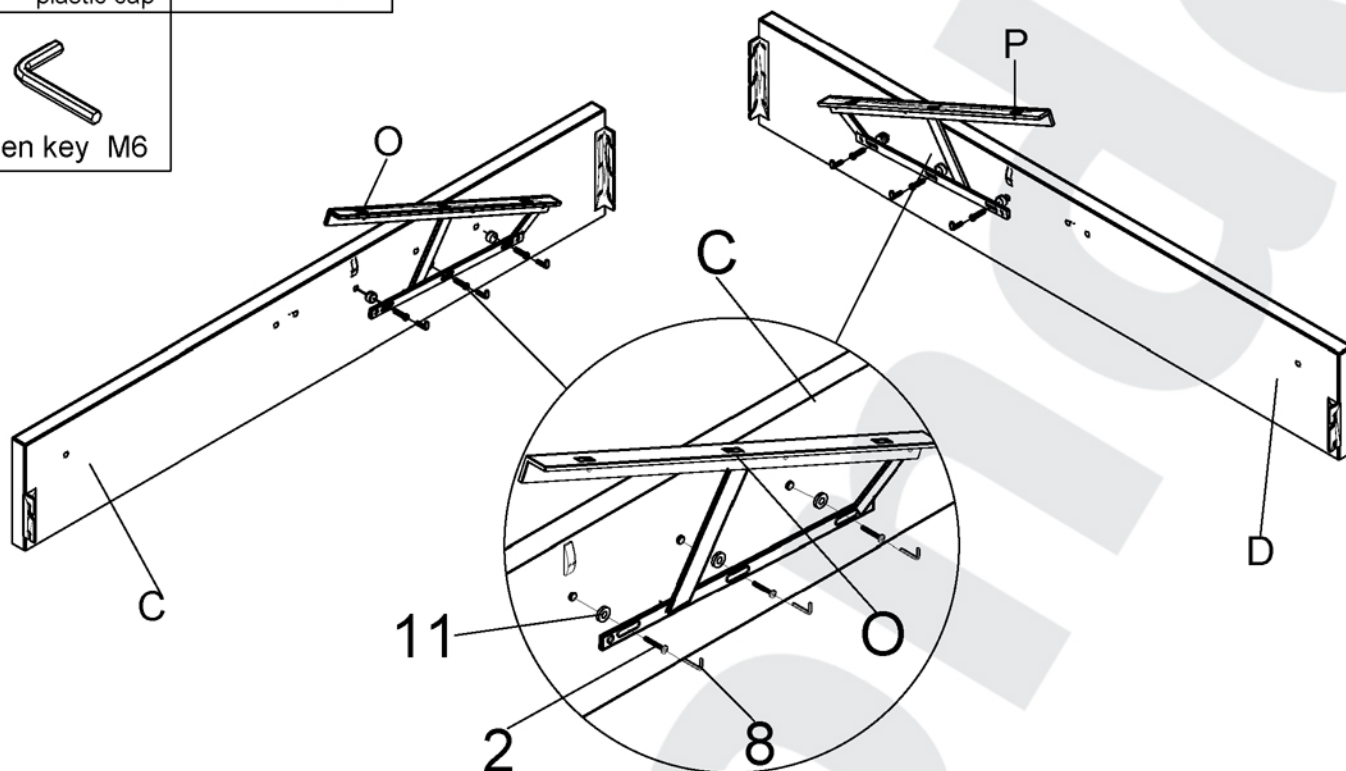

1	8PCS
	Bolt M8x20


8	
	Allen key M6

Step 2

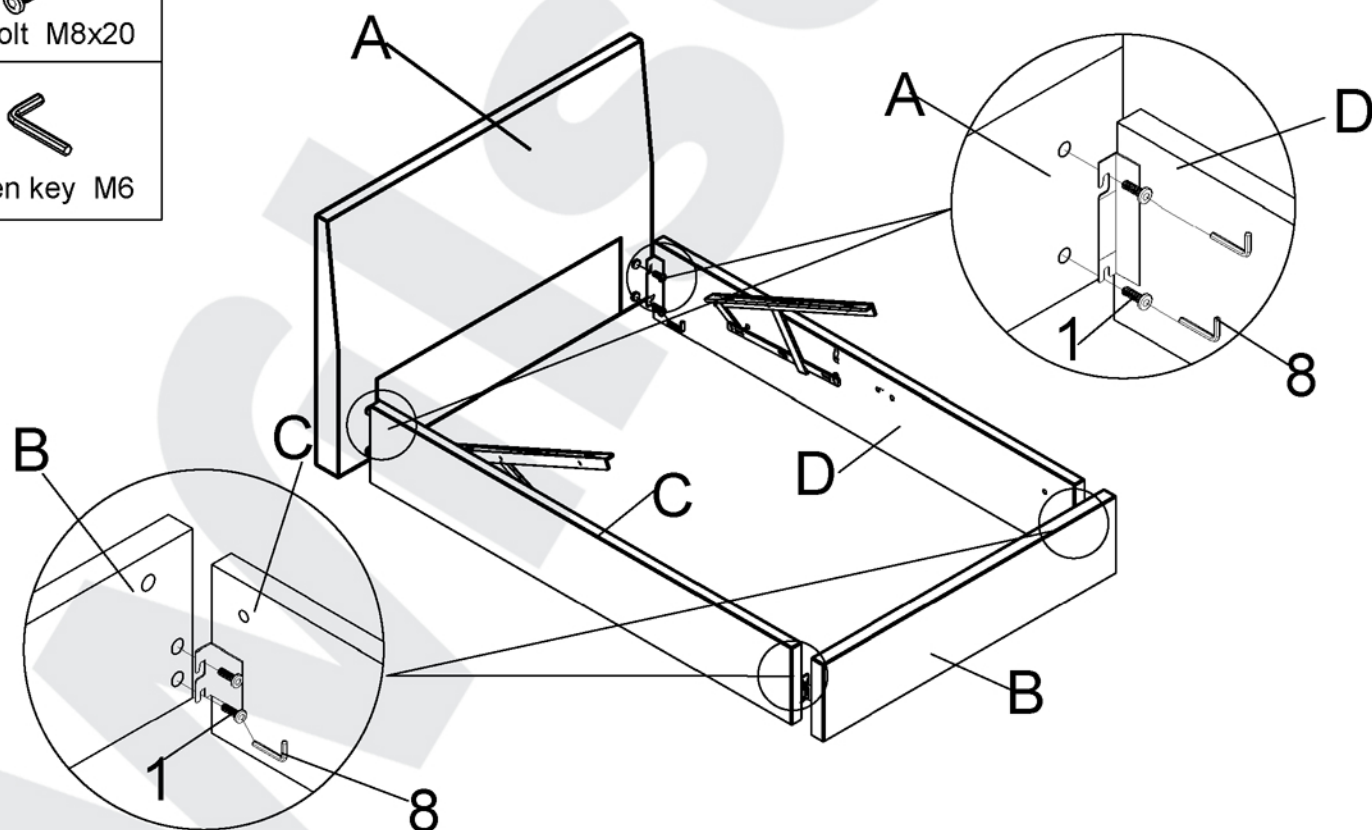


J	2PCS	K	1PCS
			
1	6PCS	8	
		Allen key M6	

Step 3

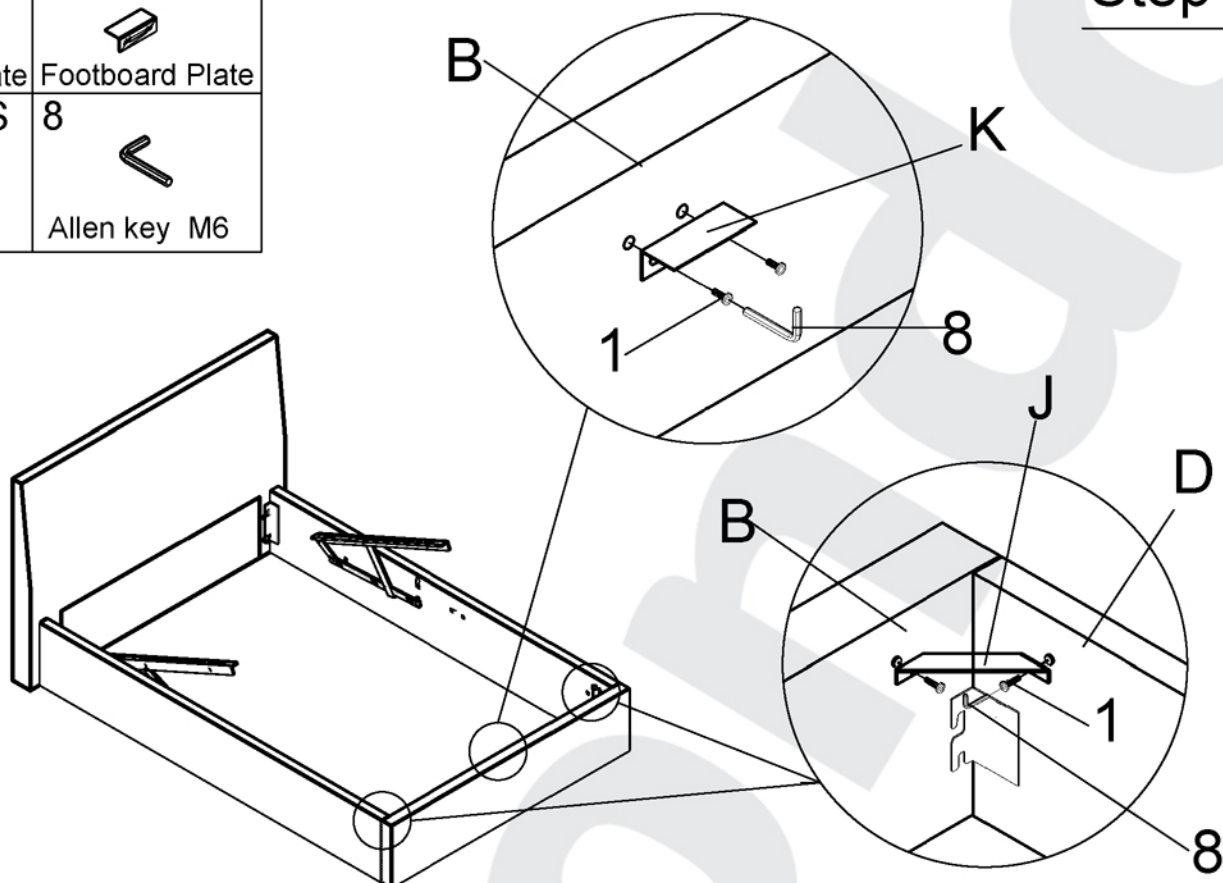


5	4PCS	8	
		Allen key M5	

Step 4

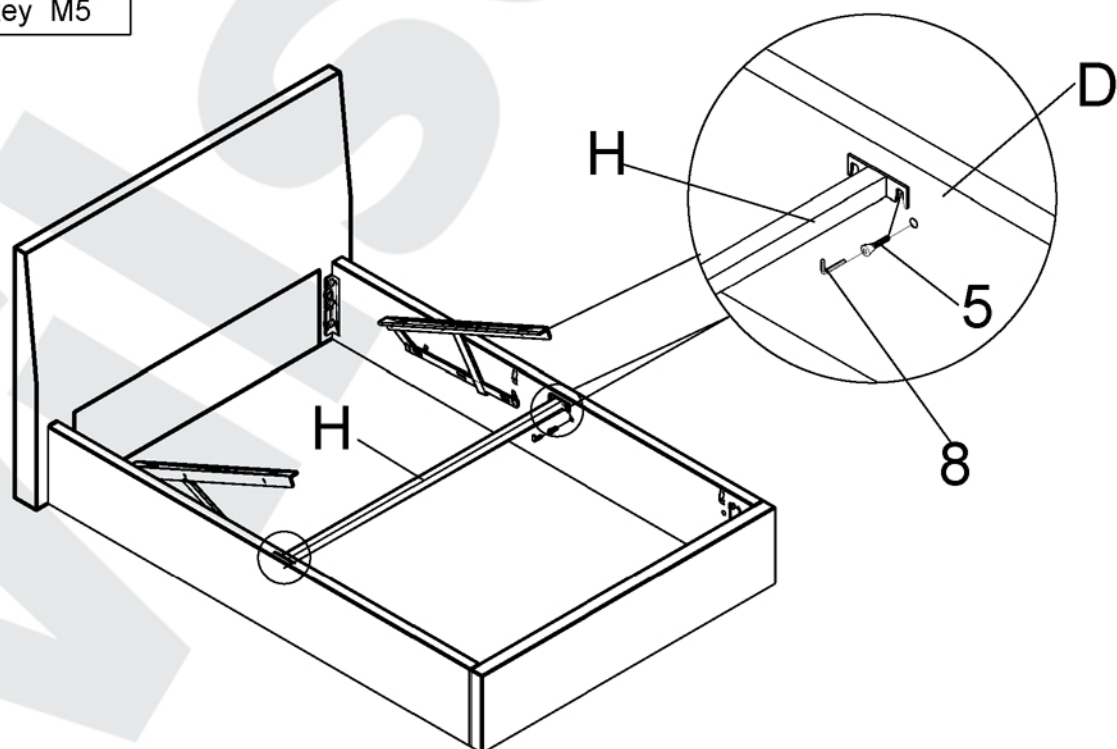


3	8PCS	4	4PCS
	Bolt M6x16		Bolt M6x35
7	4PCS	8	
	Nut M6		Allen key M5
9			
	Spanner M10		

Step 5

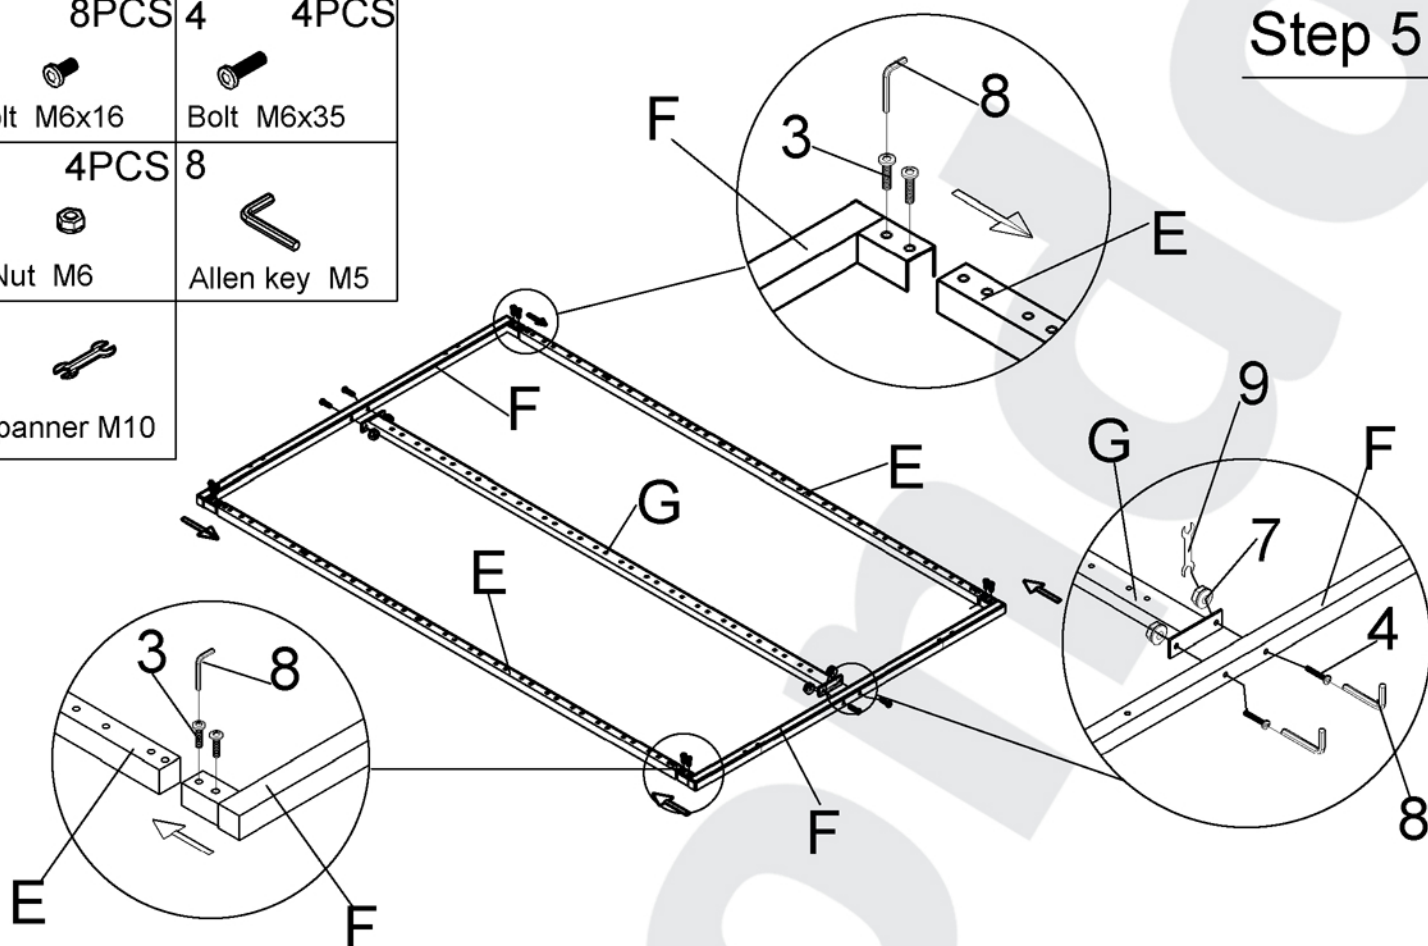


3	4PCS
	Bolt M6x16
8	
	Allen key M5

Step 6

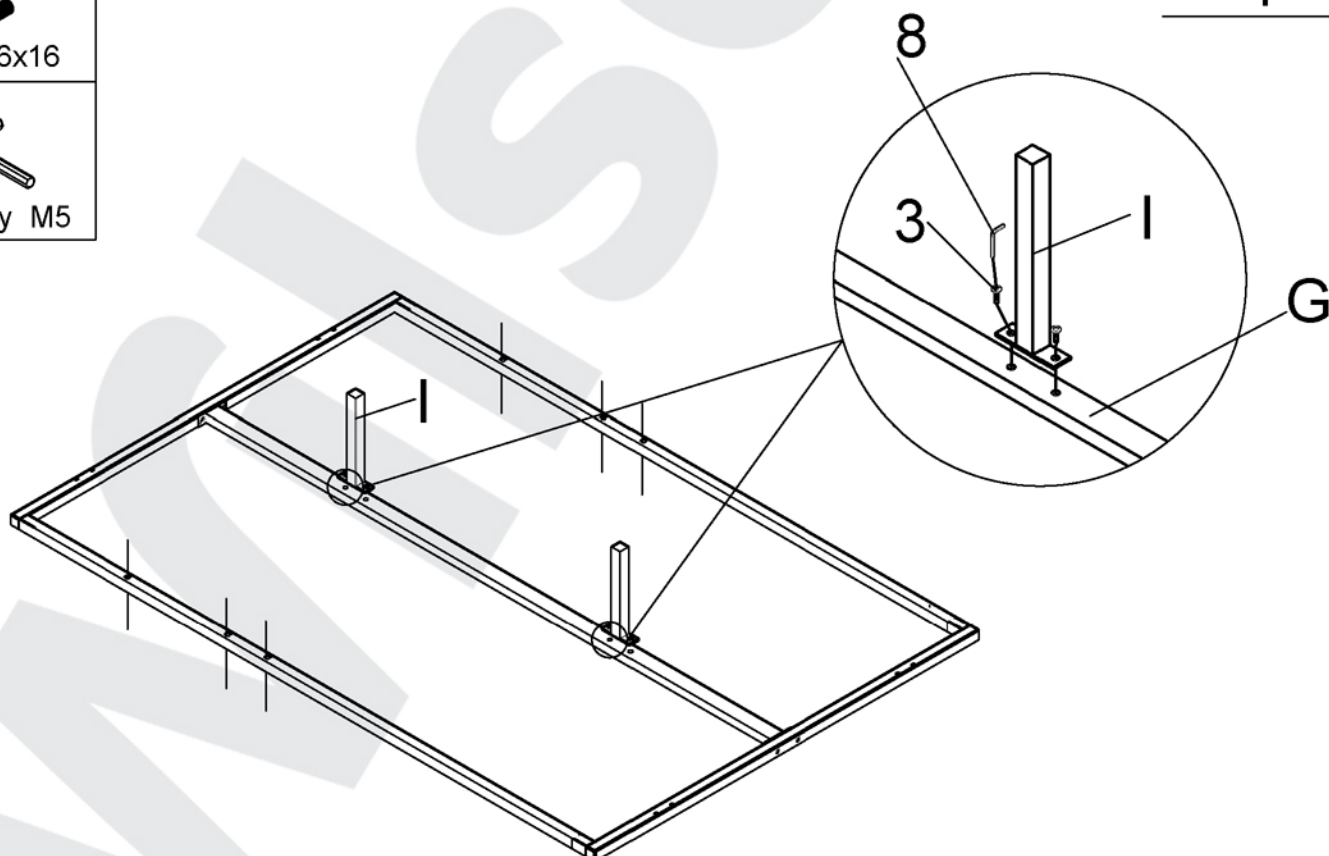


Step 7

2	6PCS	6	6PCS
	Bolt M8x40		Nut M8
8		9	
	Allen key M6		Spanner M12

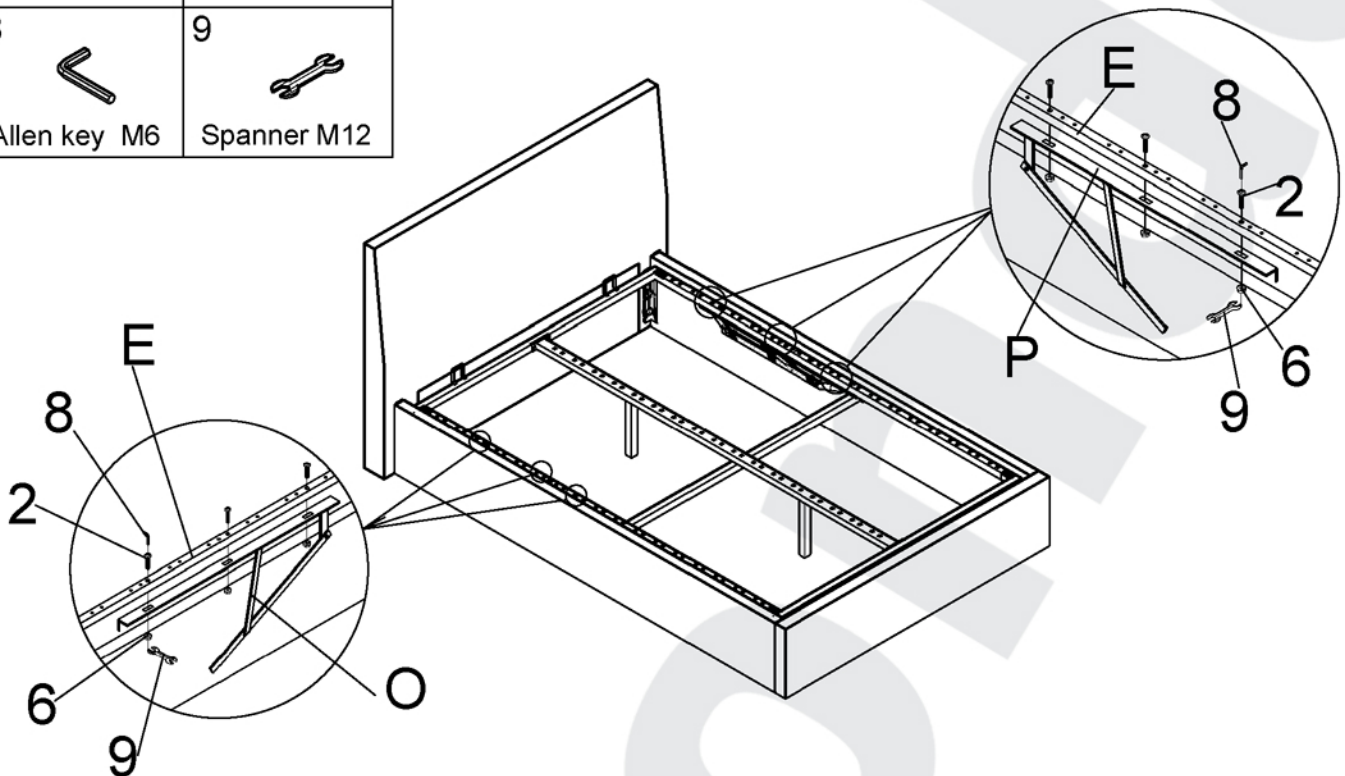


Step 8

L	34PCS	M	17PCS
	Wood slat		Double Plastic cap
N	34PCS		
	Single plastic cap		

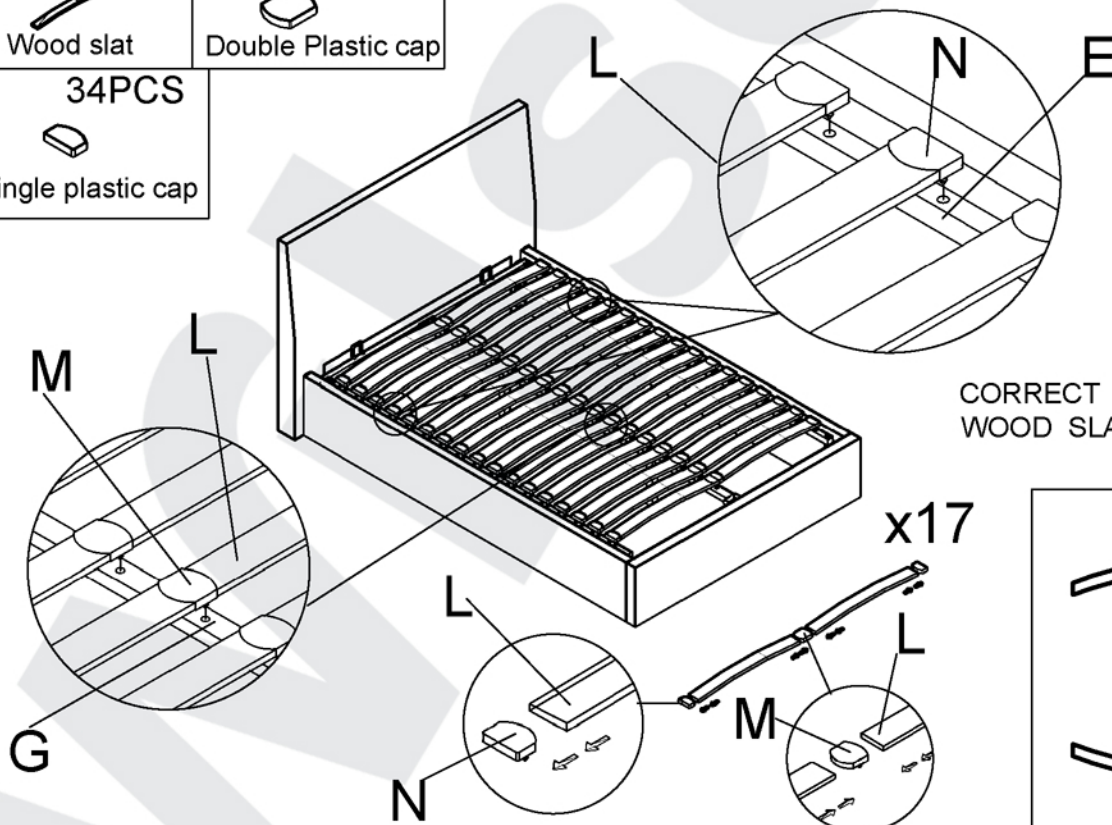

CORRECT INSTALLATION OF
WOOD SLATS ON BED BASE

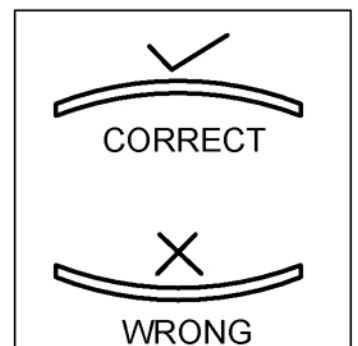


R 2PCS



Mattress stopper

Step 9

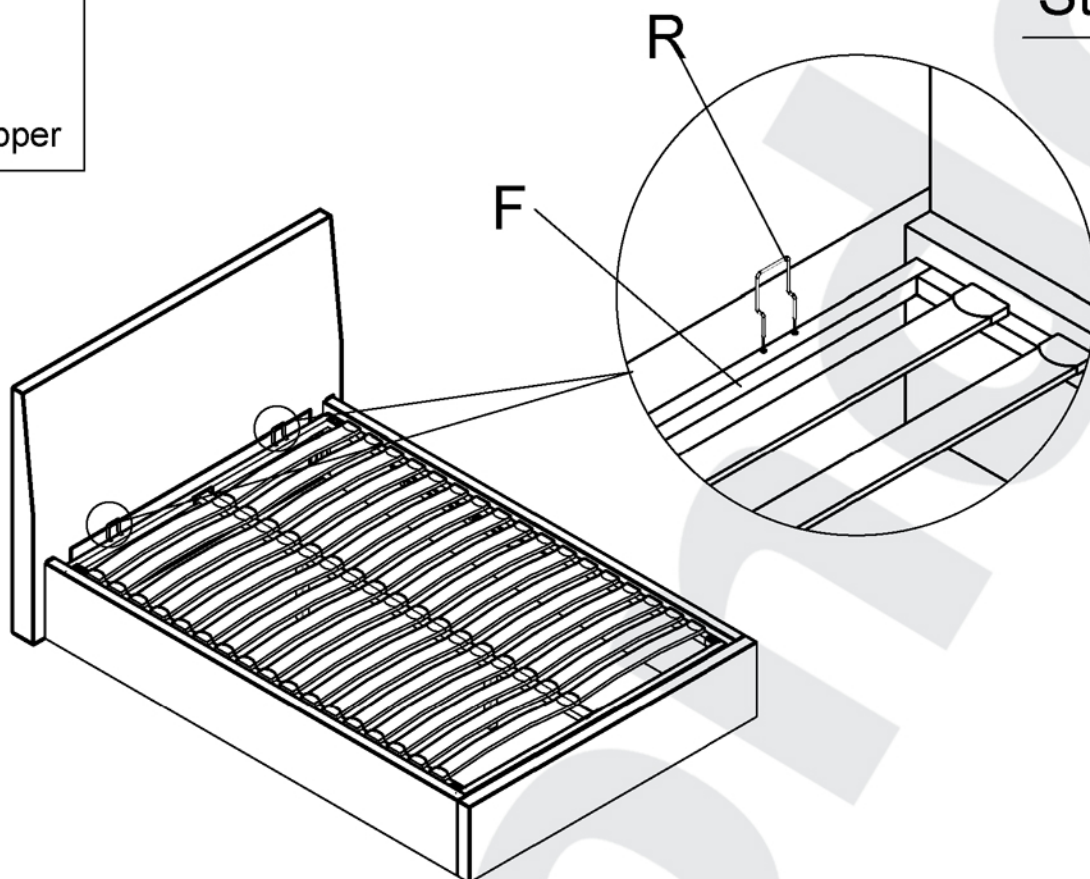

S 1PCS




Puller

Q 2PCS




Step 10

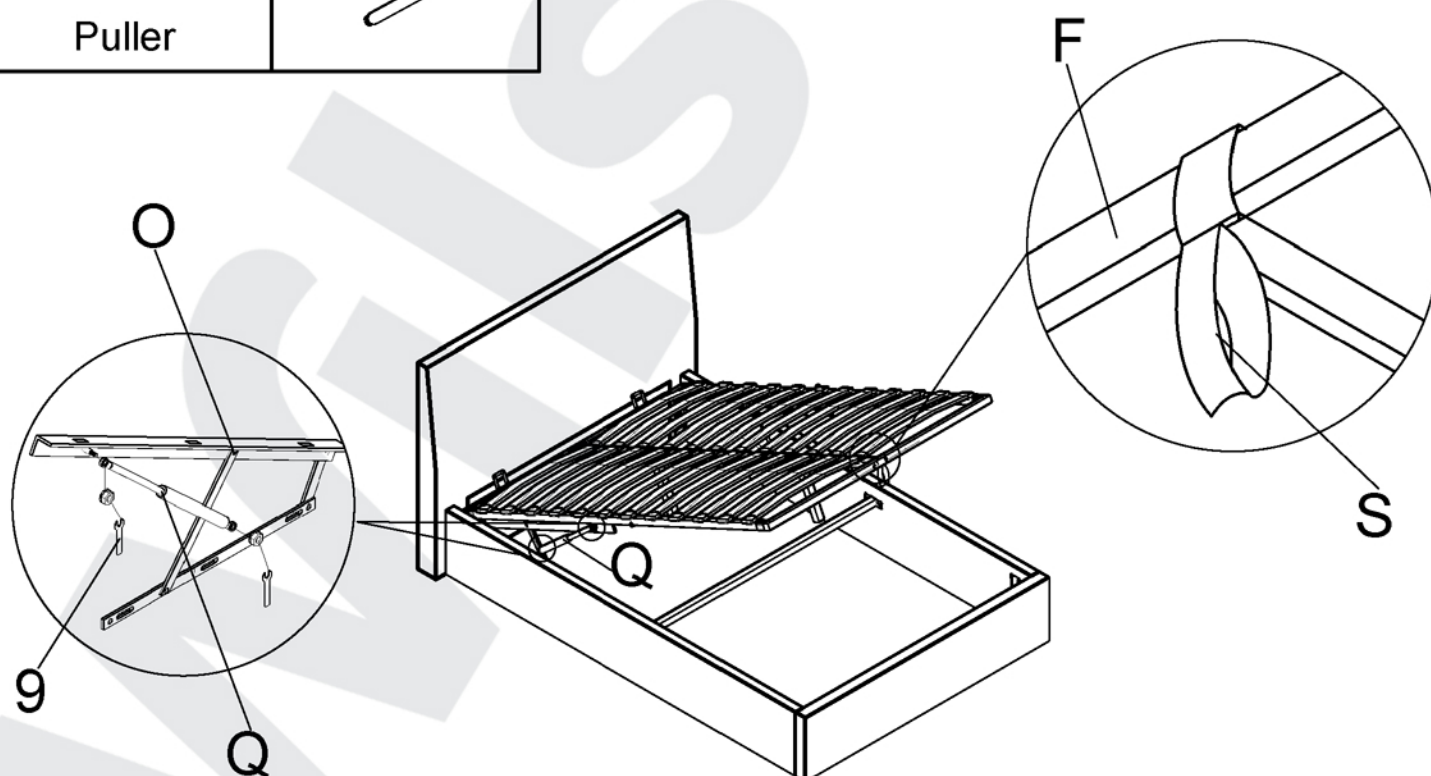

10 9PCS


Foam Pad


Step 11

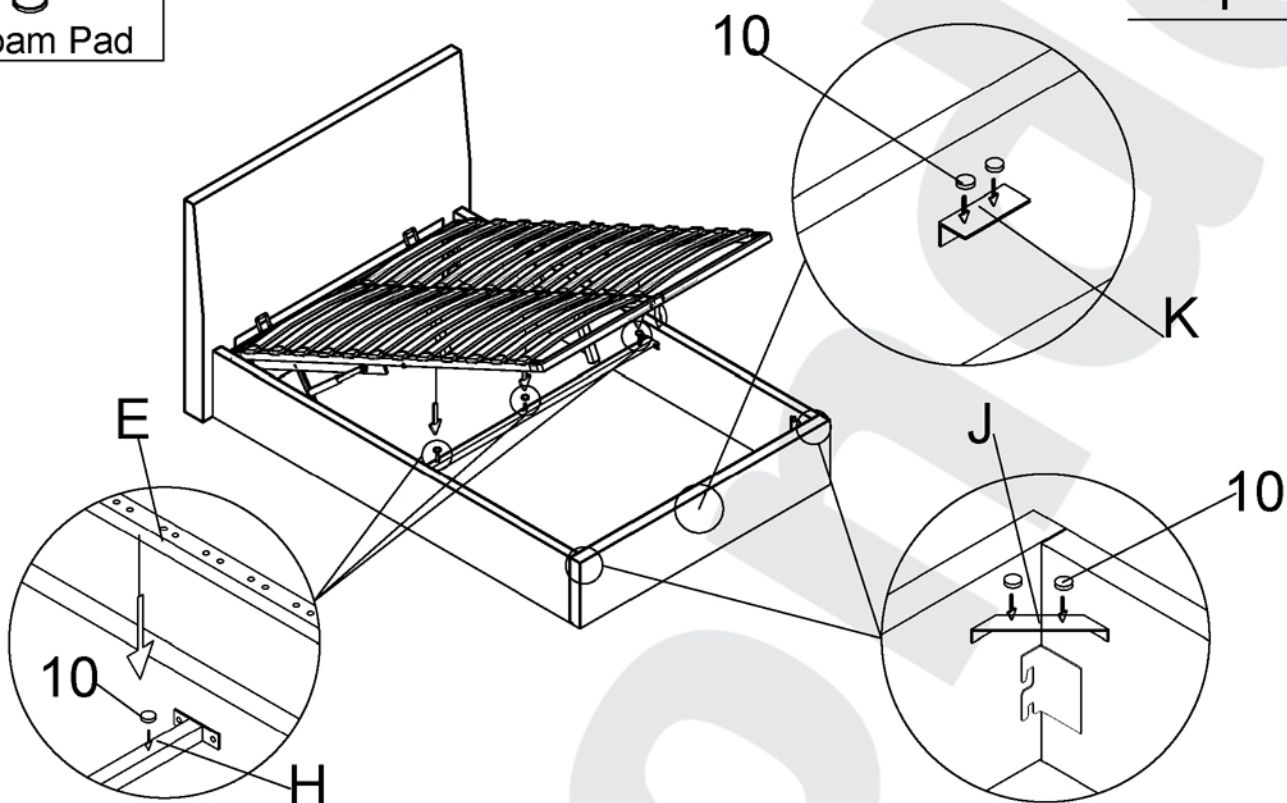

13 18PCS



Foam Pad

Step 12

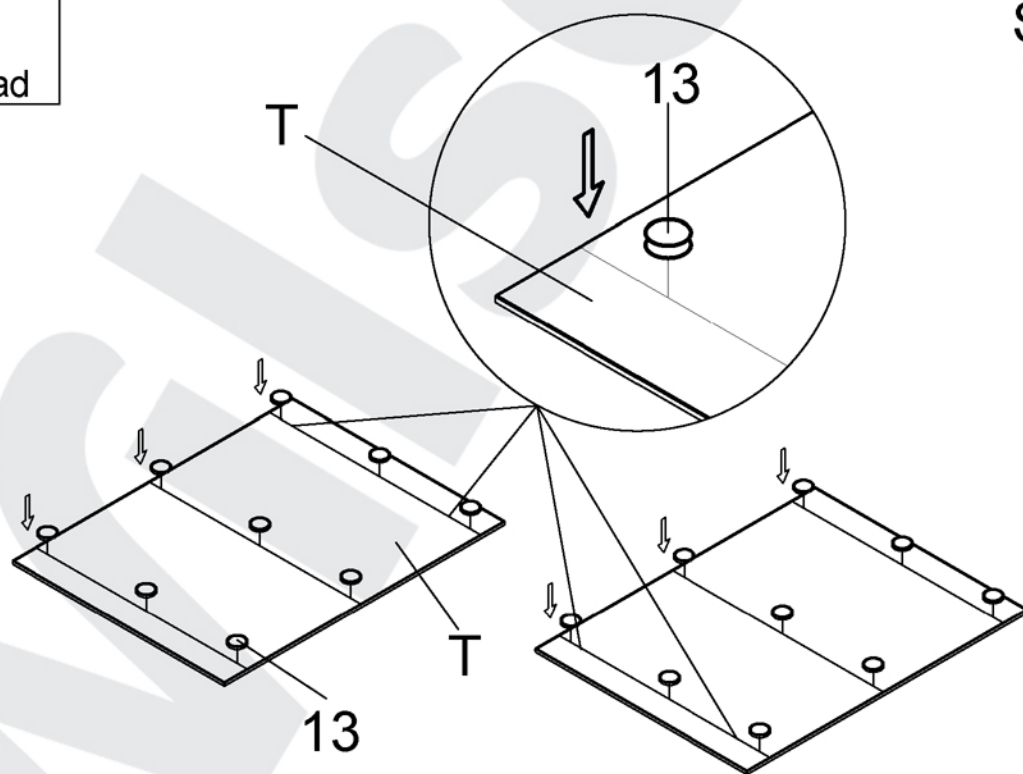


T

2PCS

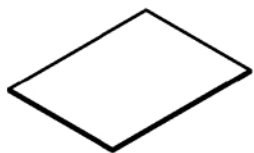

Step 13

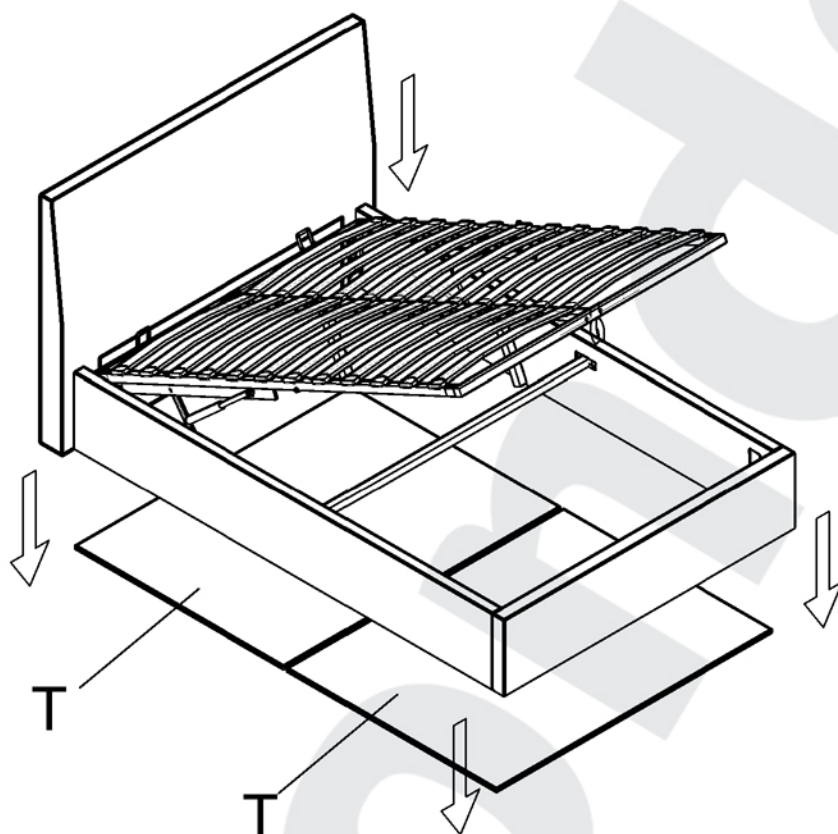

Step 14

