

FEROS

PL: Instrukcja montażu - łóżko

D: Aufbauanleitung - bett

GB: Assembly instruction - bed




FR: Instructions de montage - lit

SK: Návod na montáž - posteľ



CZ: Návod k montáži - postel

HU: Szerelési útmutató - ágy


HR: Upute za montažu - krevet

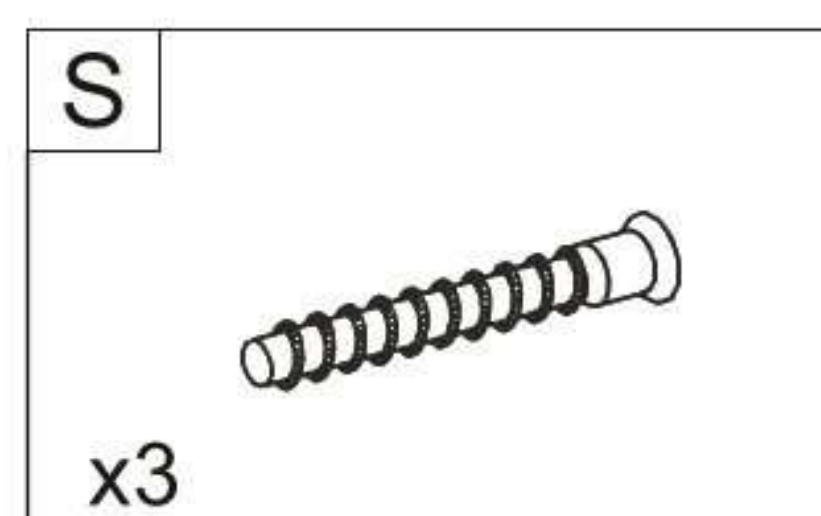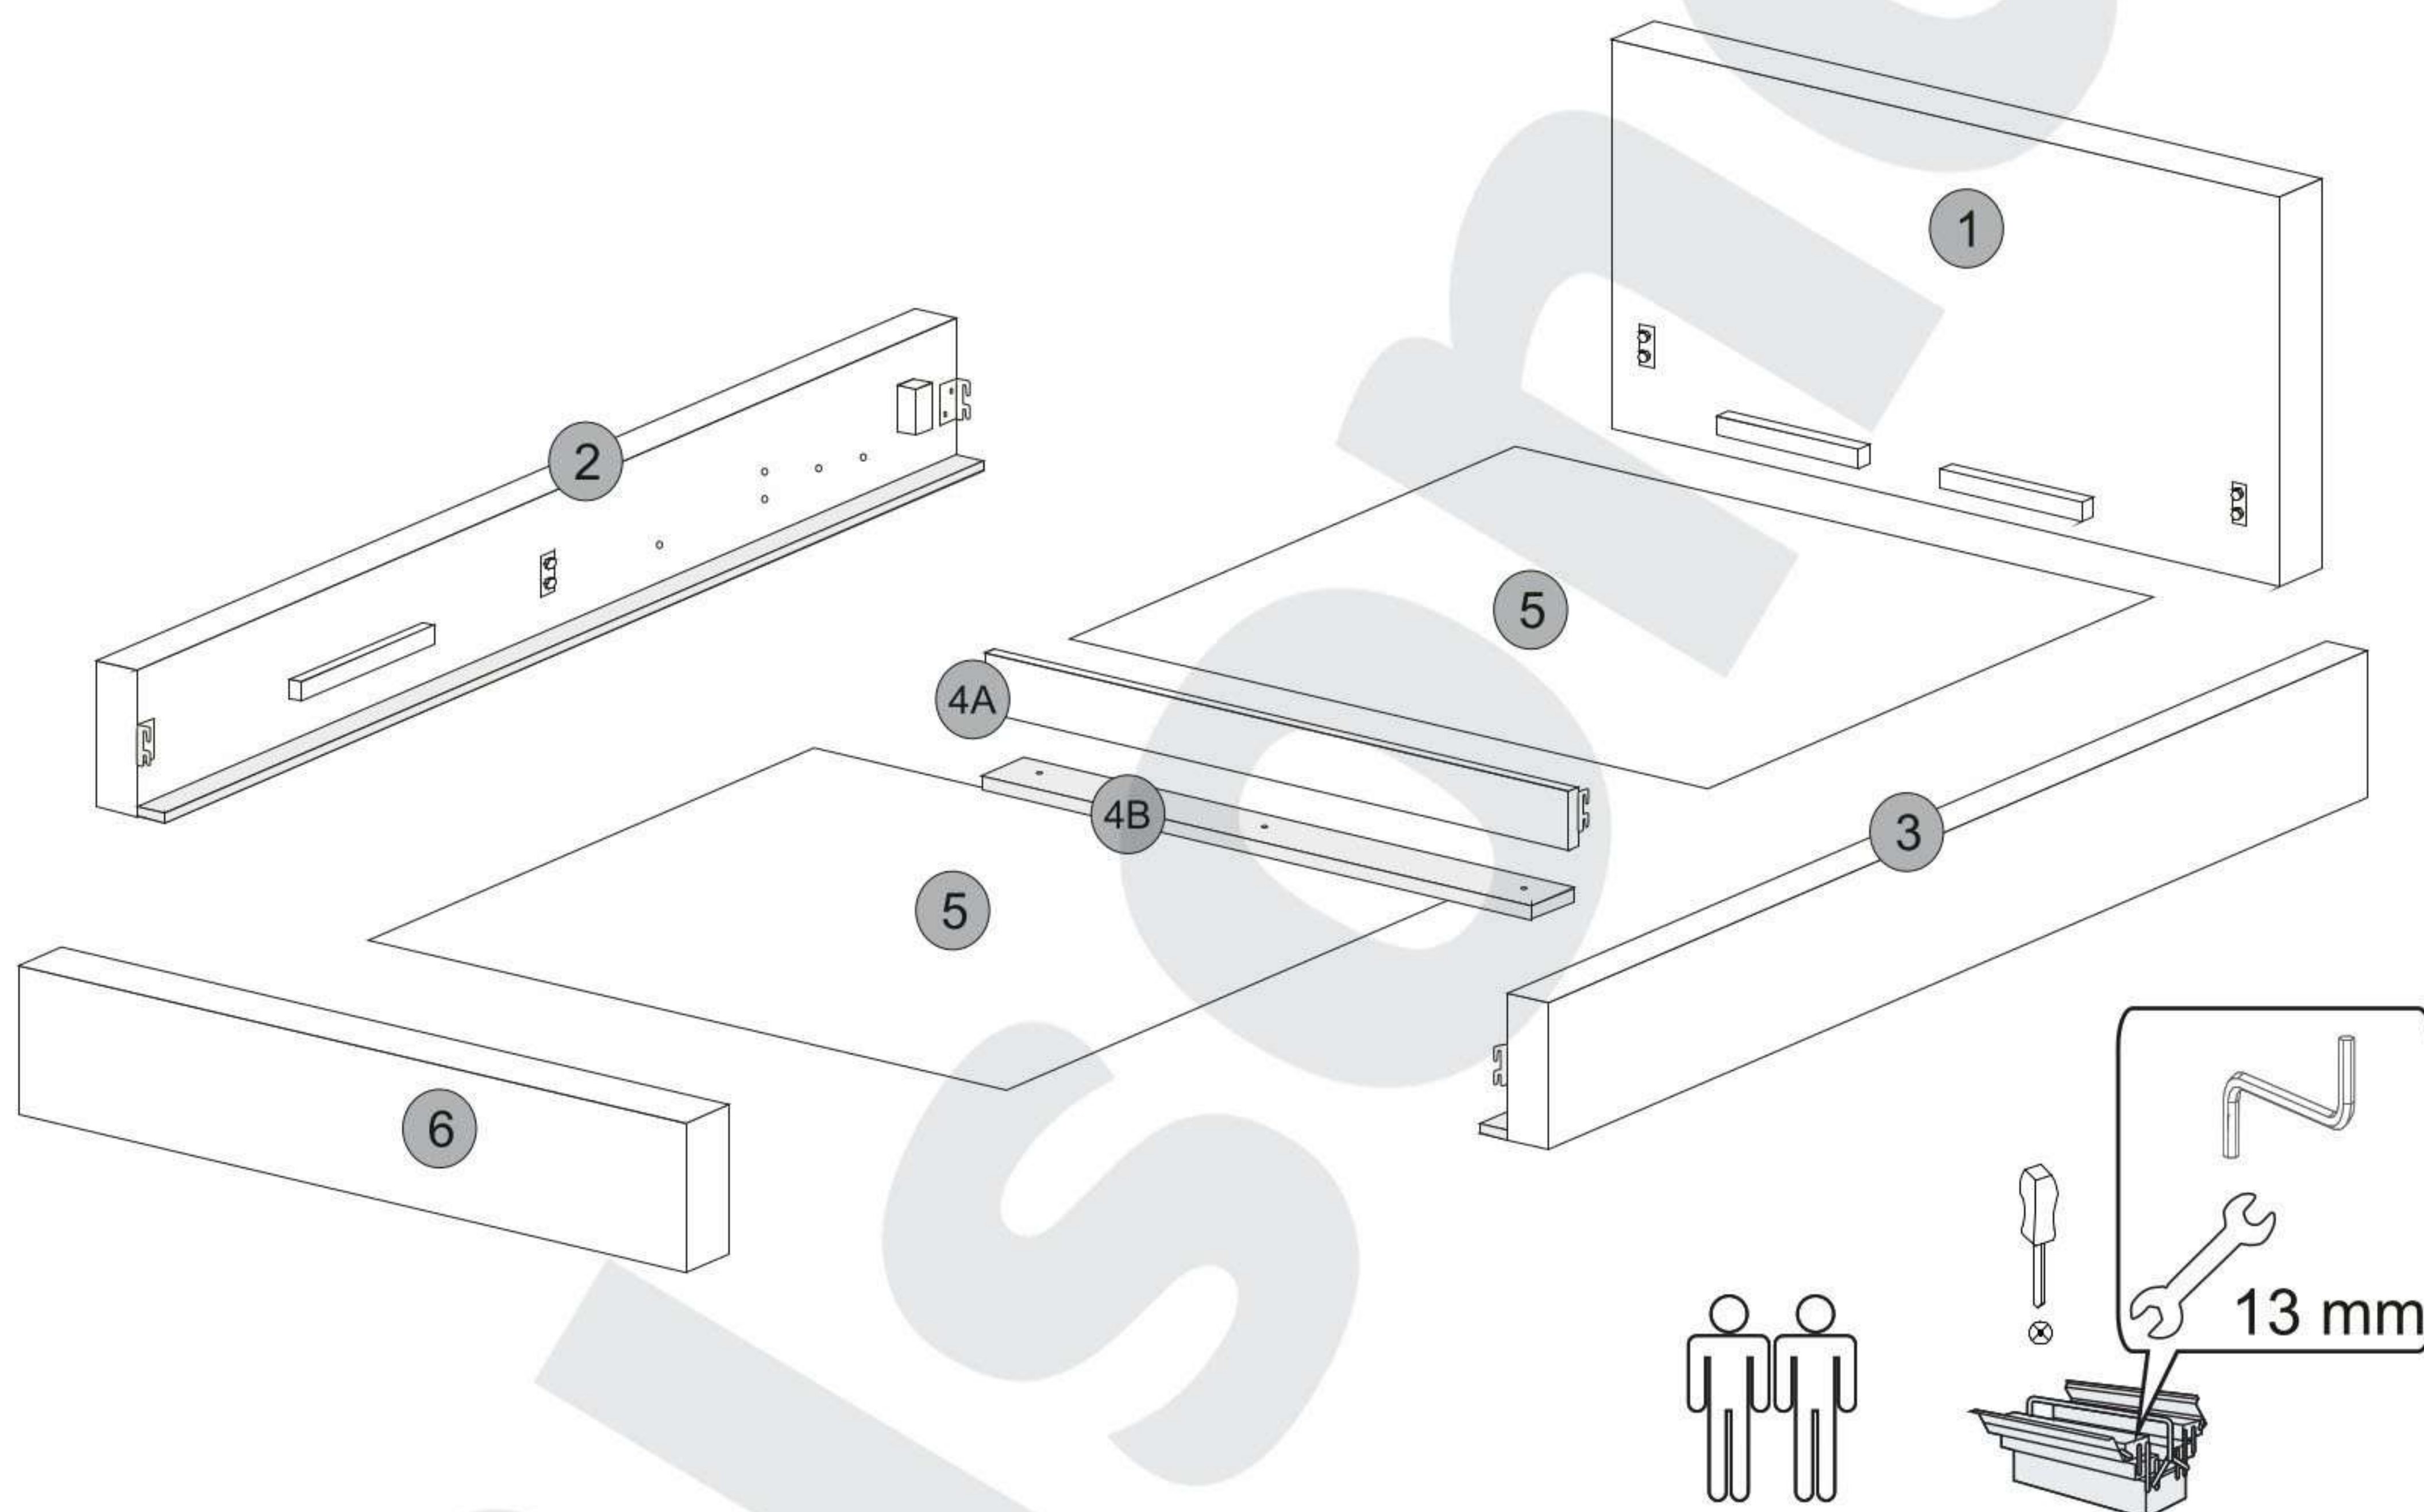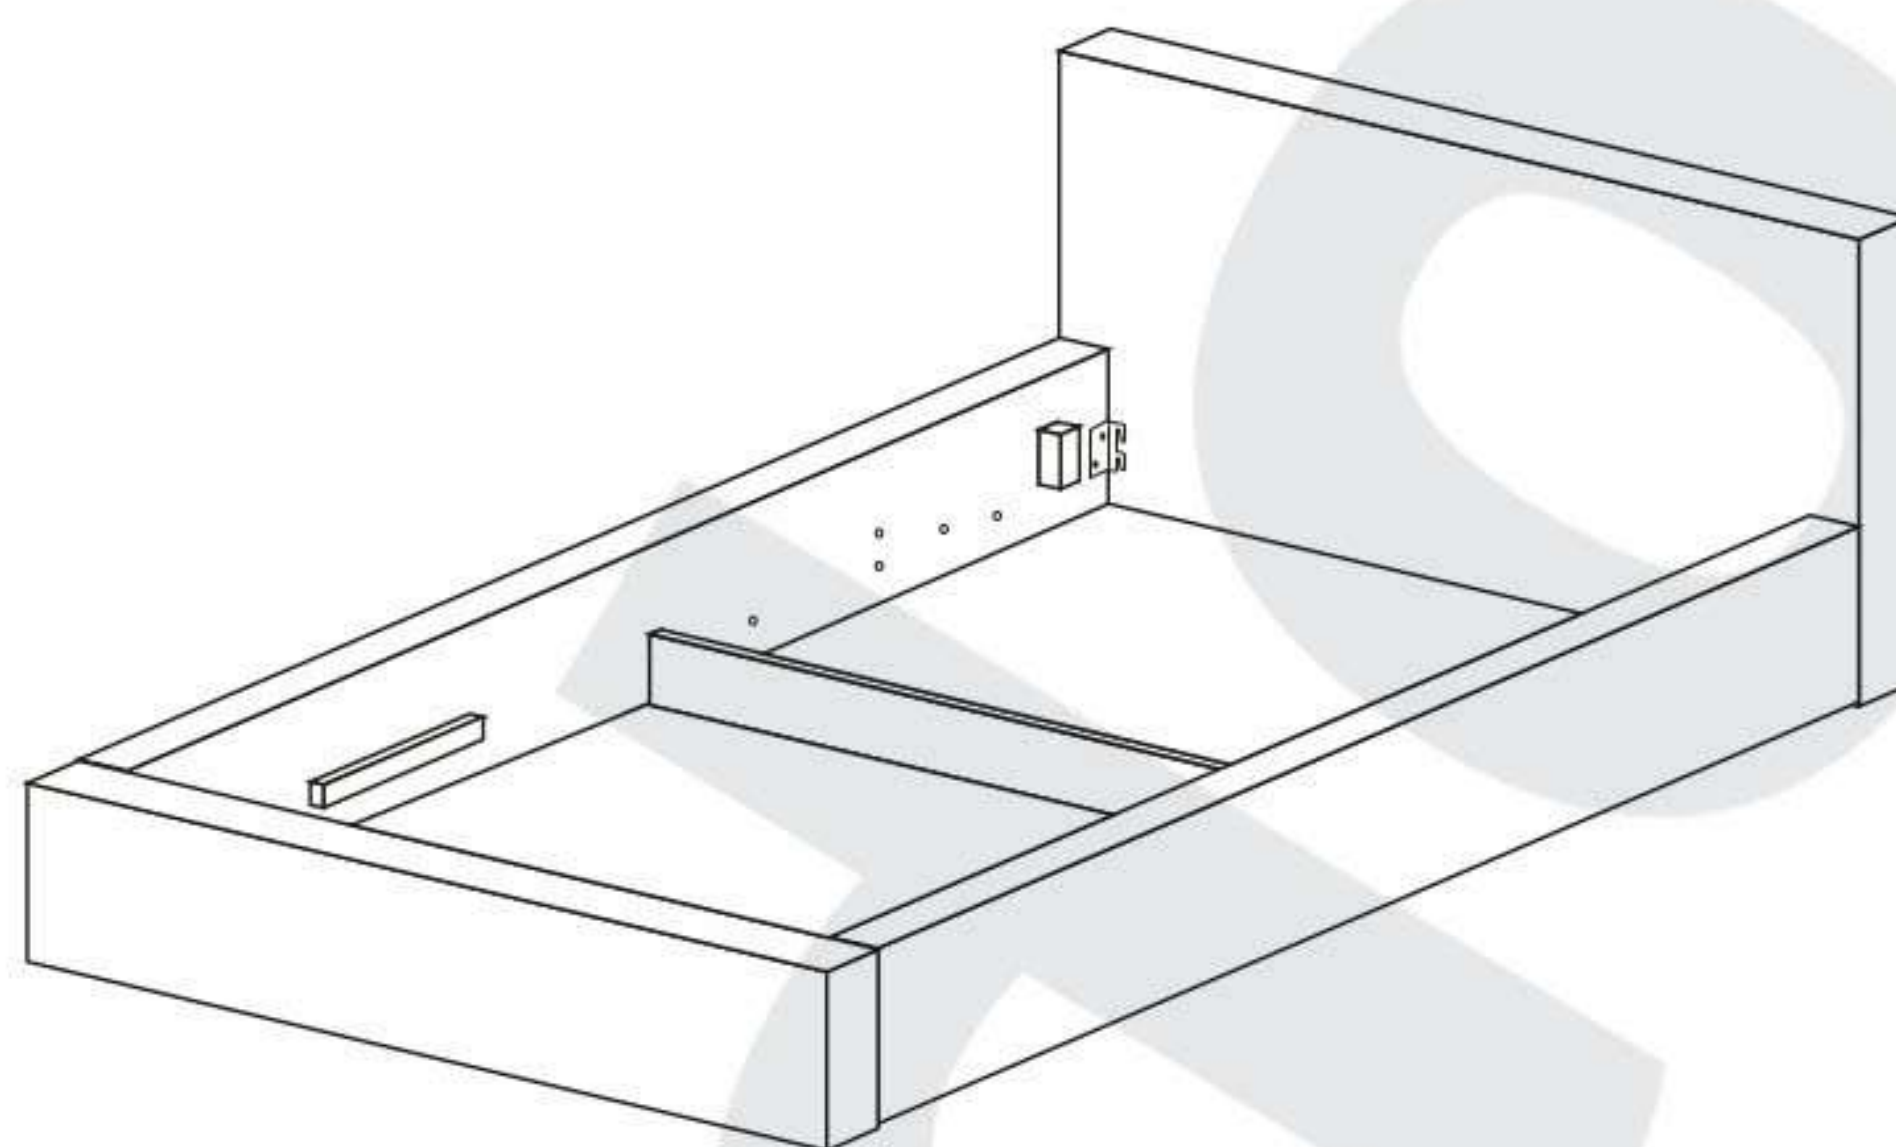


Date of production:

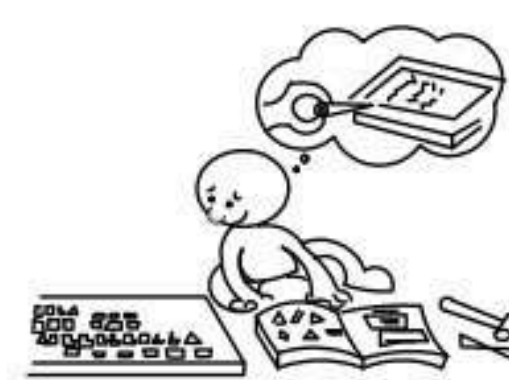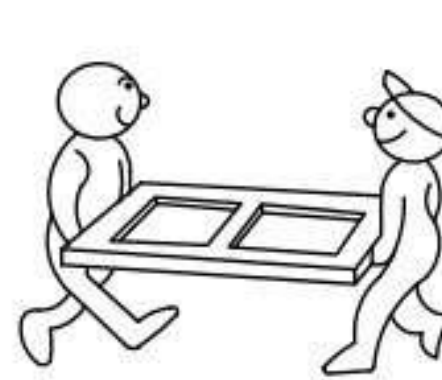


I

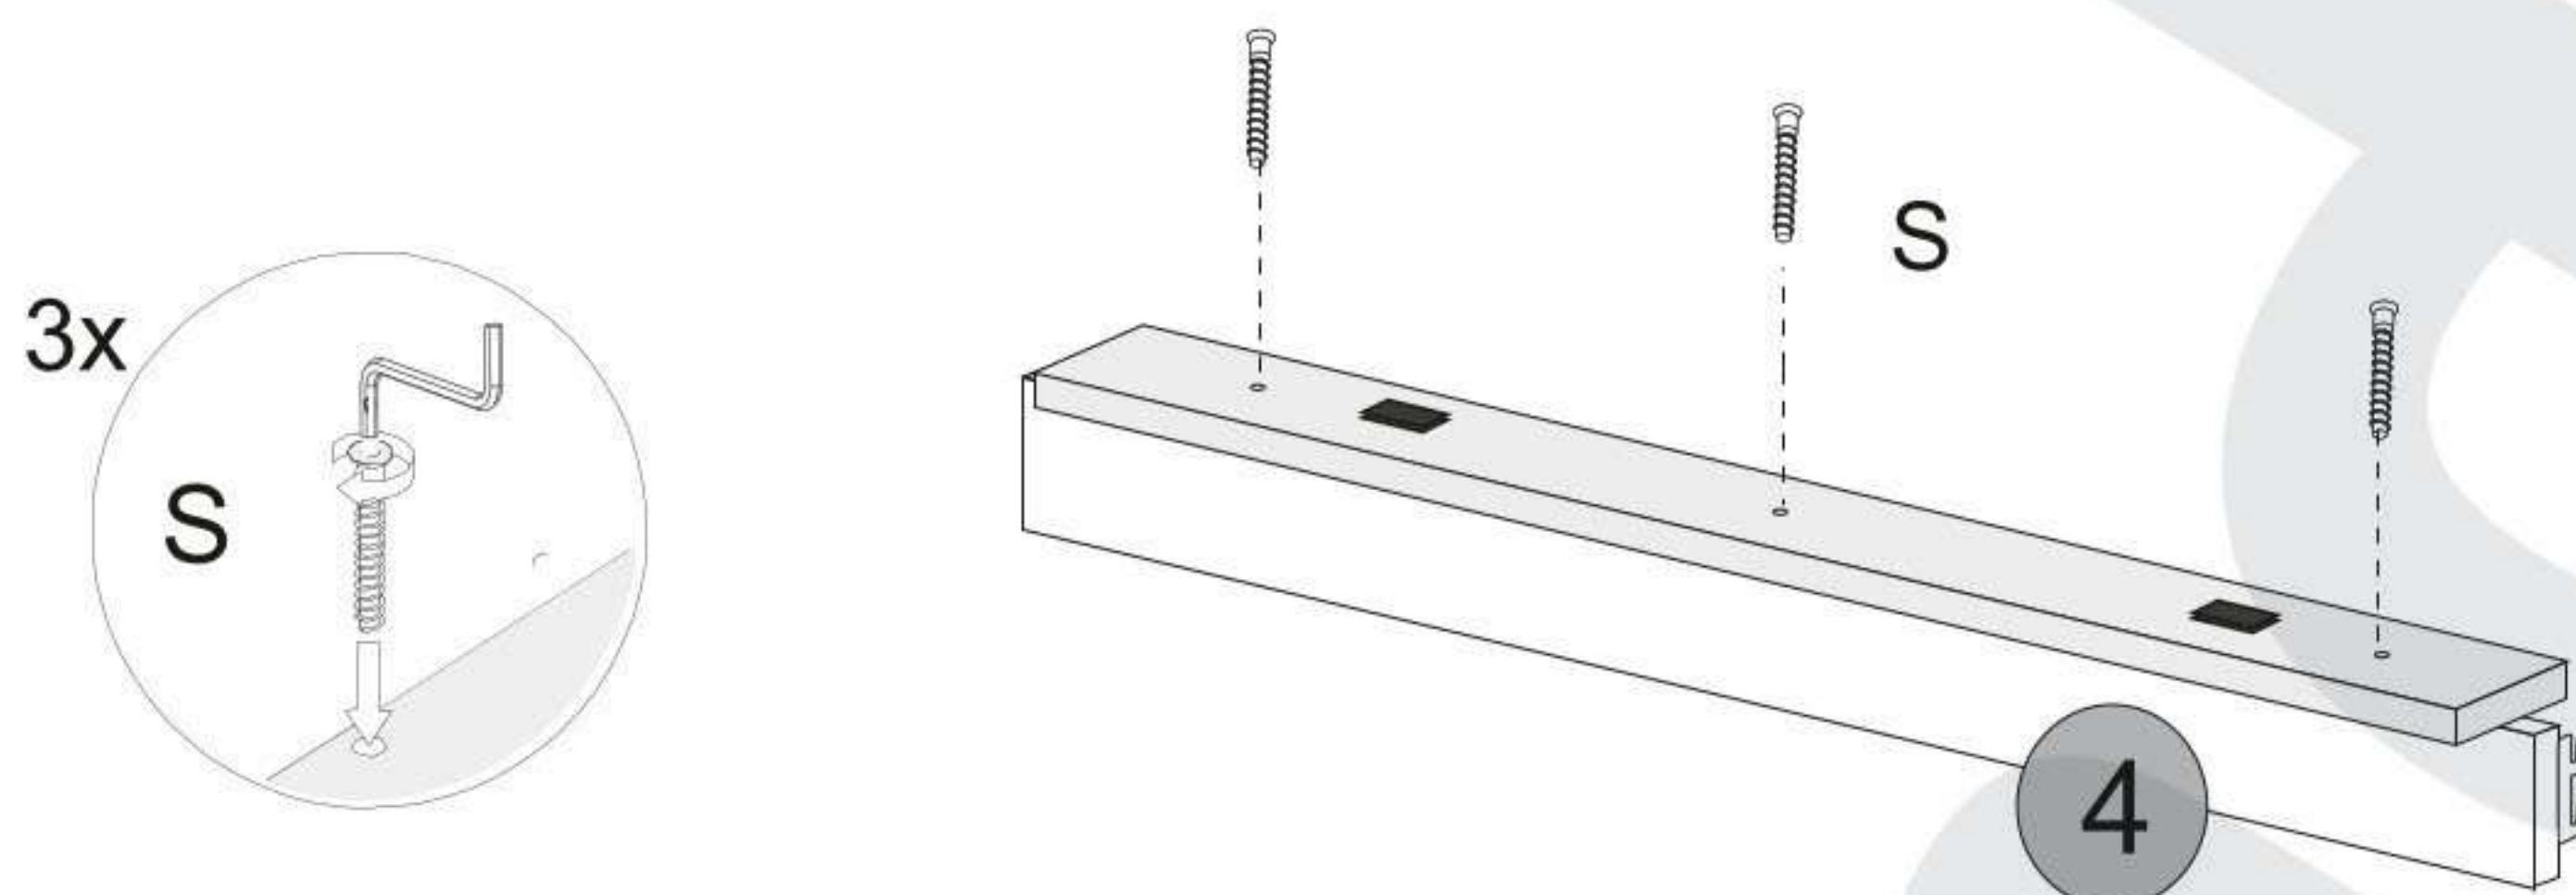

II

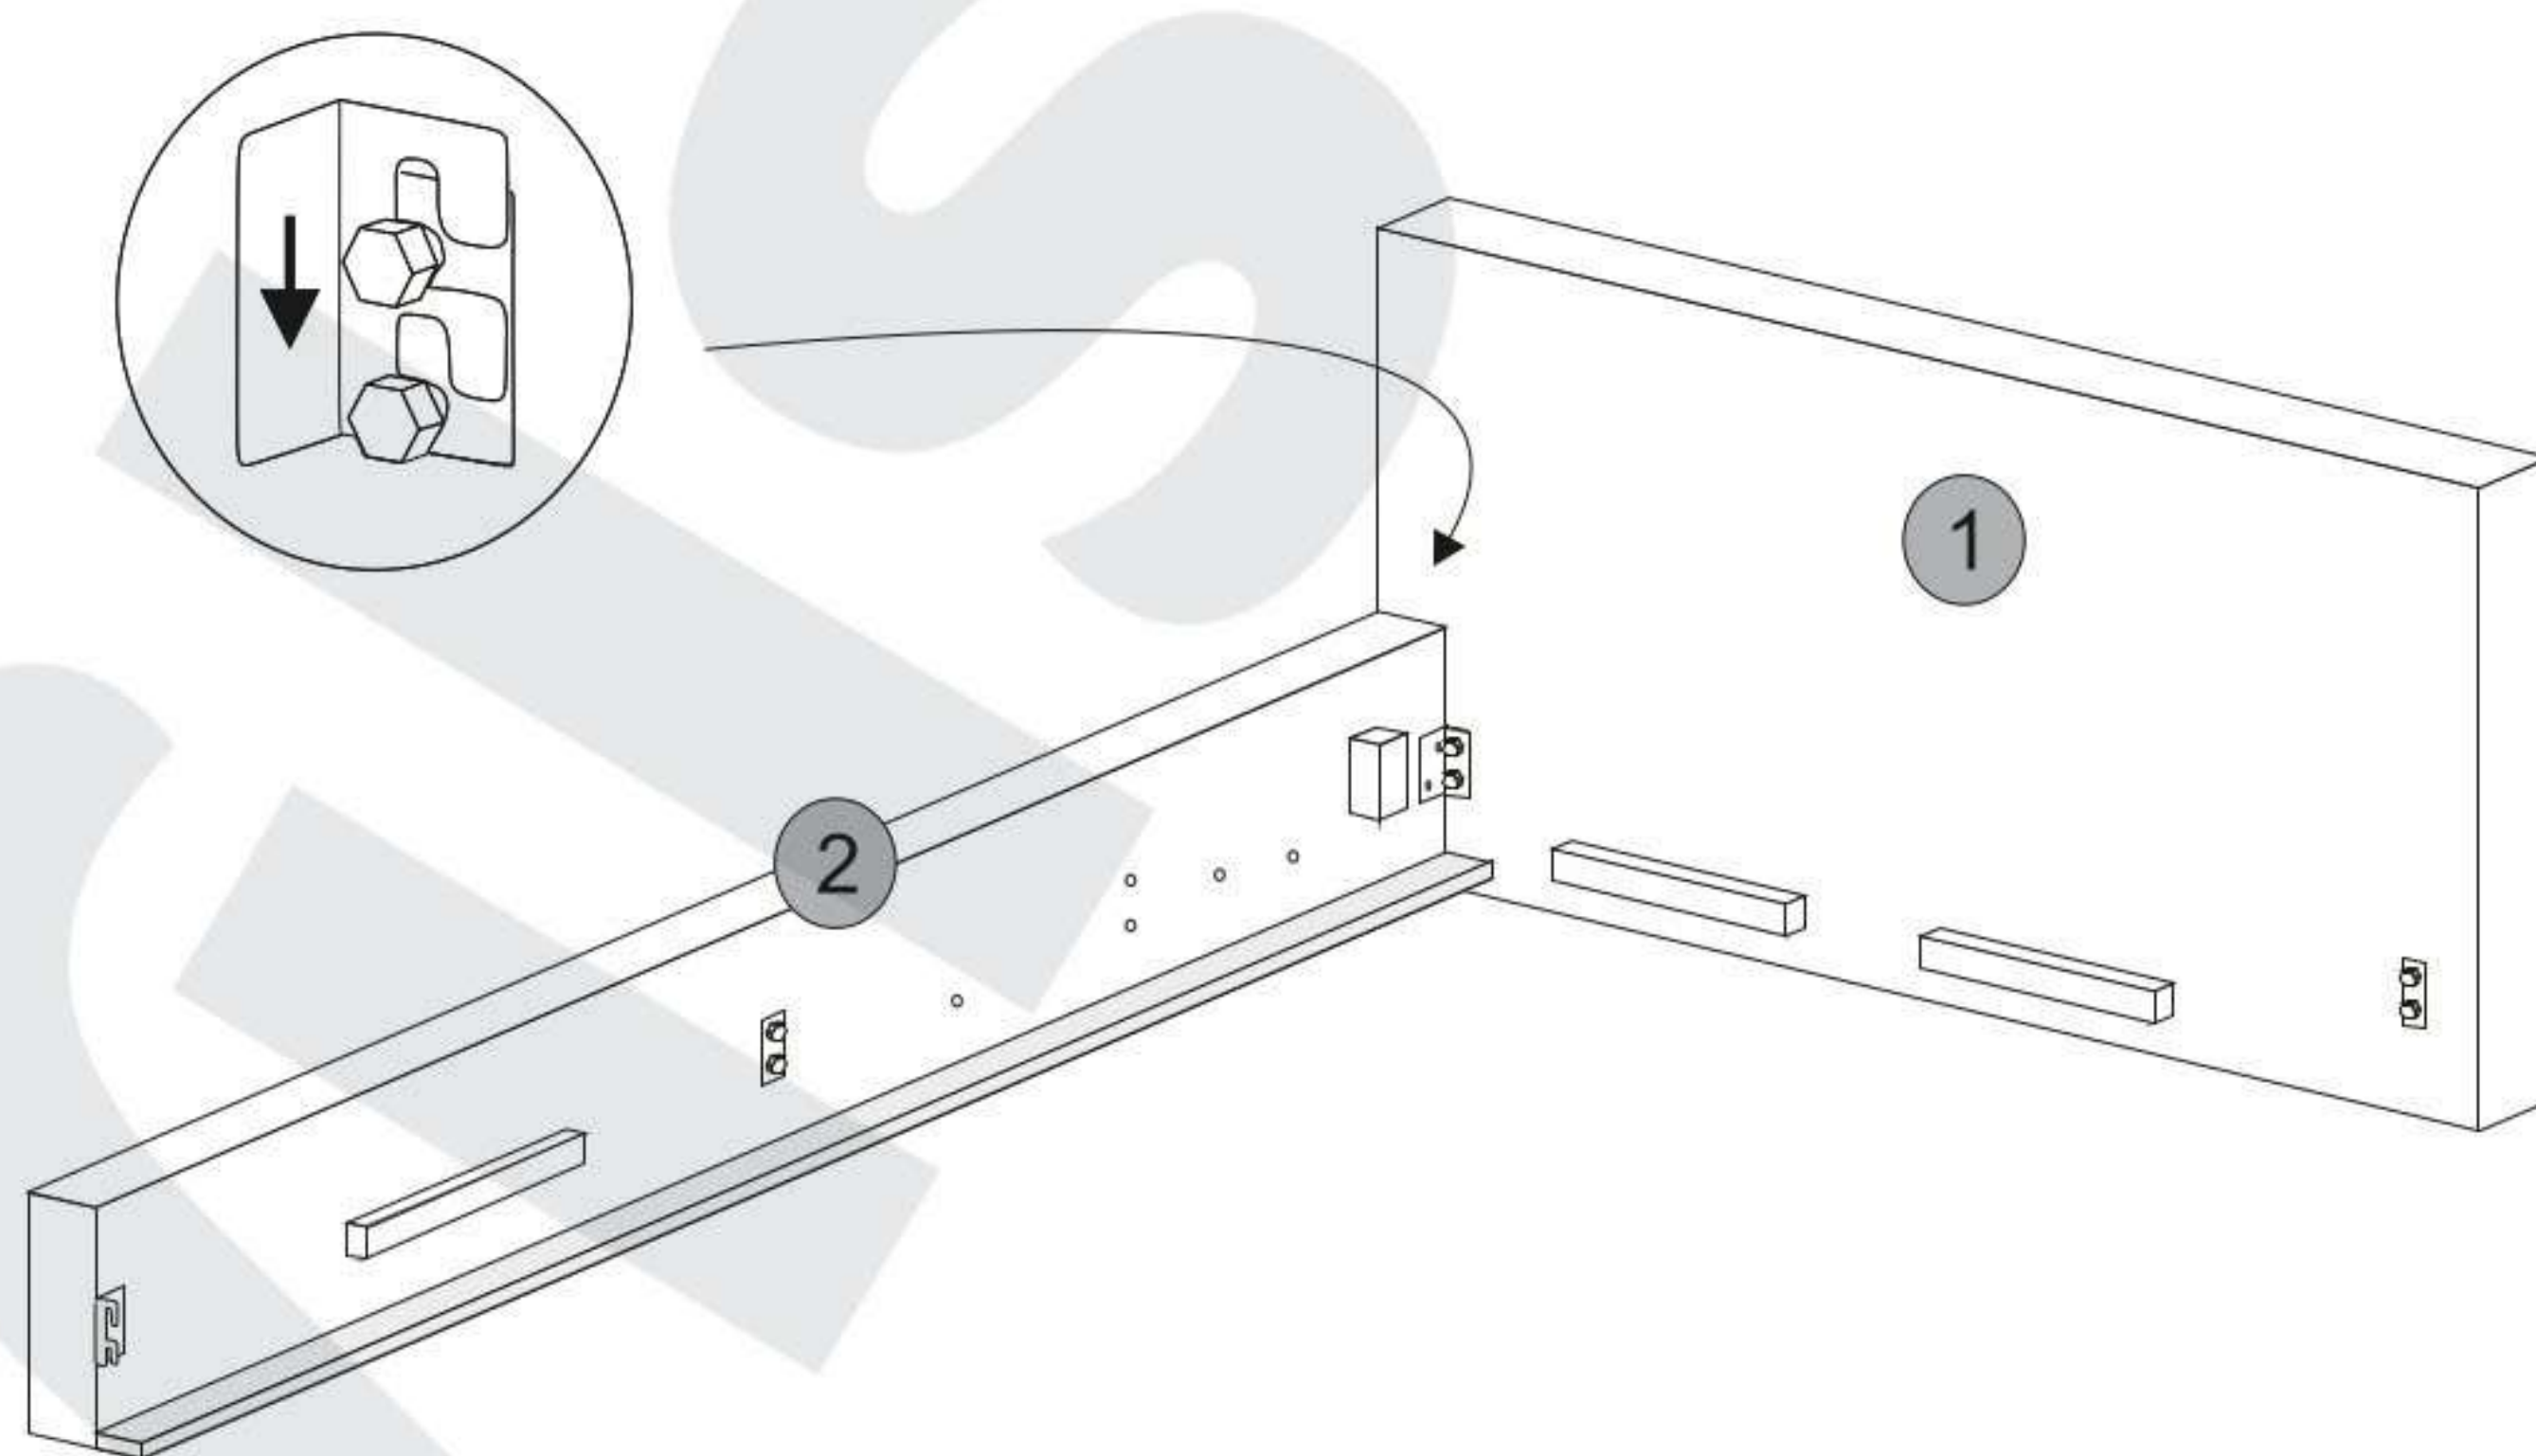

III

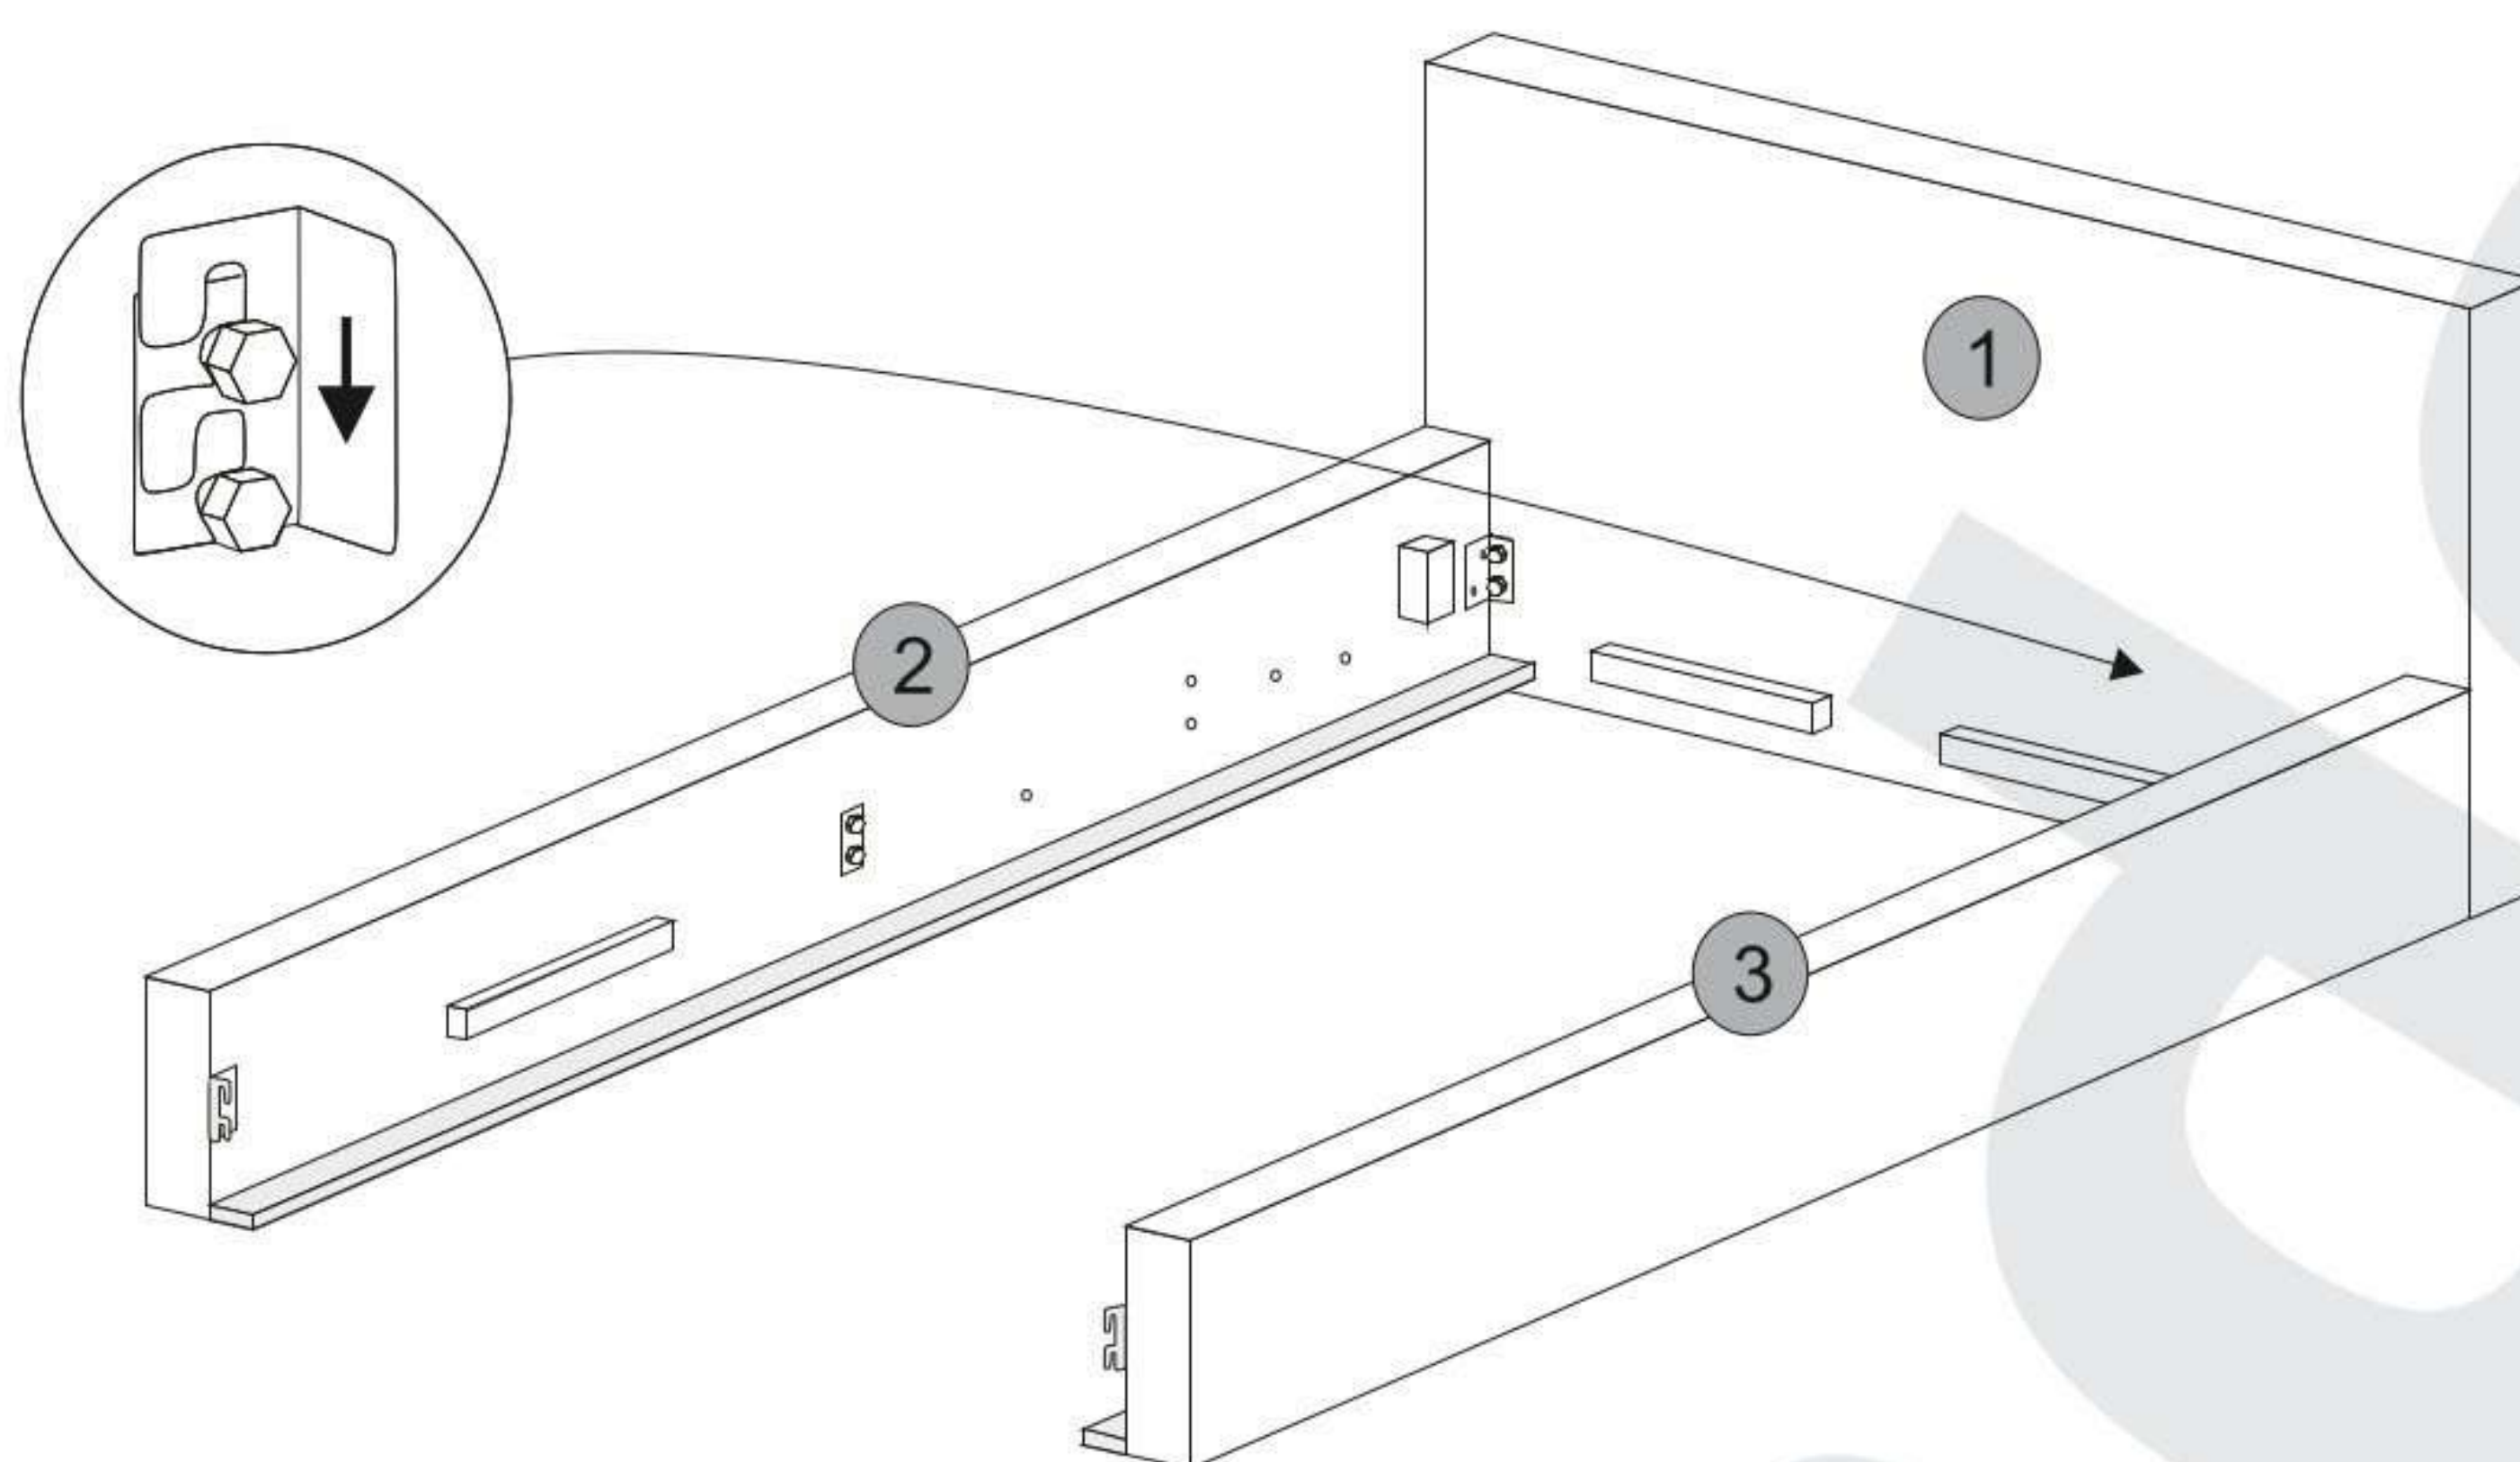

IV

PL: Wykonaj tą czynność ostrożnie.

D: Machen sie ihre arbeit sorgfältig.

GB: Please, do it carefully.


FR: Veuillez effectuer cette opération avec précaution.

SK: Prosím, tento krok vykonajte opatrne.


CZ: Prosím, proveďte tento krok opatrně.

HU: Kérjük, ezt a lépést nagyon óvatosan végezze el!

HR: Molimo vas da pažljivo izvršite ovaj korak.

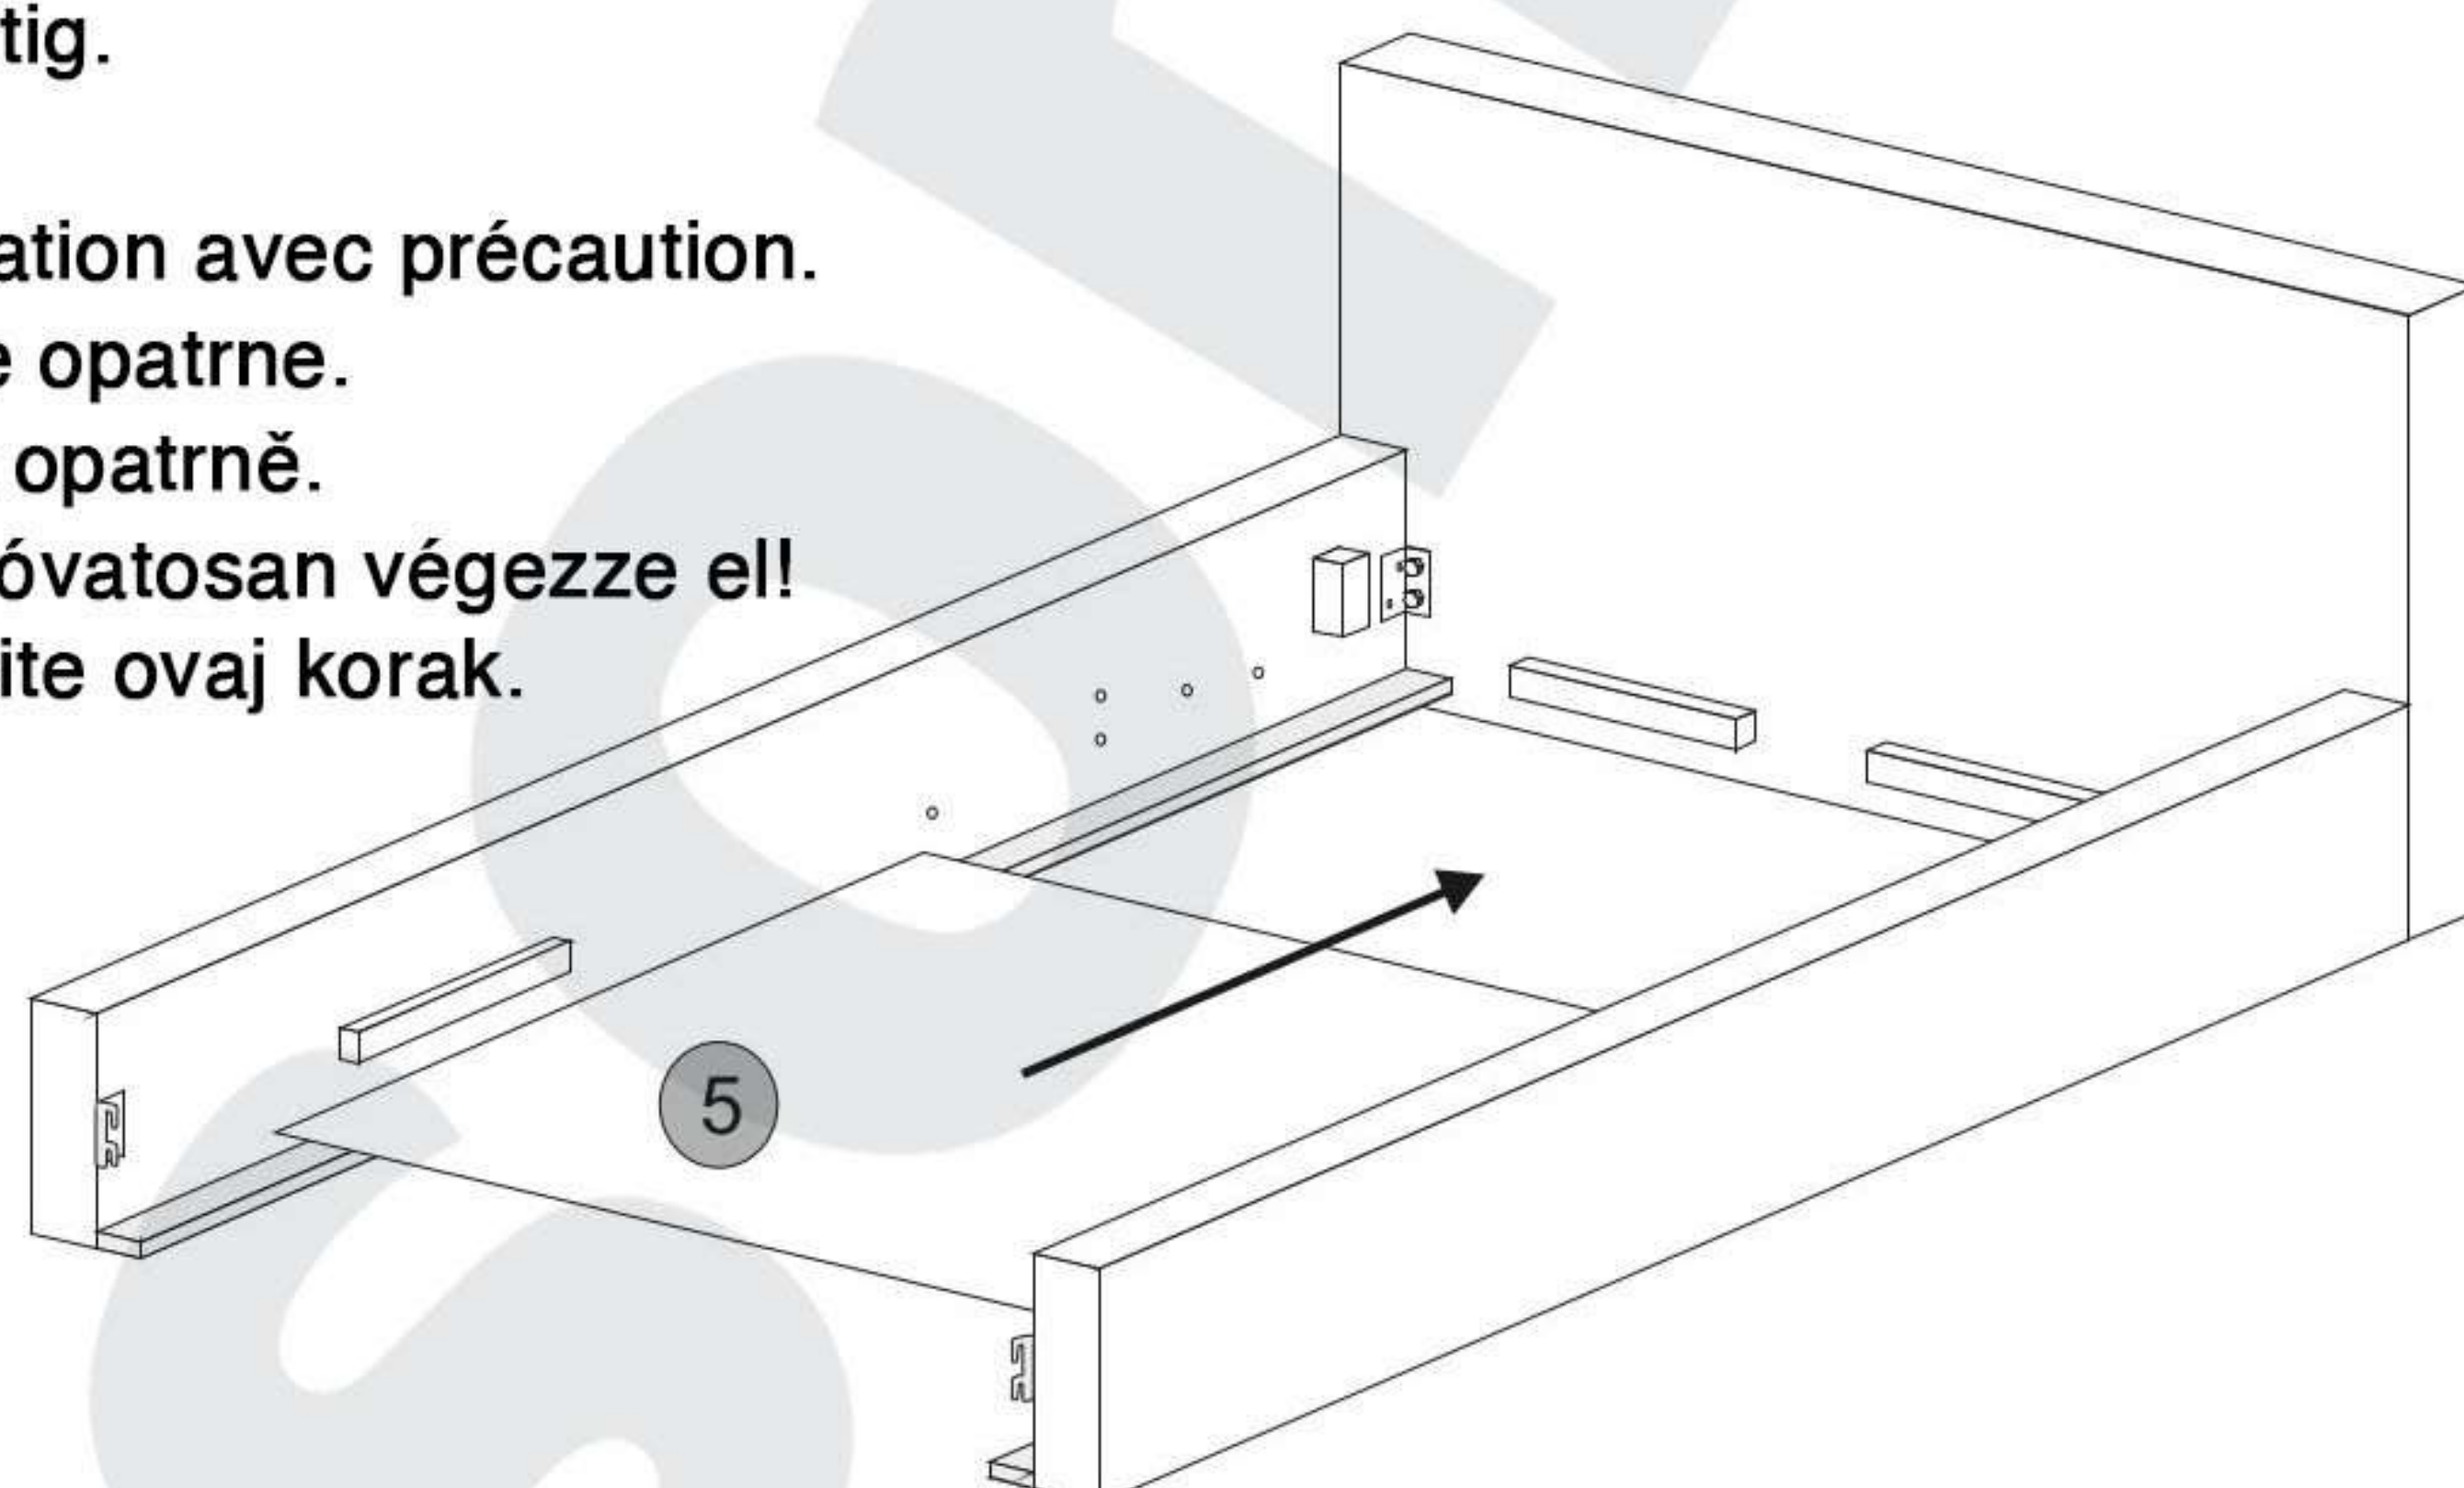

V

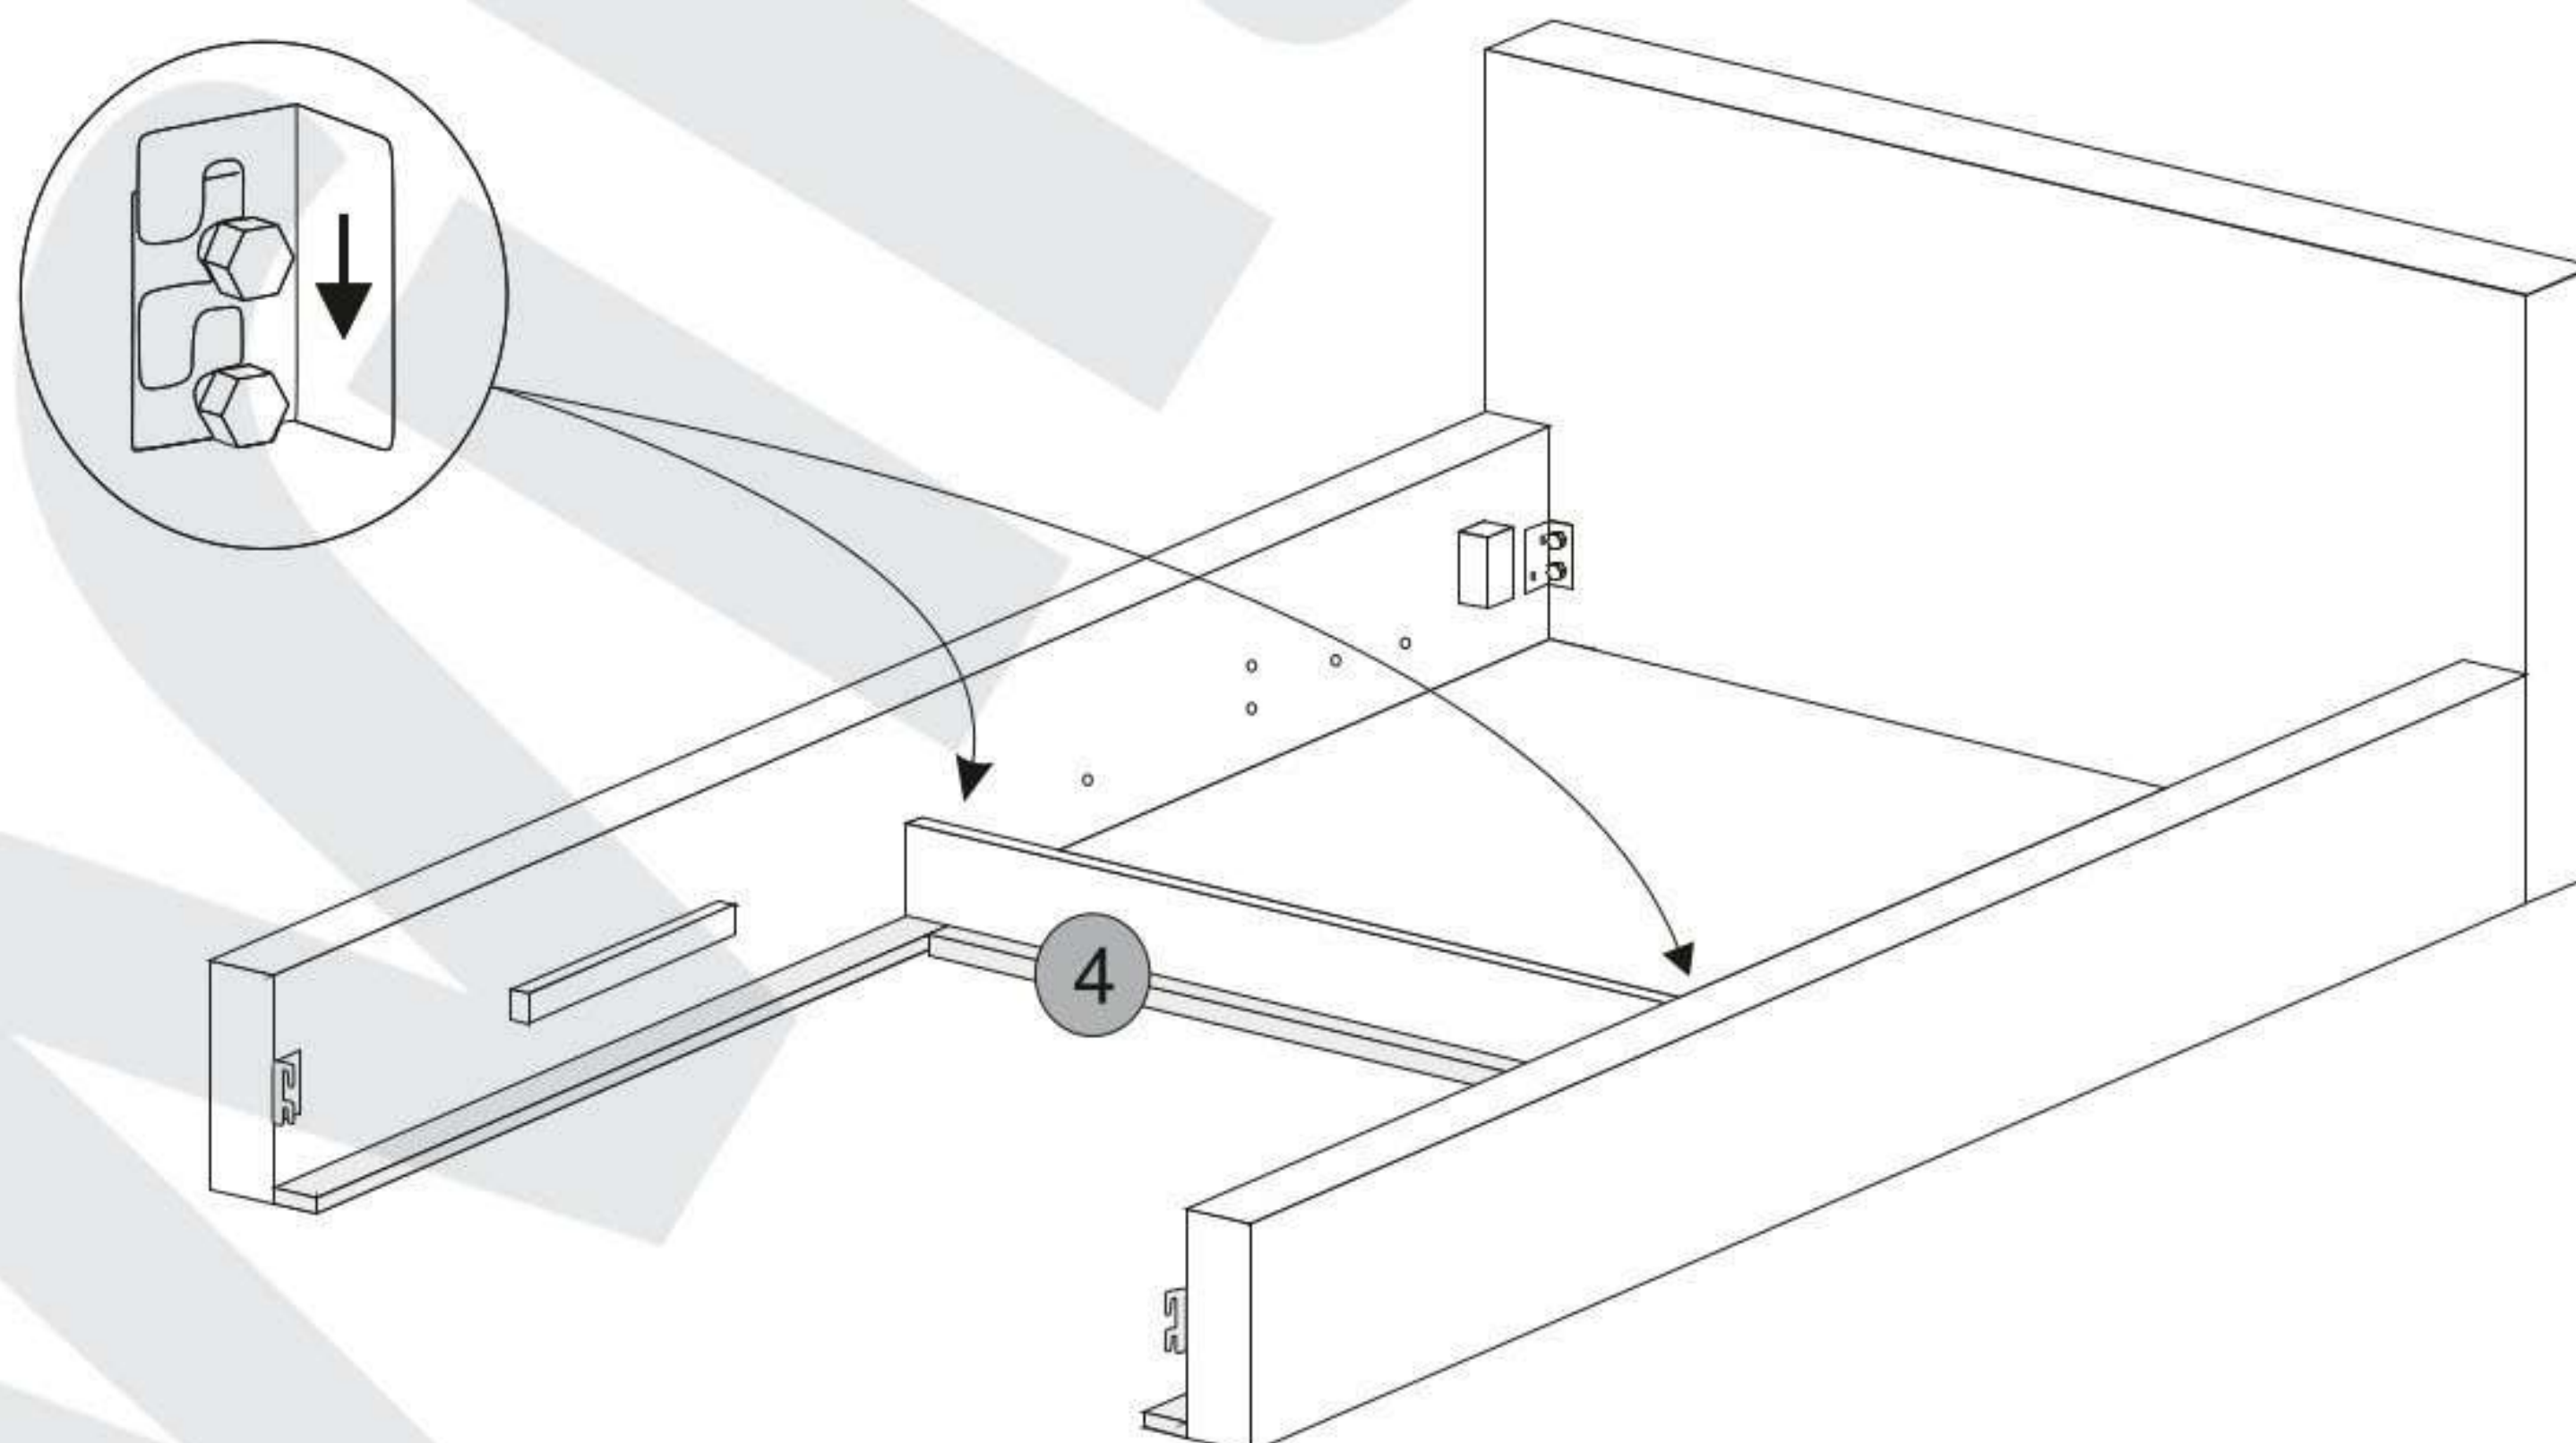

VI

PL: Wykonaj tą czynność ostrożnie.

D: Machen sie ihre arbeit sorgfältig.

GB: Please, do it carefully.


FR: Veuillez effectuer cette opération avec précaution.

SK: Prosím, tento krok vykonajte opatrne.


CZ: Prosím, proveďte tento krok opatrně.

HU: Kérjük, ezt a lépést nagyon óvatosan végezze el!


HR: Molimo vas da pažljivo izvršite ovaj korak.

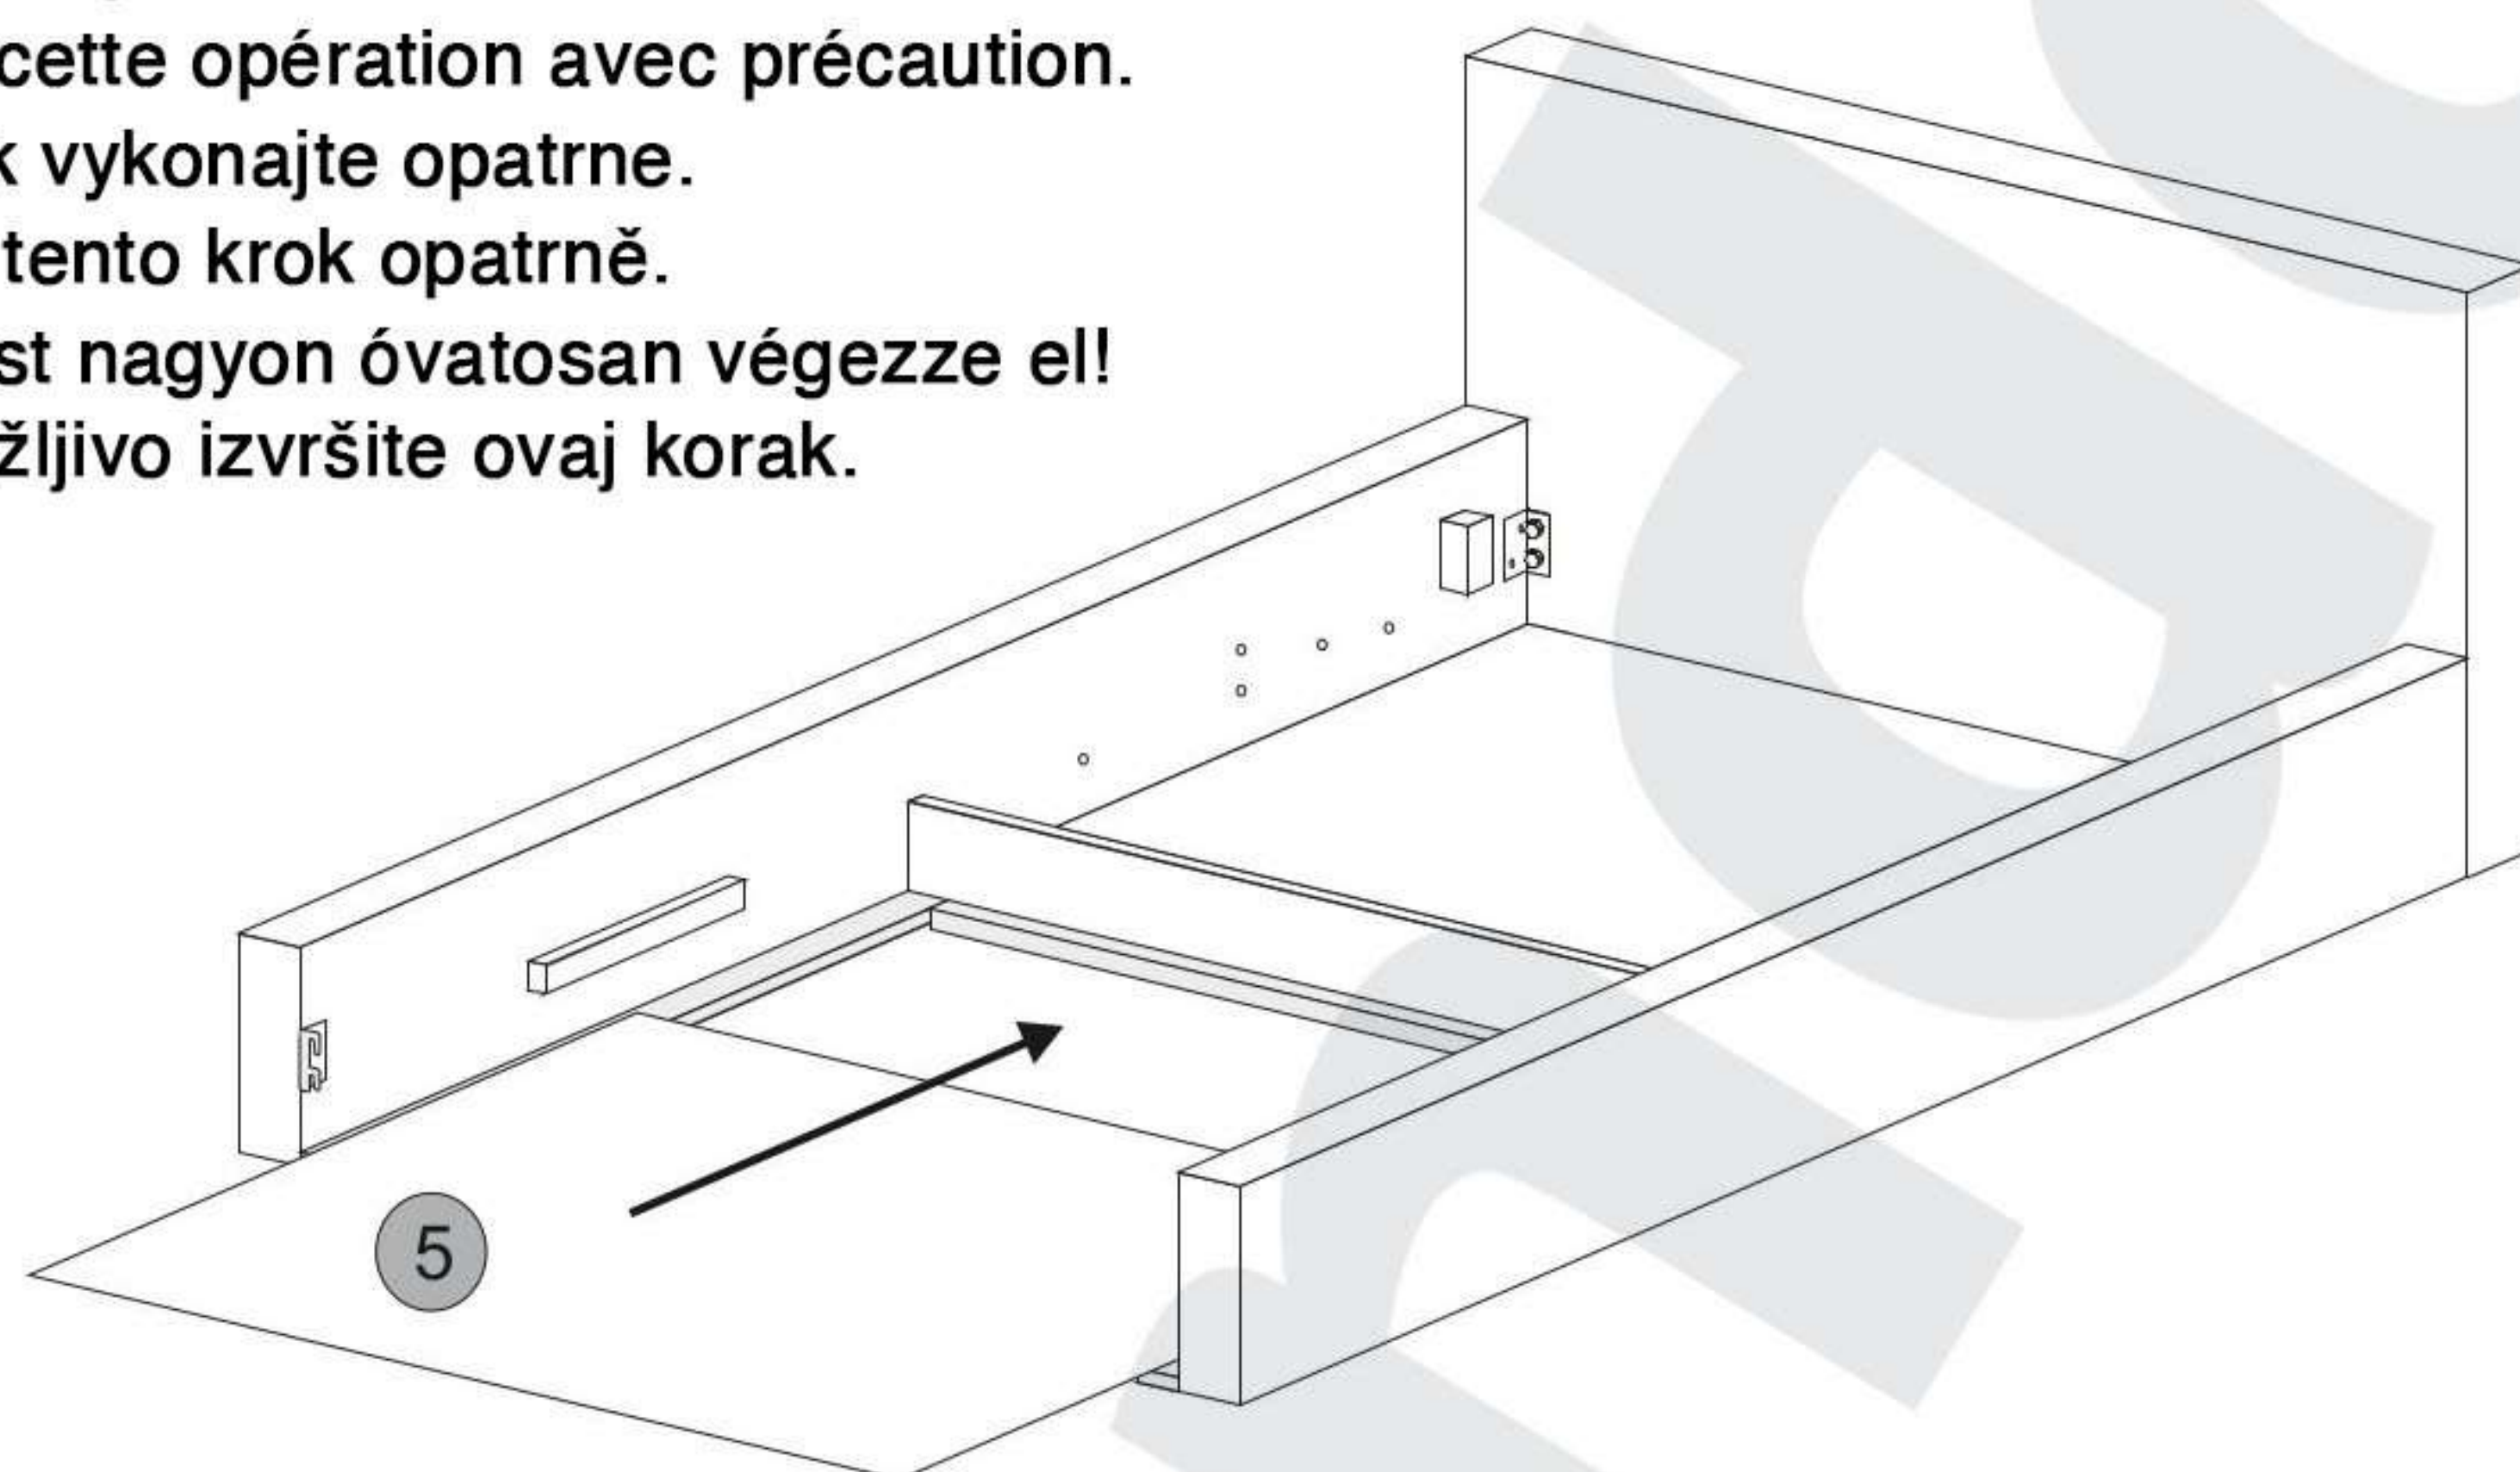

VII

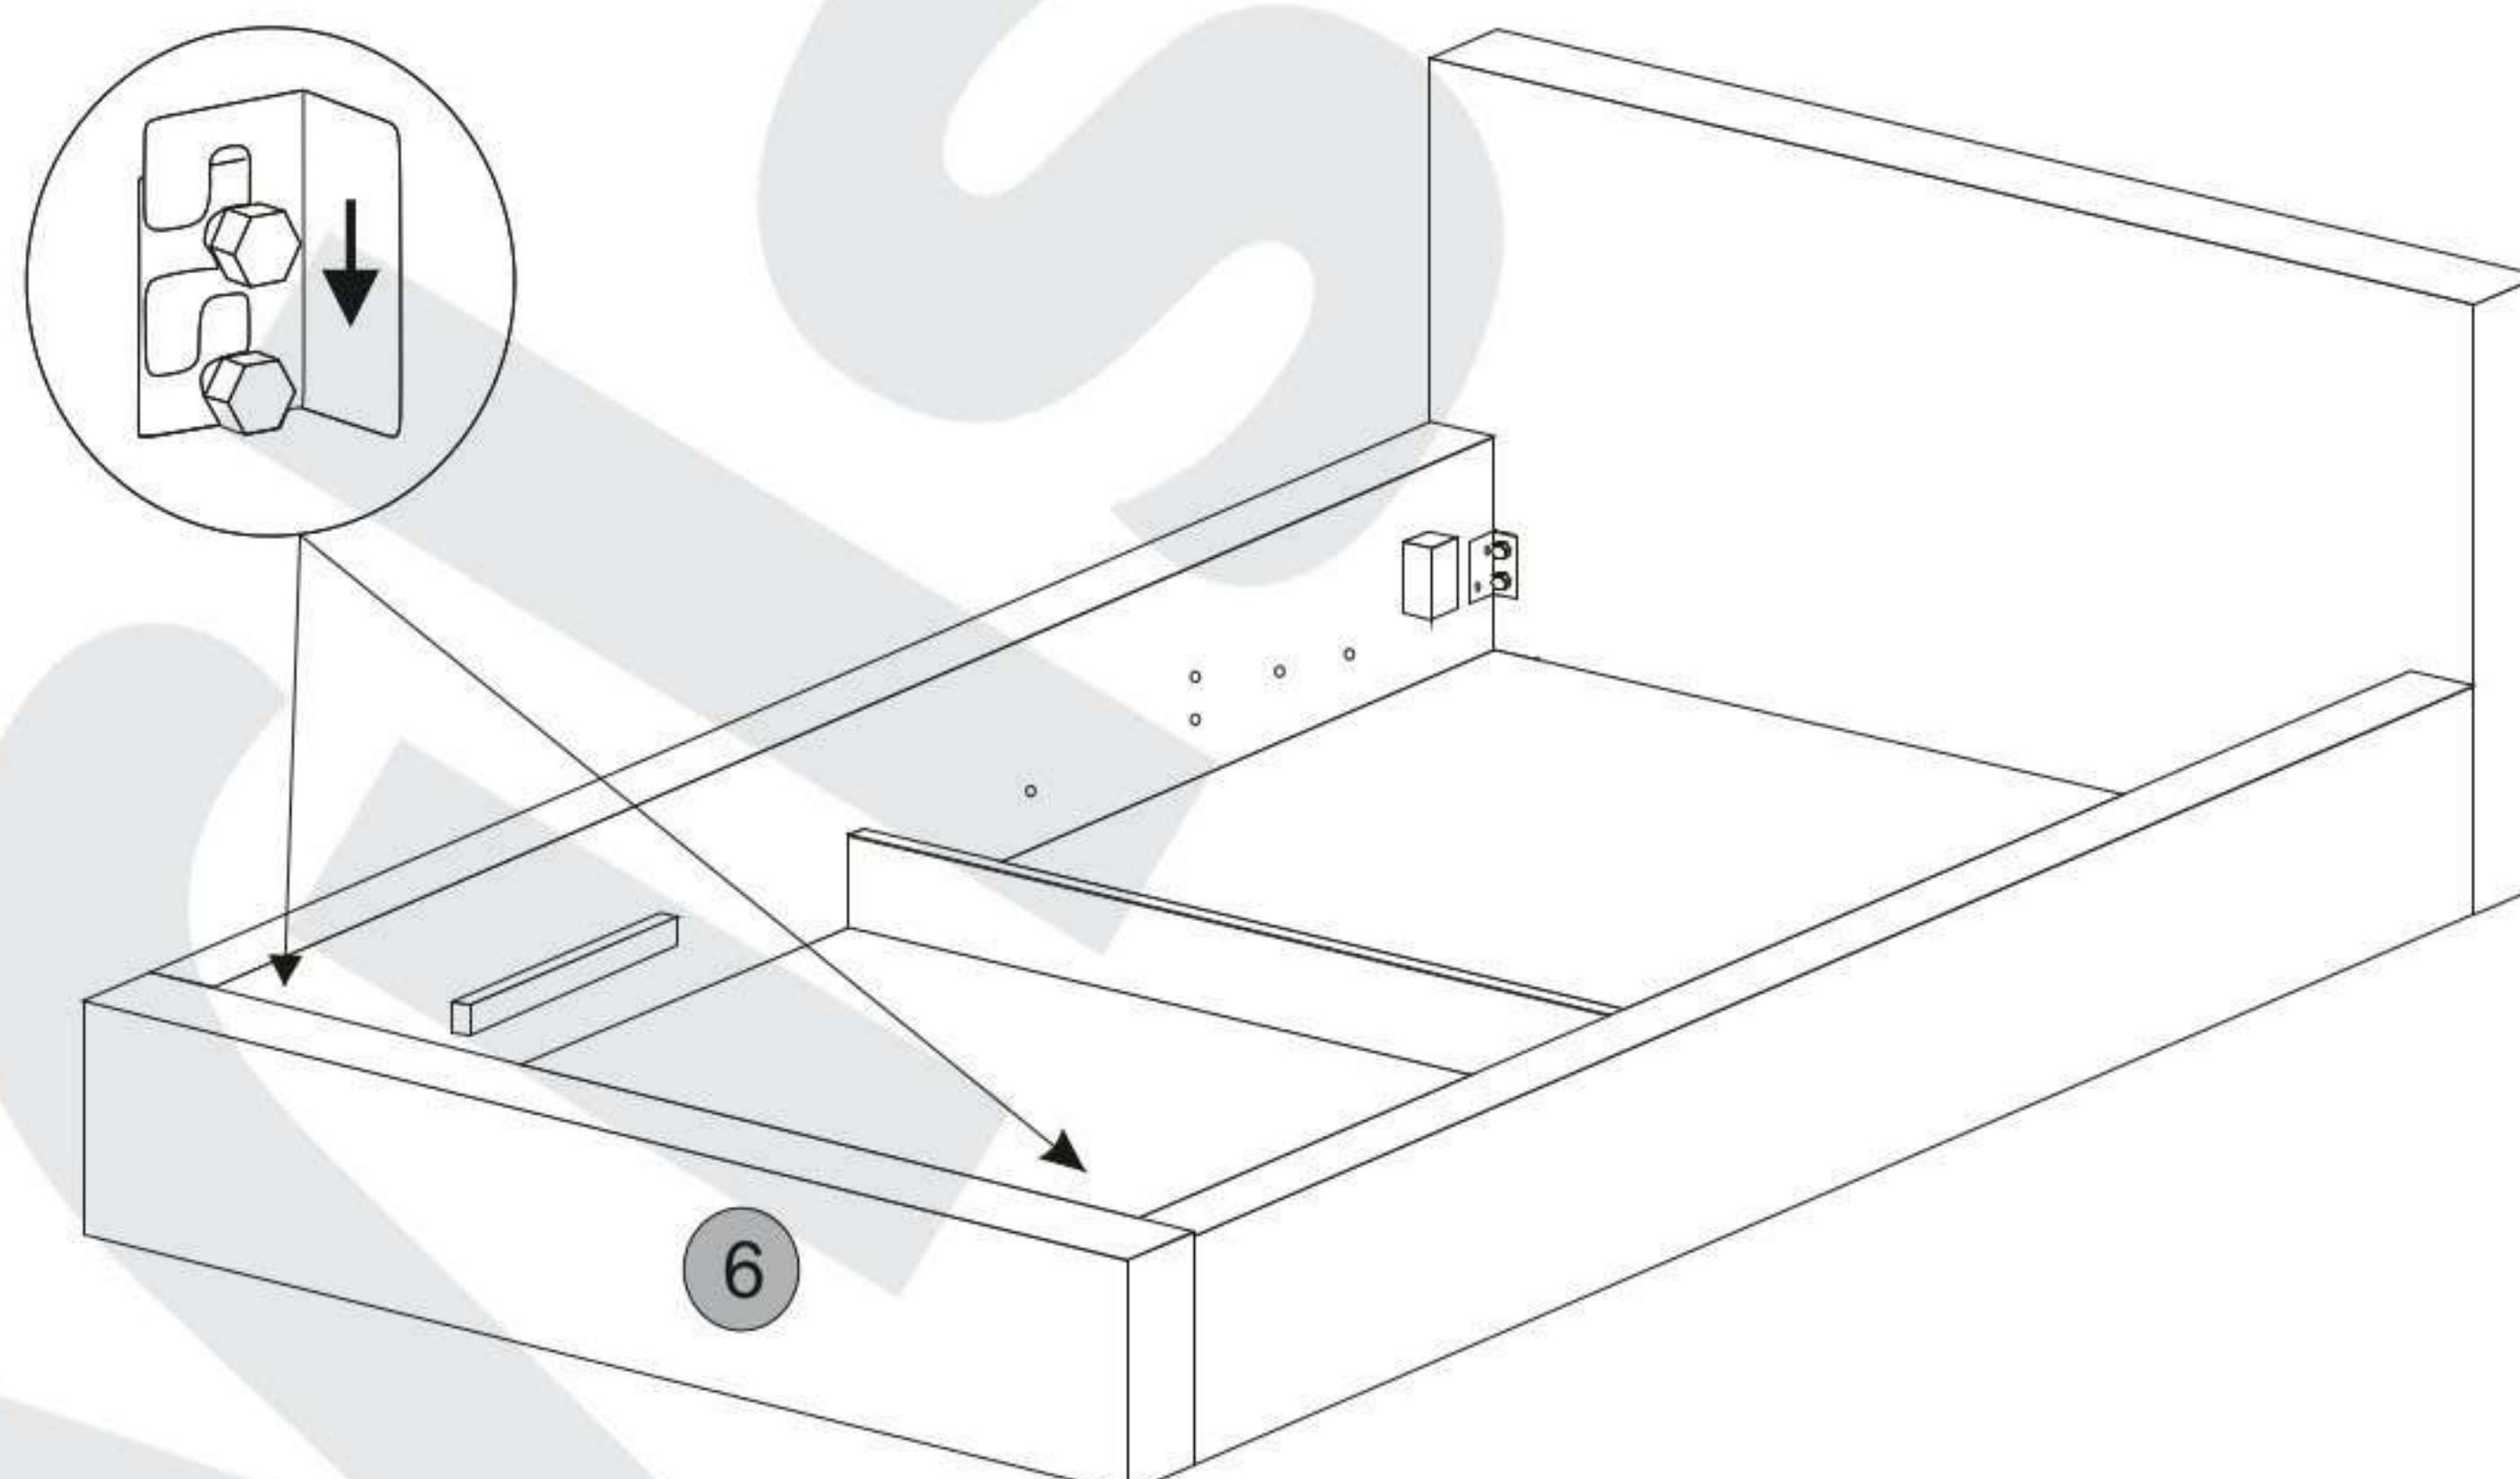

XIII

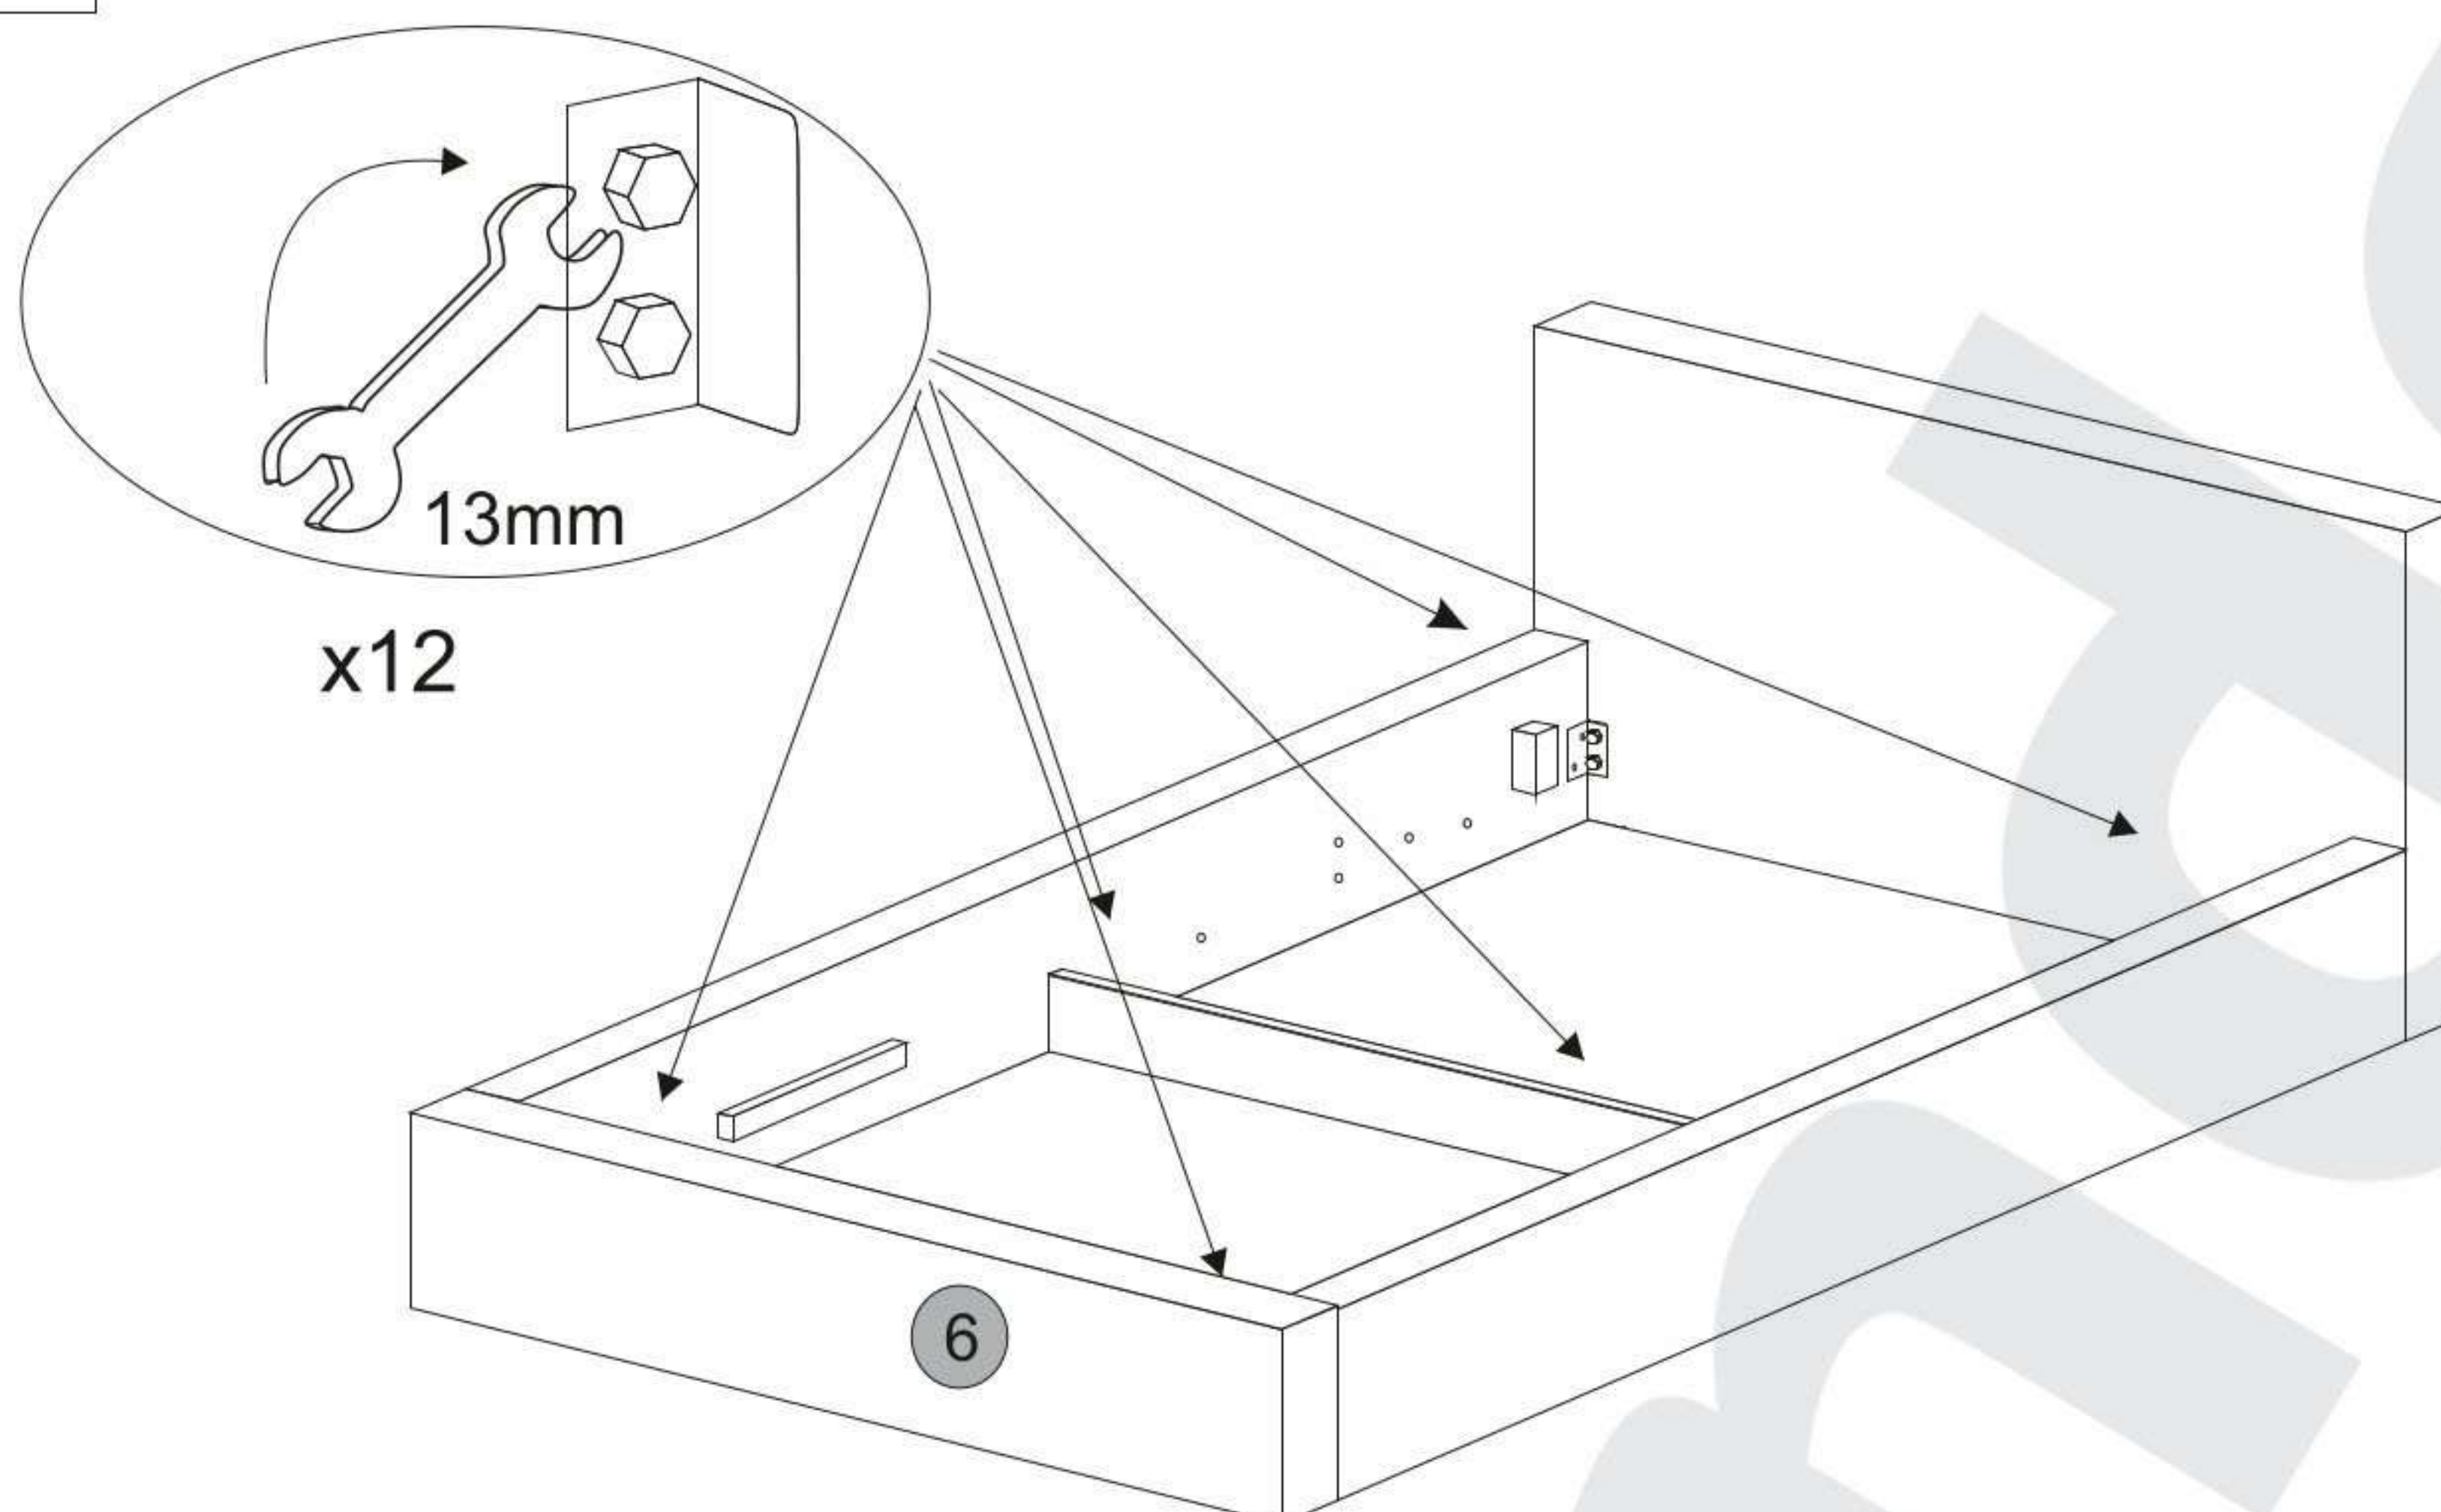


IX



Opcja A / Option A / Možnosť A / Možnost A / A Lehetőség / Opcija A

(stelaż metalowy / holz metall /
metal frame / armature métallique /
kovový rošt / kovový rošt /
fém keret / metalni okvir)

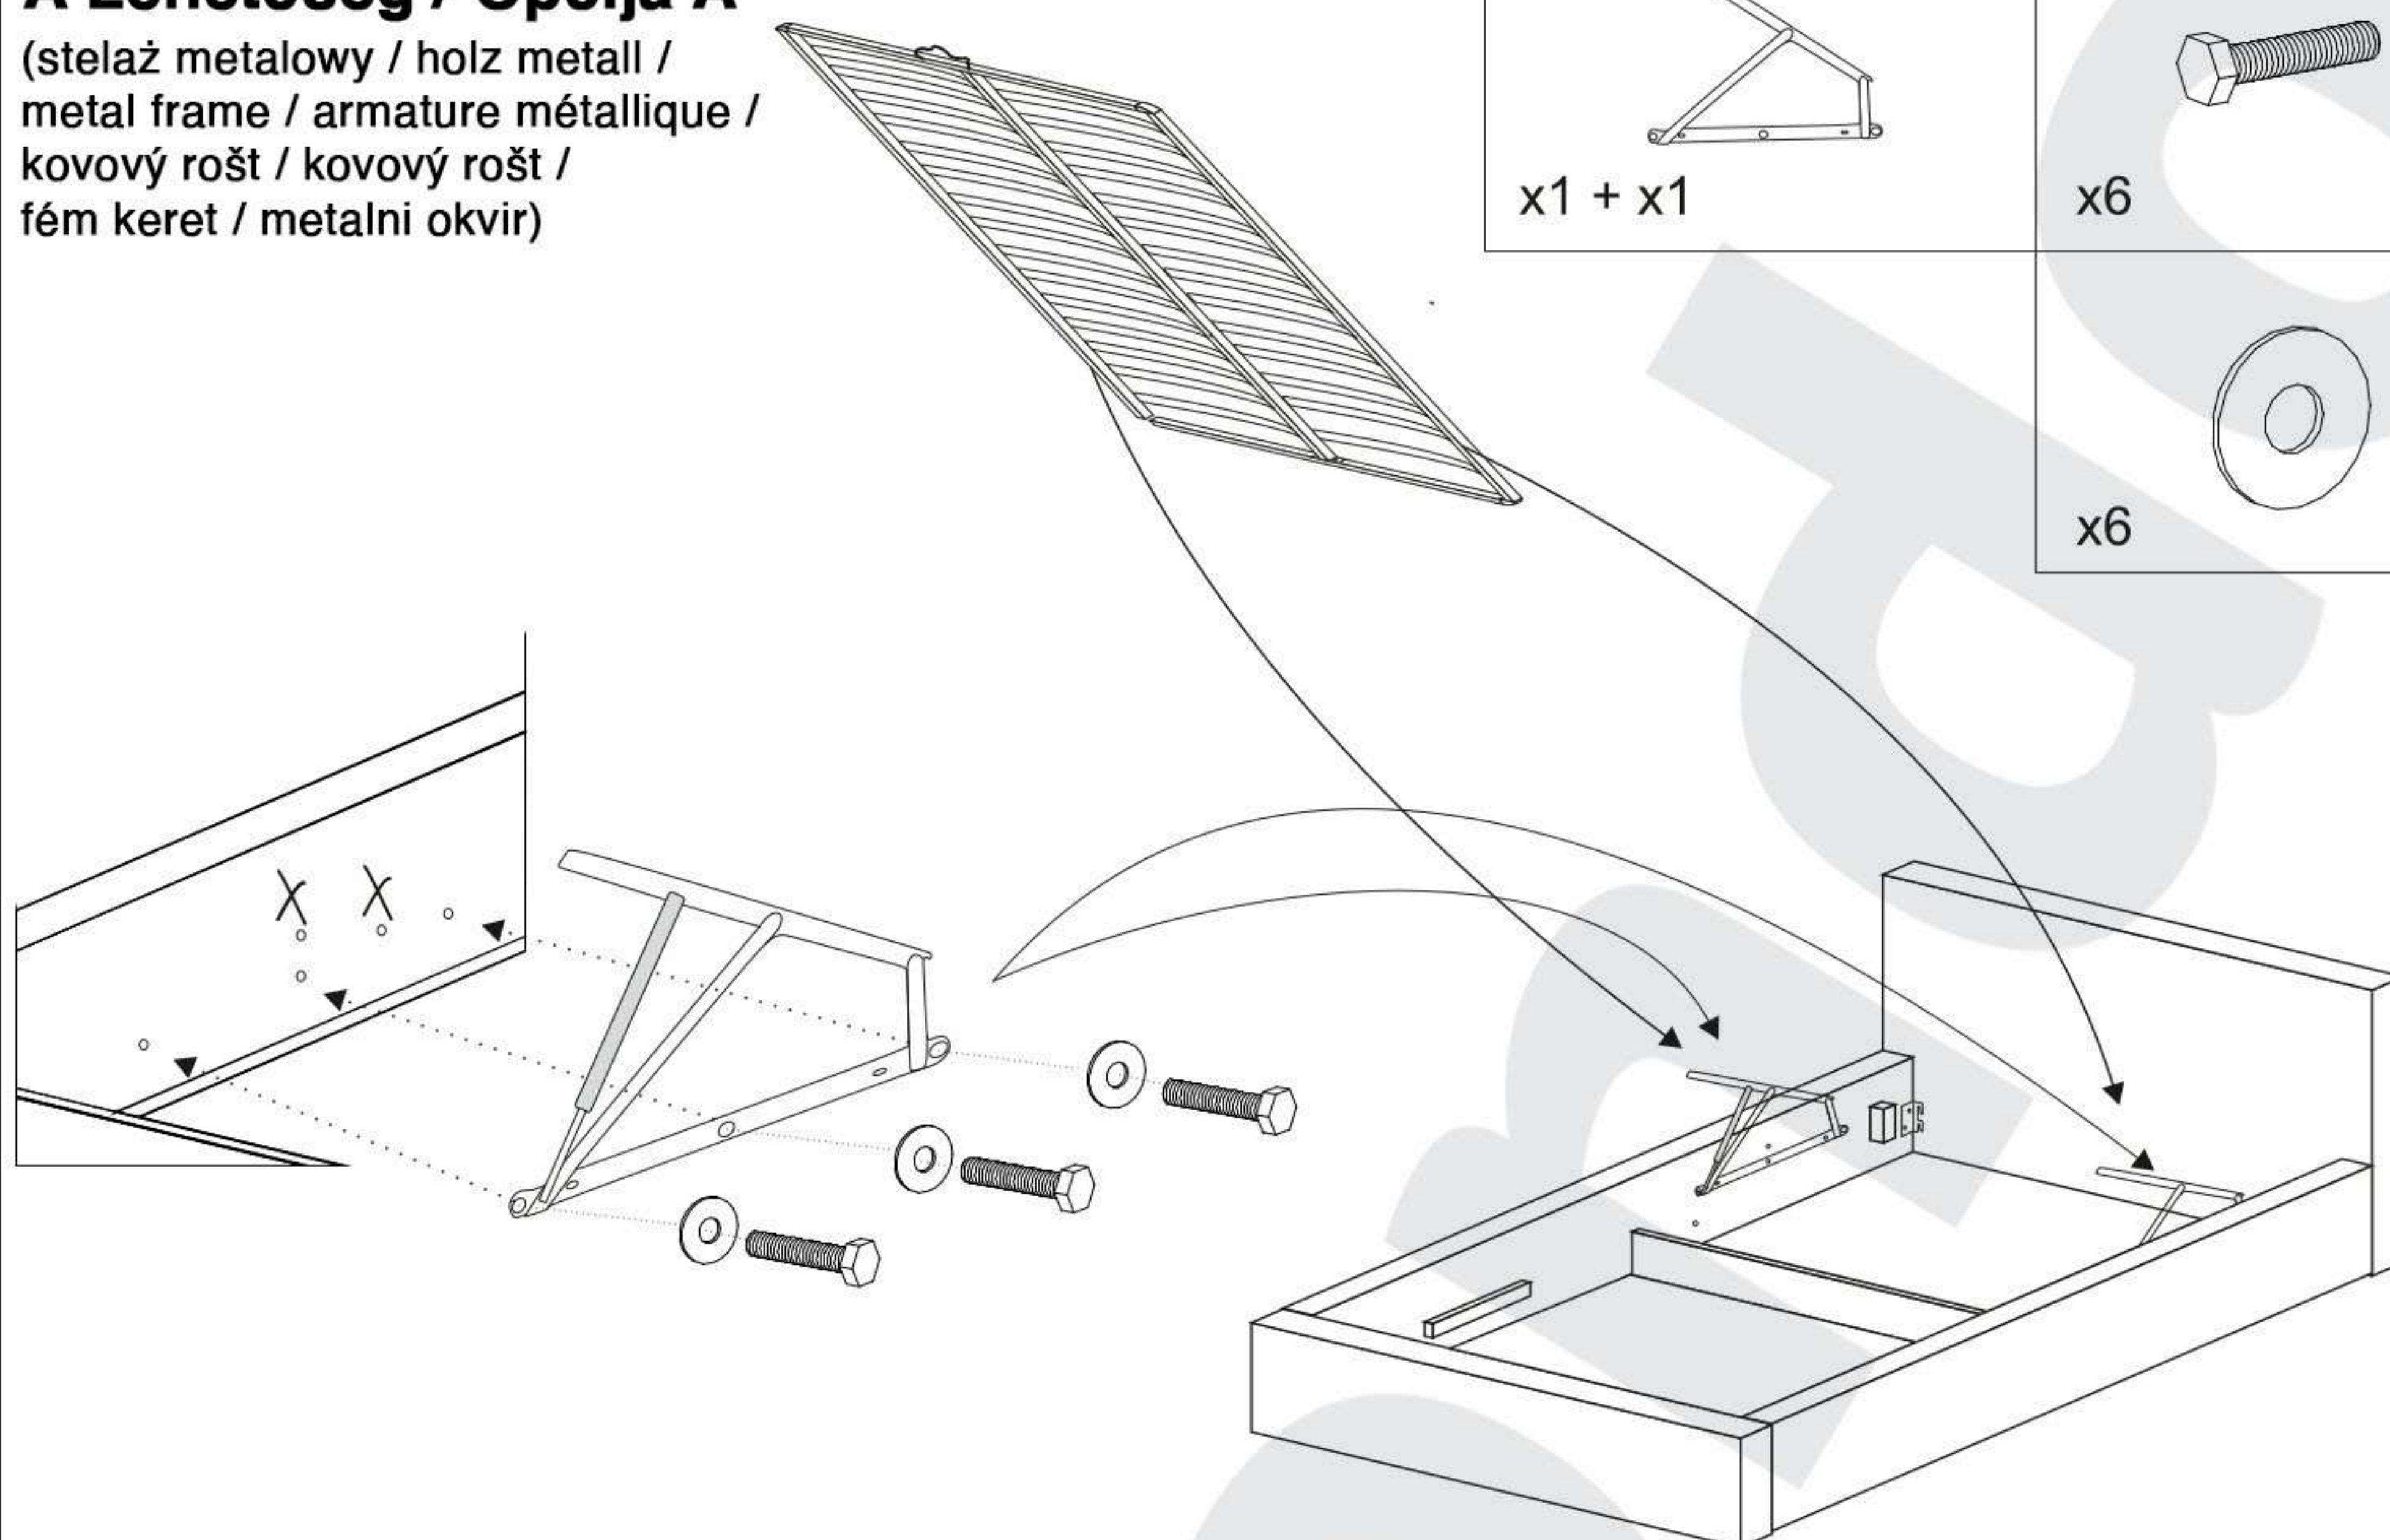

x1 + x1


M6x35

x6

x6

Opcja B / Option B / Možnosť B / Možnost B / B Lehetőség / Opcija B

(stelaż drewniany / holzrehmen / wooden frame / cadre en bois /
drevený rošt / dřevěný rošt / Fa keret / drveni okvir)

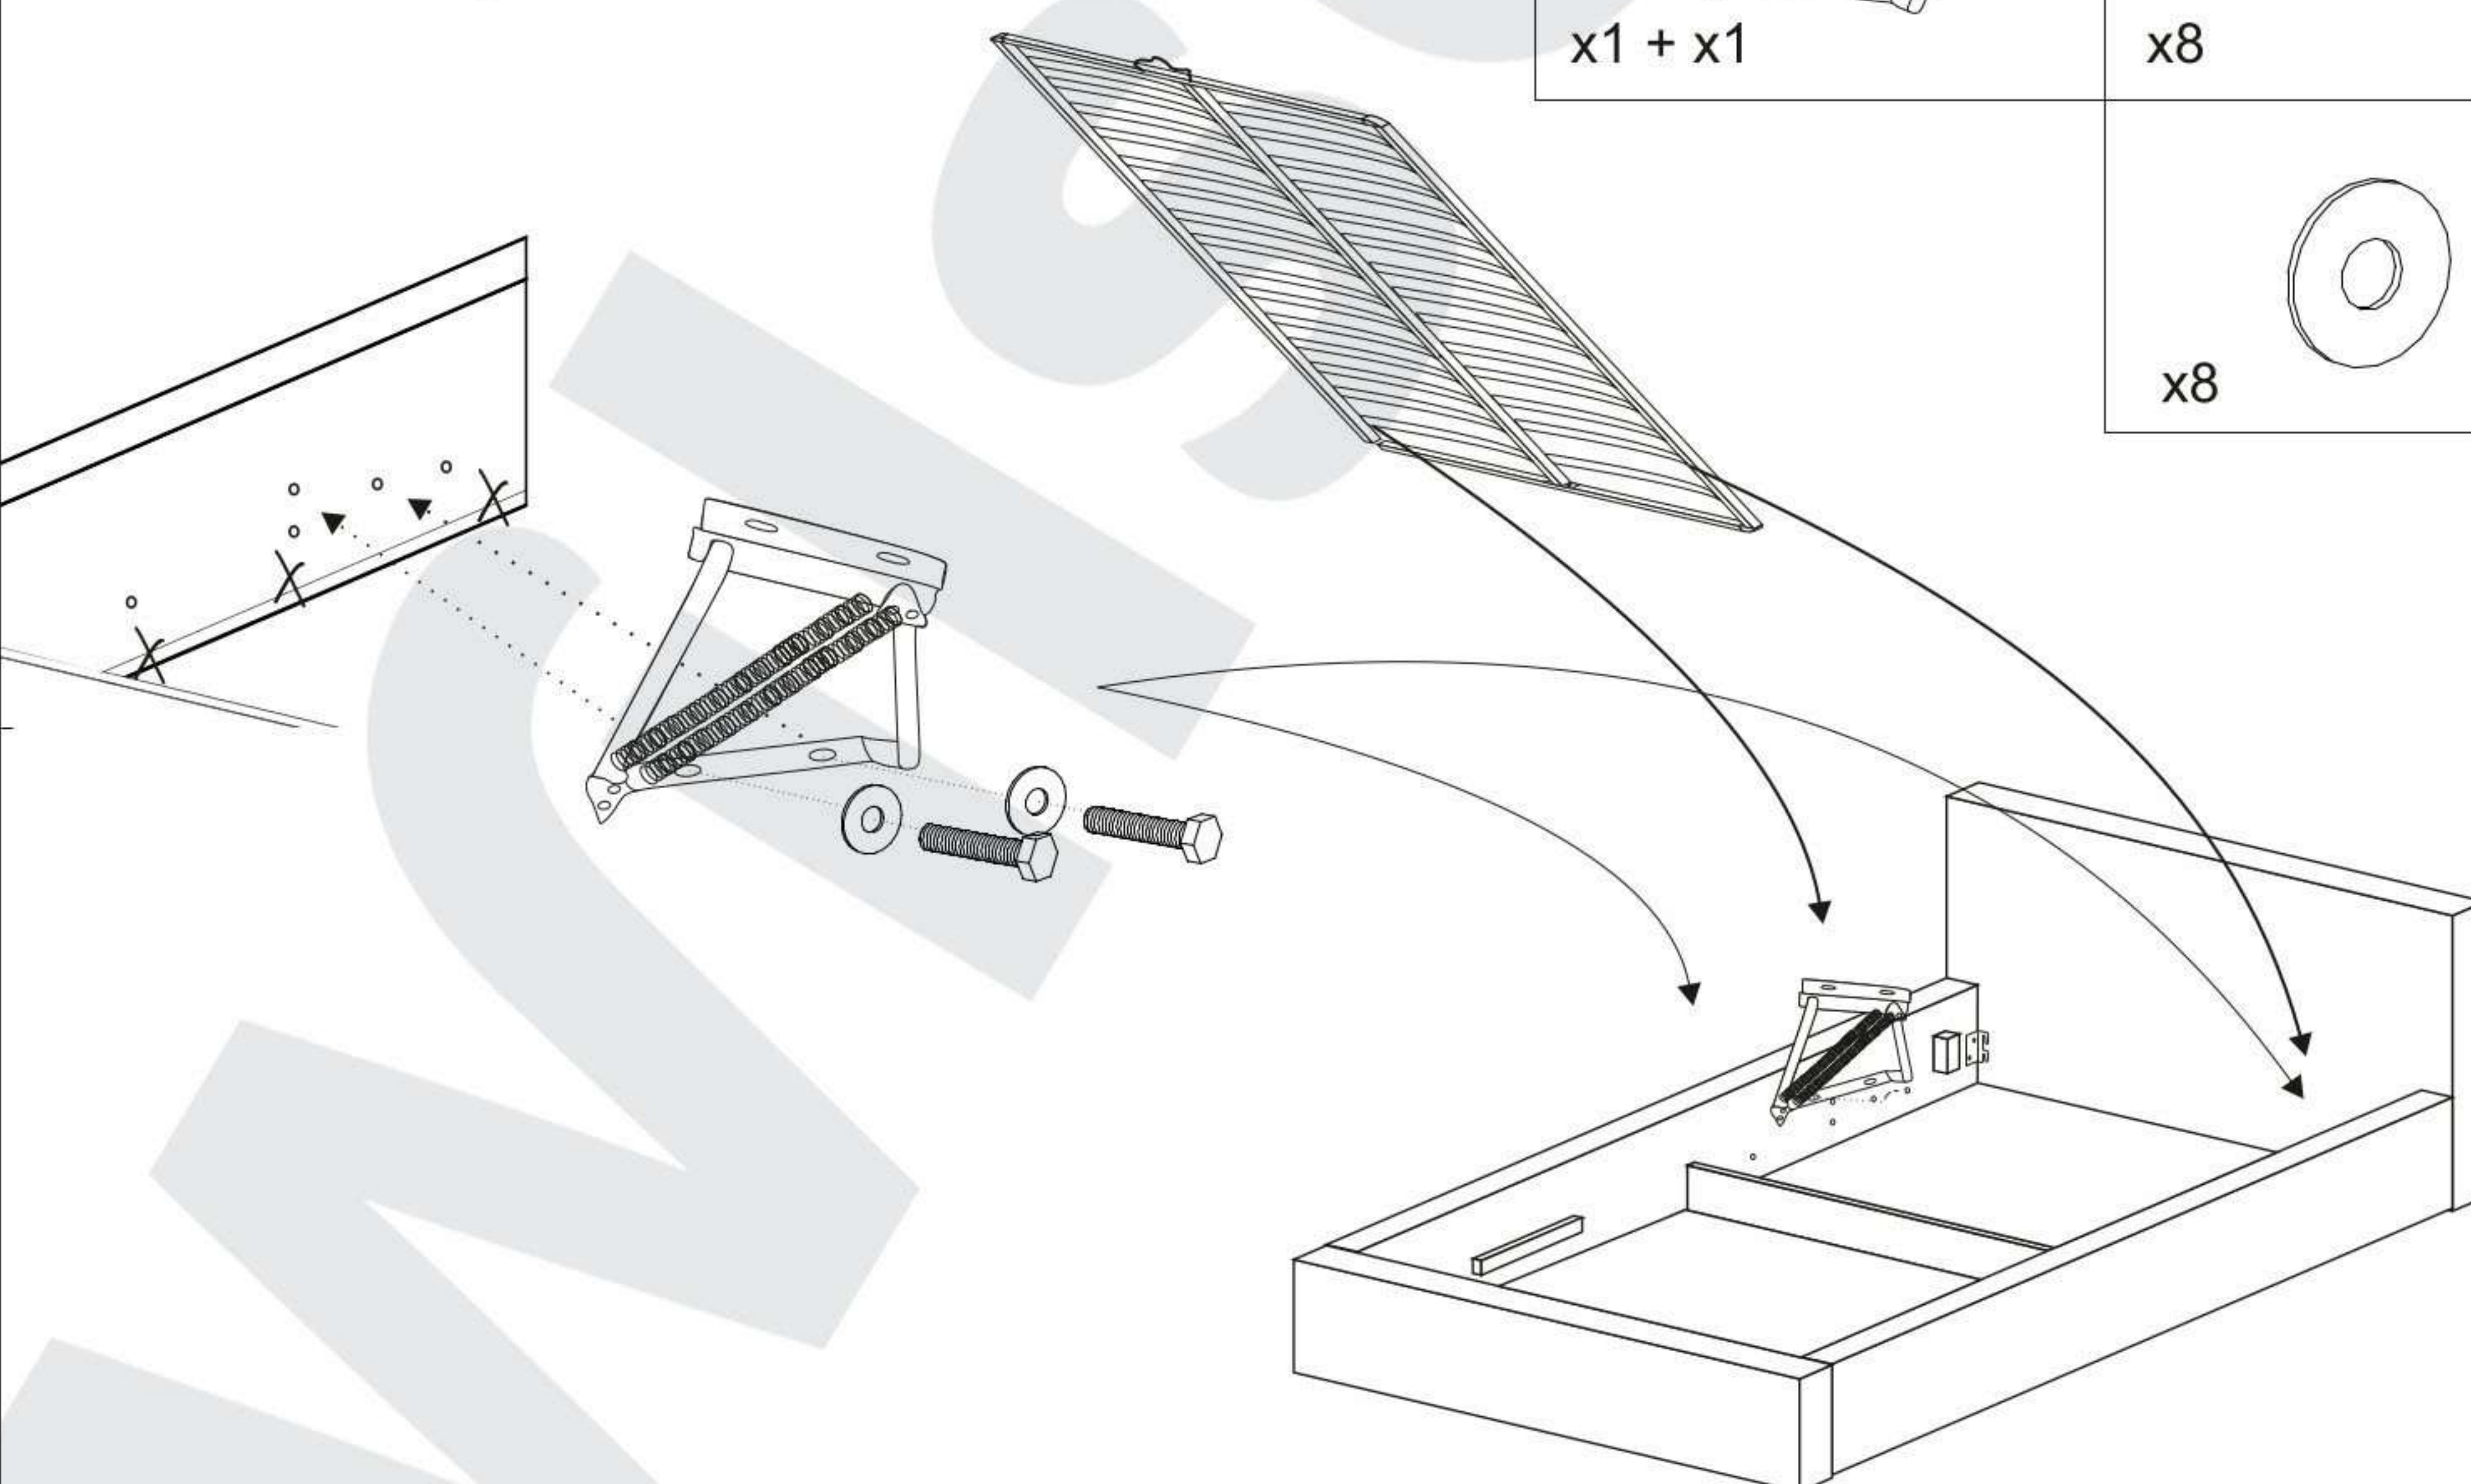

x1 + x1

M6x35

x8

x8