

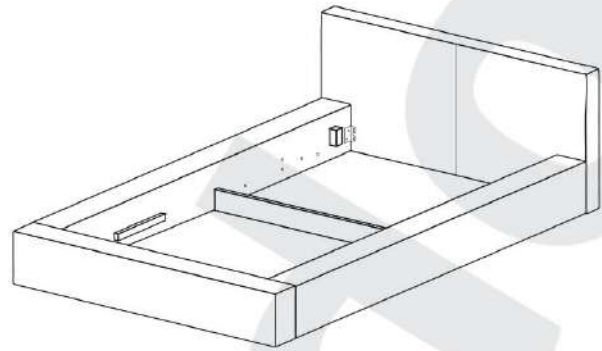


FOGO


PL: Instrukcja montażu - łóżko
D: Aufbauanleitung - bett
GB: Assembly instruction - bed
FR: Instructions de montage - lit
SK: Návod na montáž - posteľ
CZ: Návod k montáži - postel
HU: Szerelési útmutató - ágy
HR: Upute za montažu - krevet

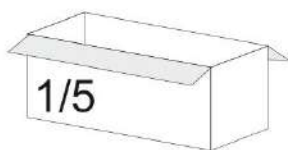

13 mm
10 mm

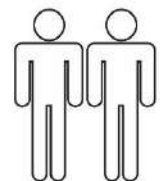


1/5

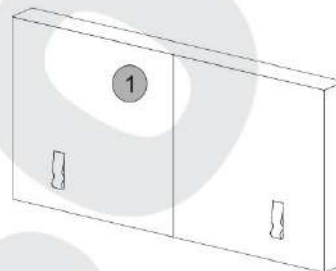


1

x1

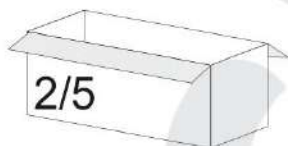


2/5

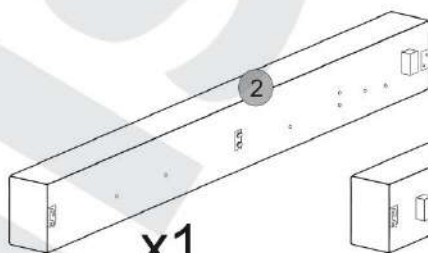

2

x1

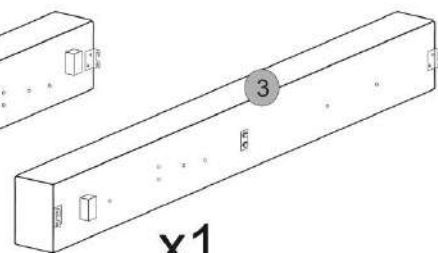


3

x1




3/5

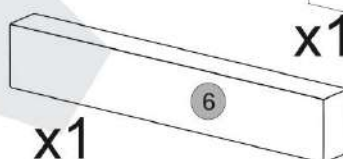

x1

4



5

x1



6

x1








6a


x4

Cx2






*1

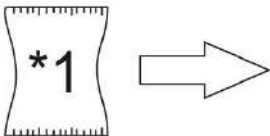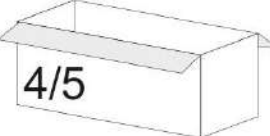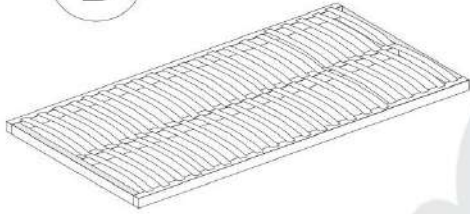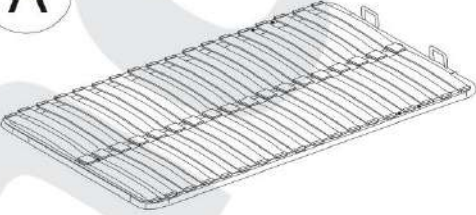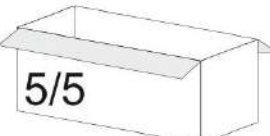
	M6x70  Hx8 Y  Yx8 4x16  W1x8
 4/5	B  A 
 5/5	DL x1  M6x30  Kx4 DP x1  Gx8  Ax4  Bx4 Rx4  ML x1  MP x1  Gx10  Px8  M6x40  Ux4 M6x35  Tx6 Qx2  Rx4  Zx4 

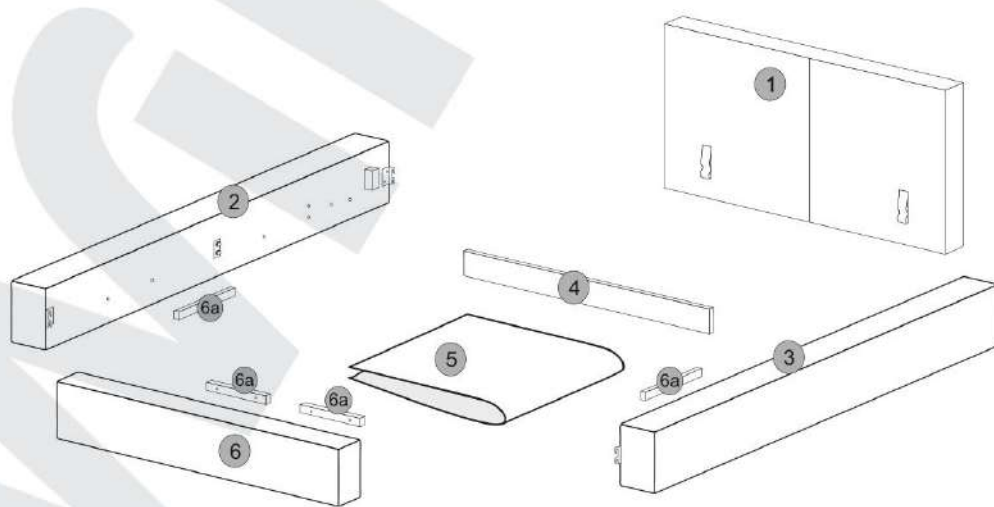




I

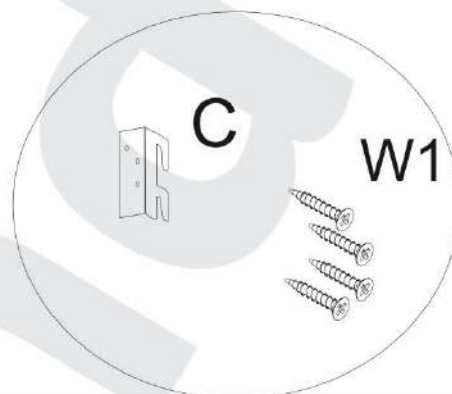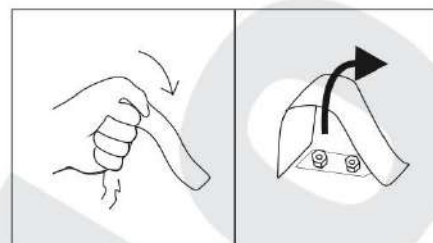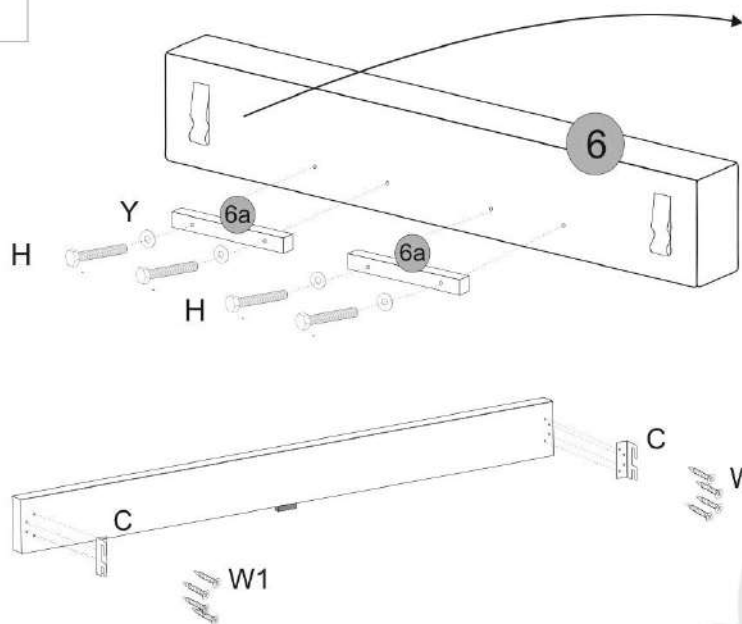



II

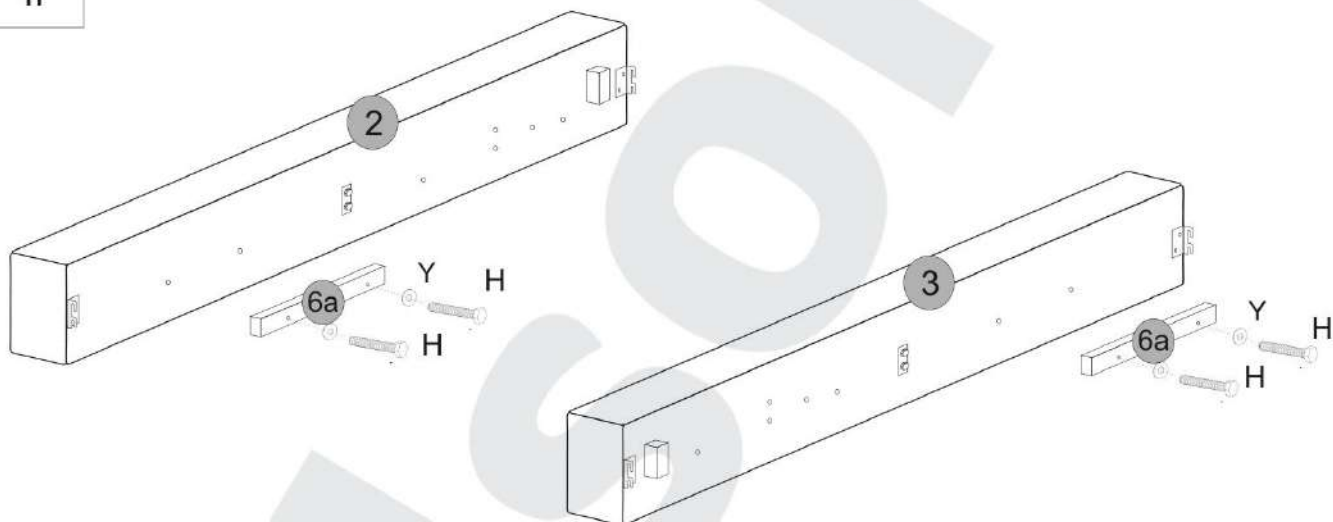



III

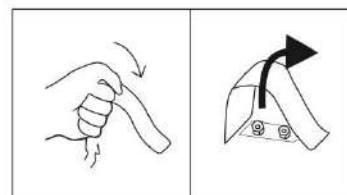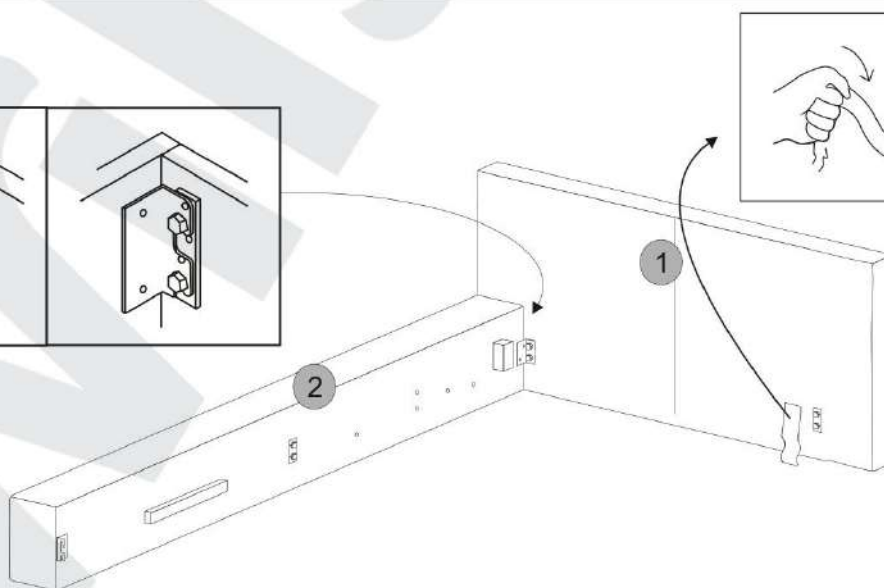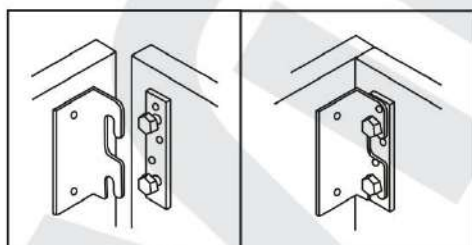



IV

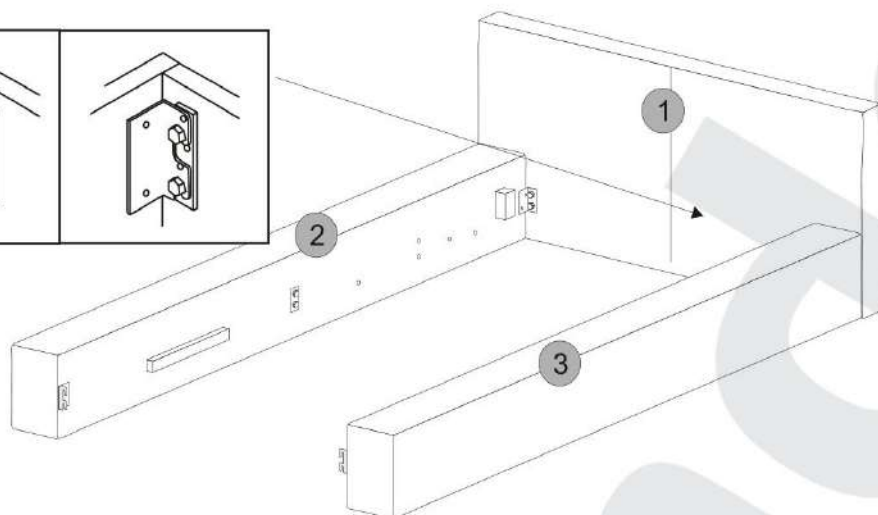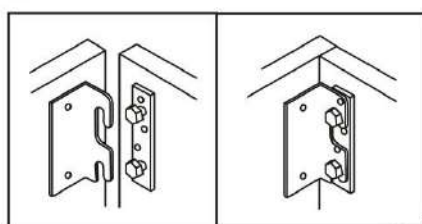



V

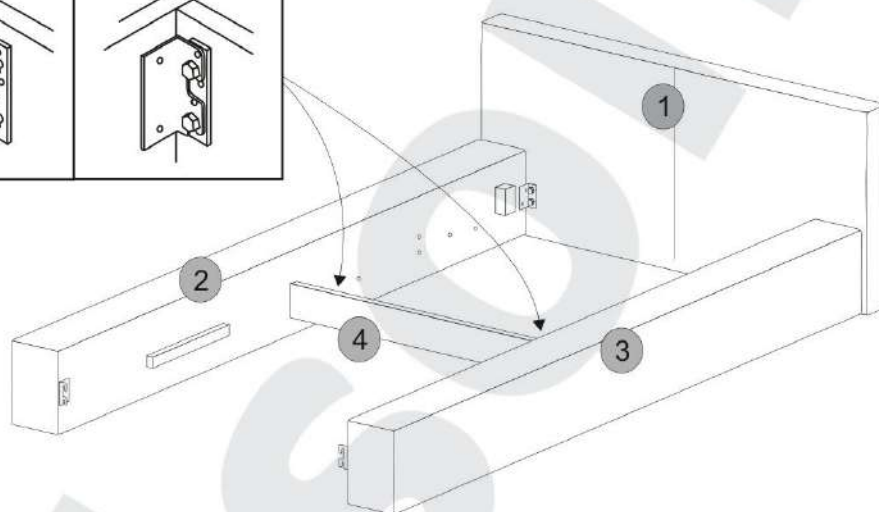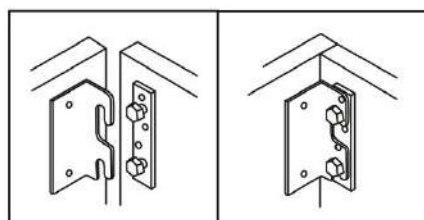

VI

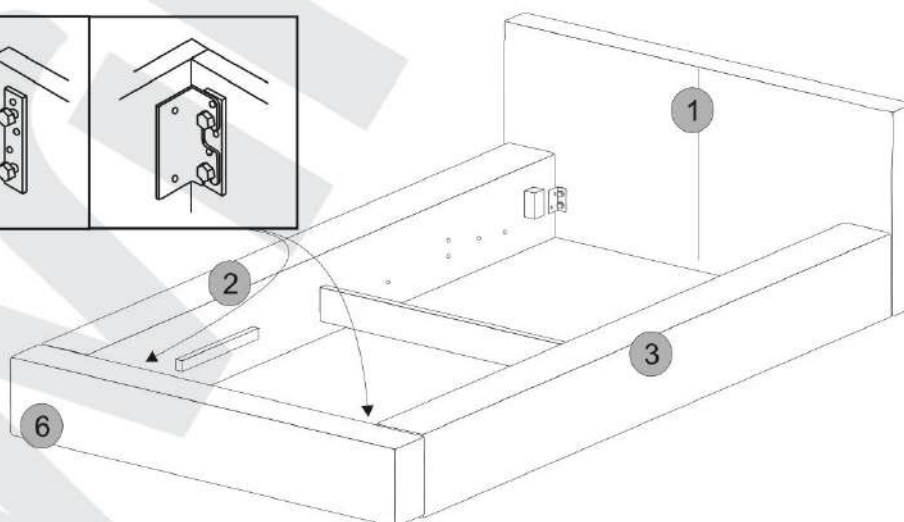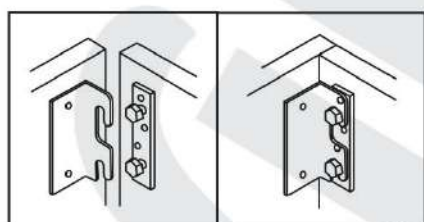

VII

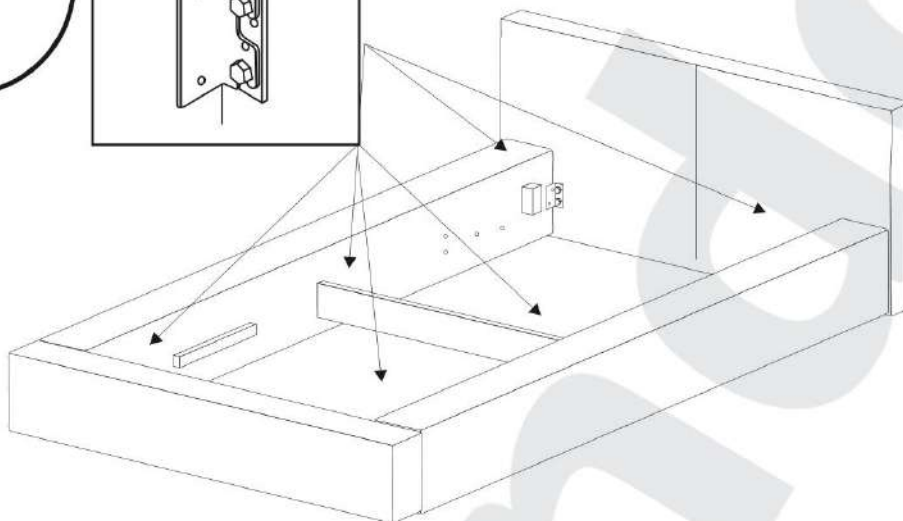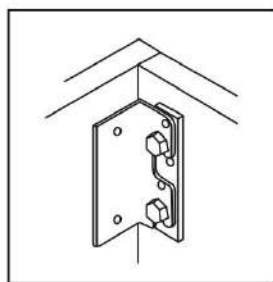

VIII

PL: Wykonaj tą czynność ostrożnie.

D: Machen sie ihre arbeit sorgfältig.

GB: Please, do it carefully.




FR: Veuillez effectuer cette opération avec précaution.

SK: Prosím, tento krok vykonajte opatrne.

CZ: Prosím, proveďte tento krok opatrně.

HU: Kérjük, ezt a lépést nagyon óvatosan végezze el!

HR: Molimo vas da pažljivo izvršite ovaj korak.

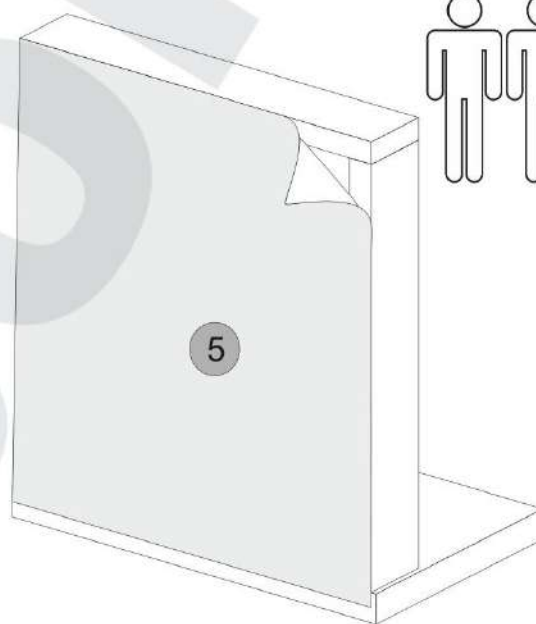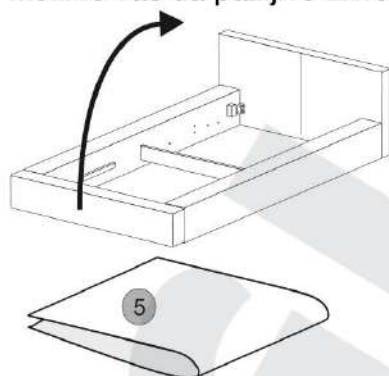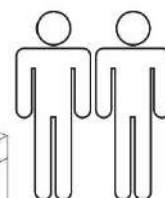


IX



Stelaż łóżka / Der bettrost /
Bedstead / Sommier / Rošt /
Rošt / Ágyrácsok / Podnice

Opcja A / Option A / Možnosť A / Možnost A / A Lehetőség / Opcija A

(stelaż metalowy / holz metall /
metal frame / armature métallique /
kovový rošt / kovový rošt /
fém keret / metalni okvir)

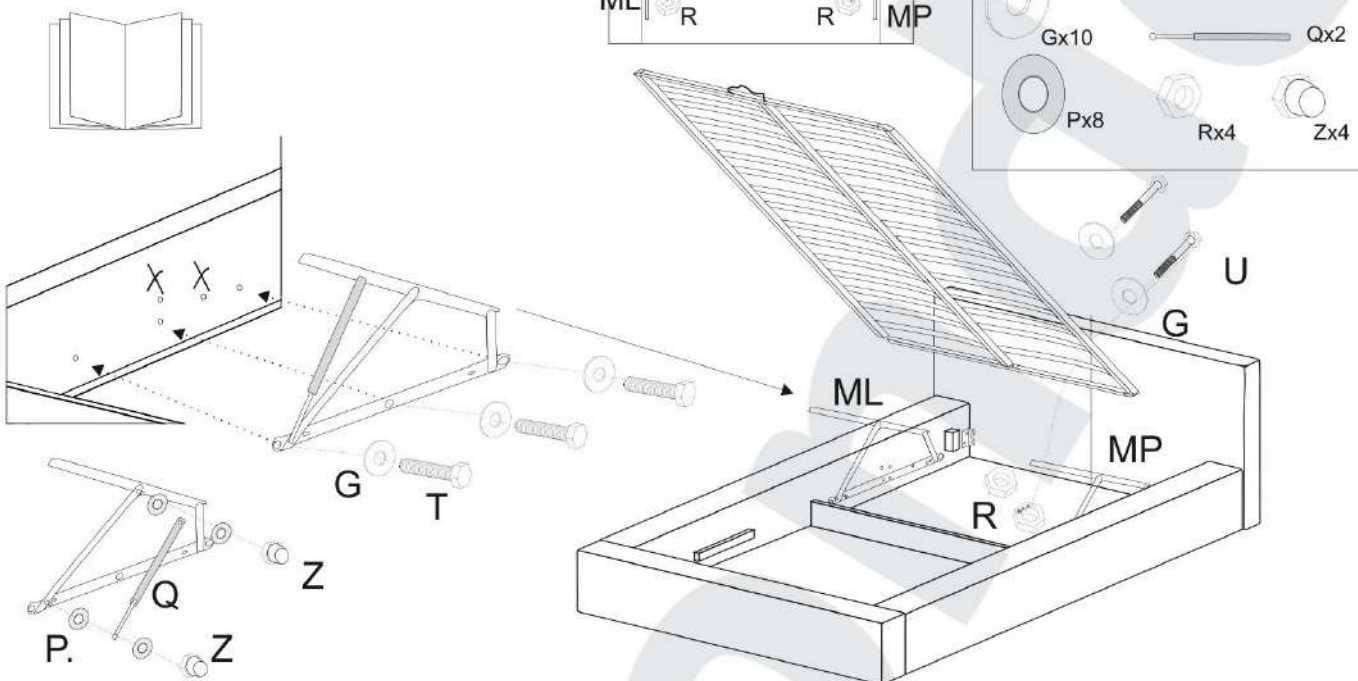

Opcja B / Option B / Možnosť B / Možnost B / B Lehetőség / Opcija B

(stelaż drewniany / holzrehmen /
wooden frame / cadre en bois /
drevený rošt / dřevěný rošt /
Fa keret / drveni okvir)

