


# LIMO



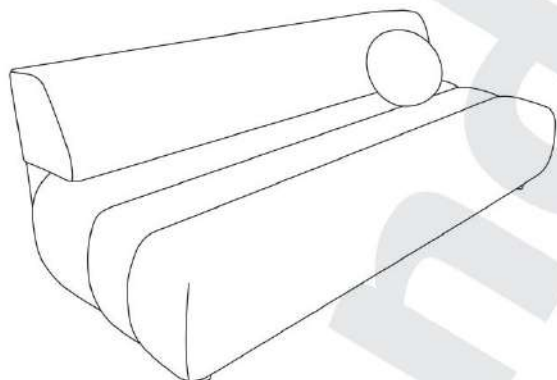


2026-09-14




15 min.


PL: INSTRUKCJA MONTAŻU  
D: MONTAGEANLEITUNG  
EN: ASSEMBLY MANUAL  
NL: HANDLEIDING VOOR DE MONTAGE  
F: MODEL D'EMPLOI  
SK: NÁVOD NA MONTÁŽ  
CZ: NÁVOD K MONTÁŽI  
HU: SZERELÉSI ÚTMUTATÓ  
HR: UPUTE ZA MONTAŽU  
RO: INSTRUȚIUNI DE MONTAJ

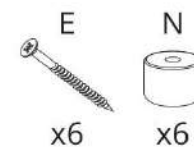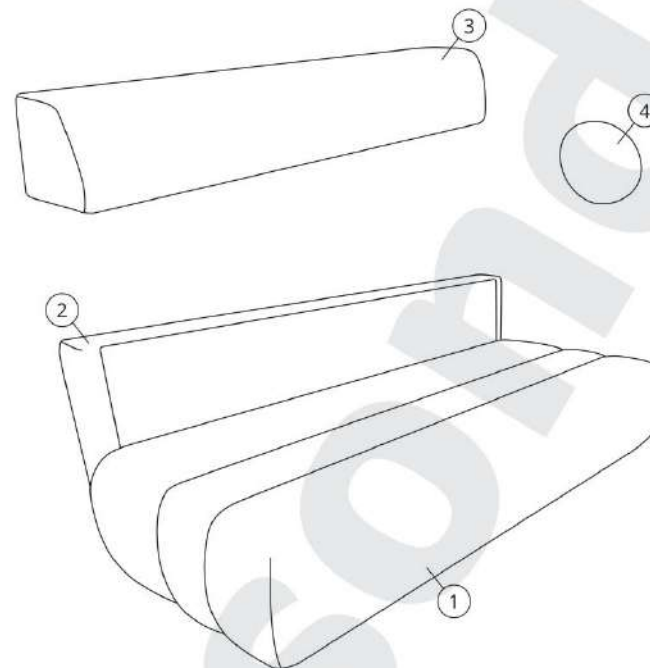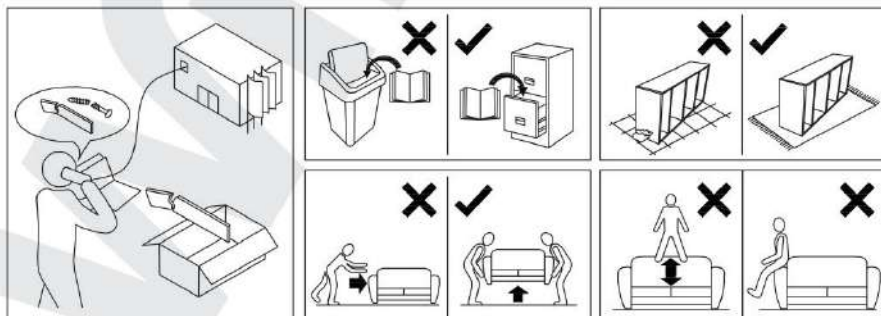


1

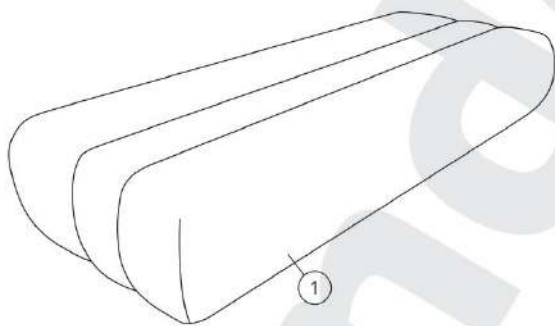



2

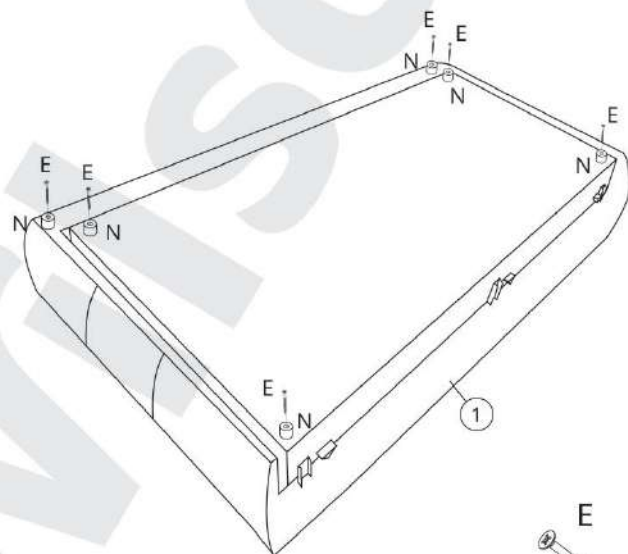


3

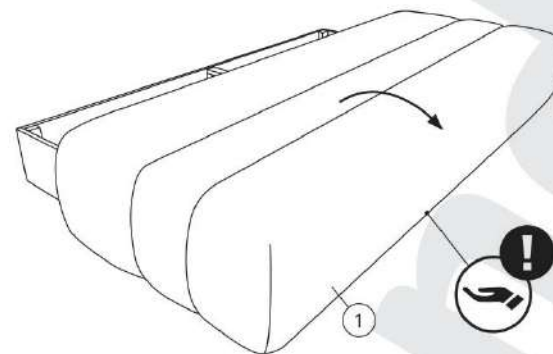


4

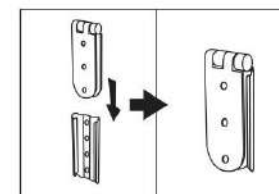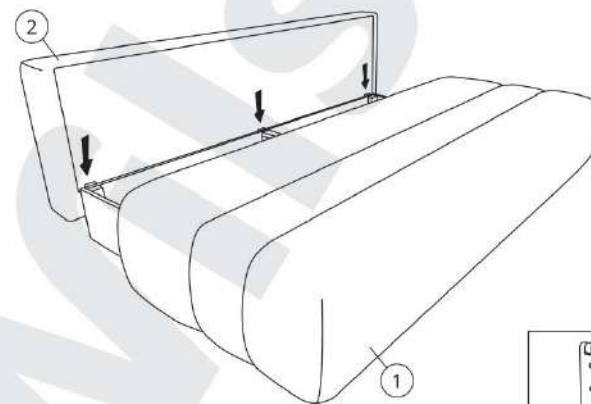




5

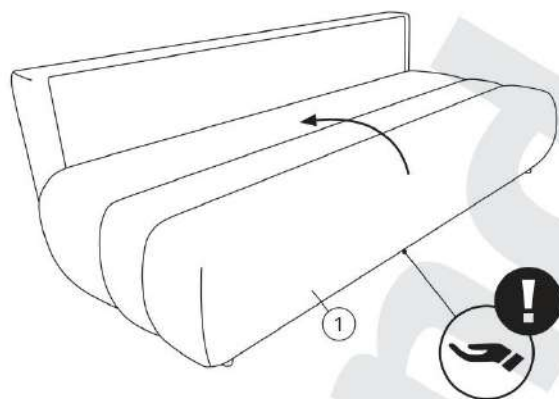





6

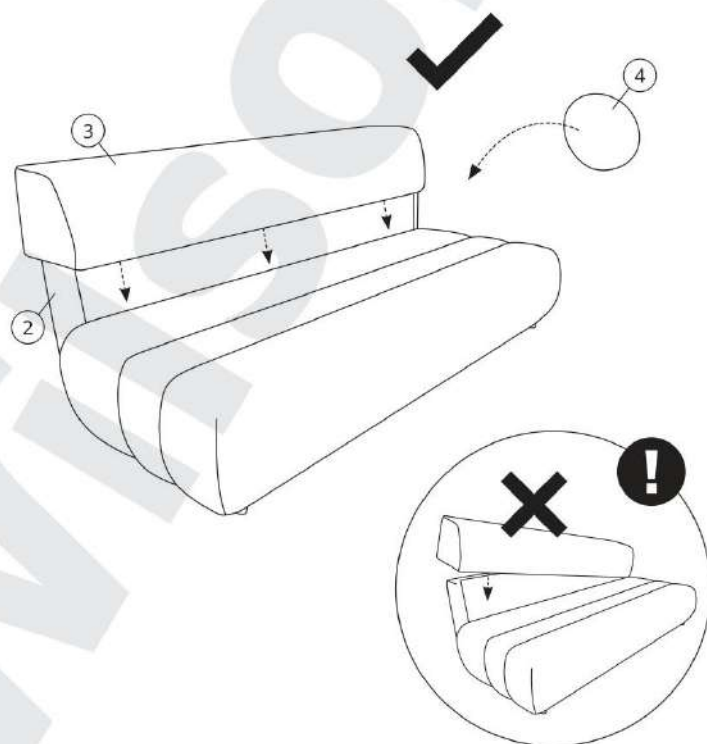

7

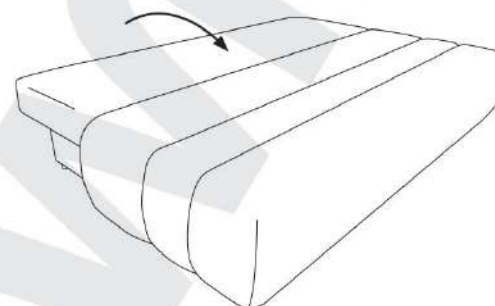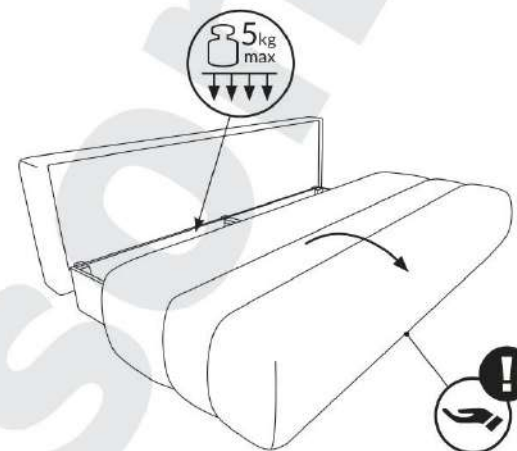
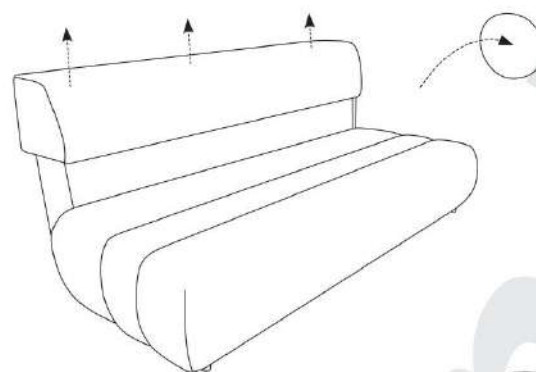


KARTA SERWISOWA / SERVICE FORM / SERVICEKARTE

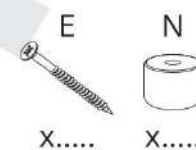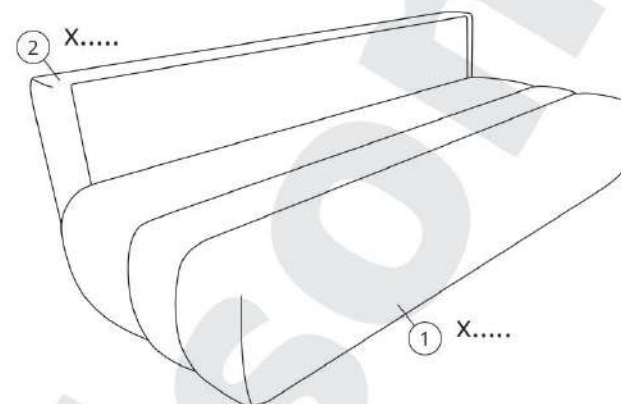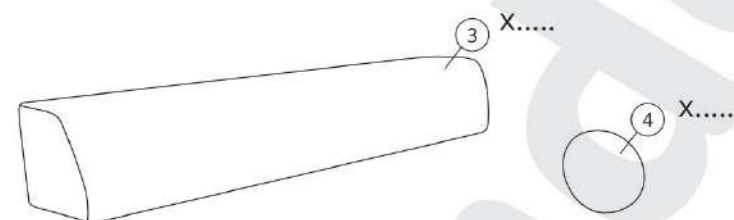



**Uwaga / Achtung / Caution / Opgelet / Attention /  
Pozor / Pozor / Vigyázat / Pažnja / Atenție**

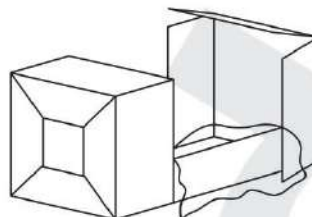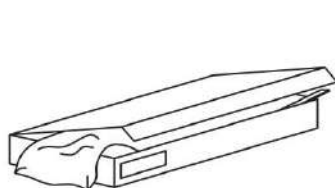

FOR




C-PAP



PS



PVC



FOR



TEX



TEX



PET




GLS



GLS



GLS



FE



ALU



FOR




FE



PVC



PCW




GLS + ALU



PP



PEHD



Alkaline



NiMH



NiCD



Lead




Li



FE








PVC

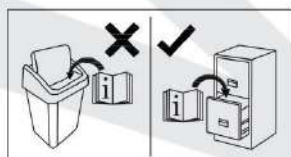



Uwaga / Achtung / Caution / Opgelet / Attention /  
Pozor / Pozor / Vigyázat / Pažnja / Atenție

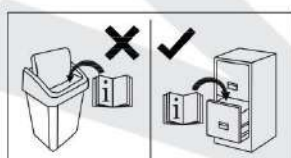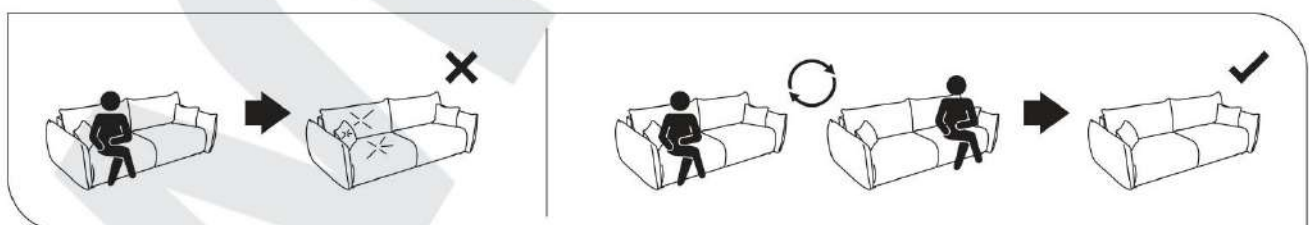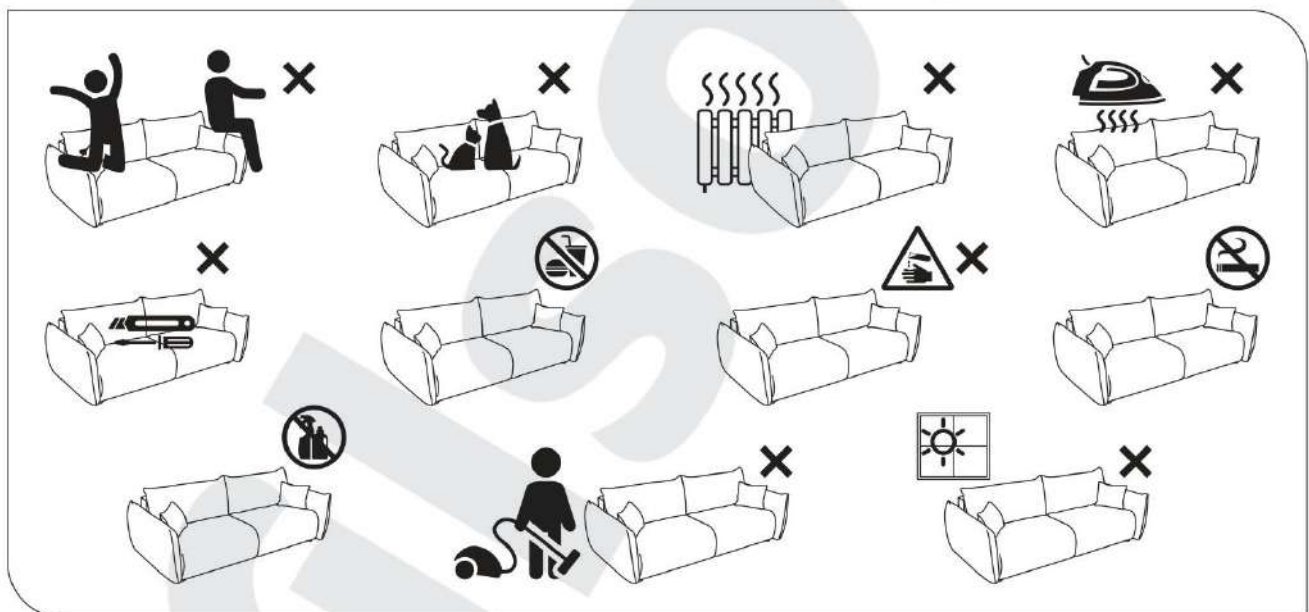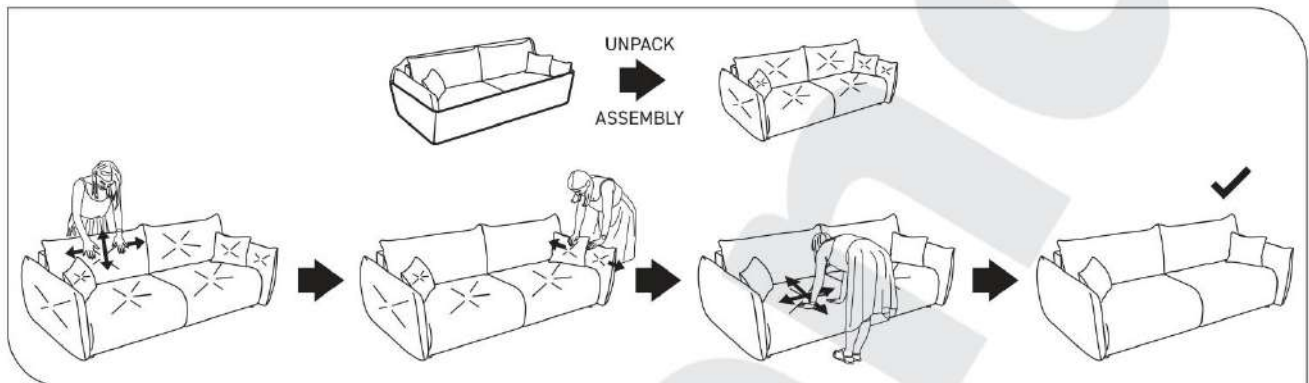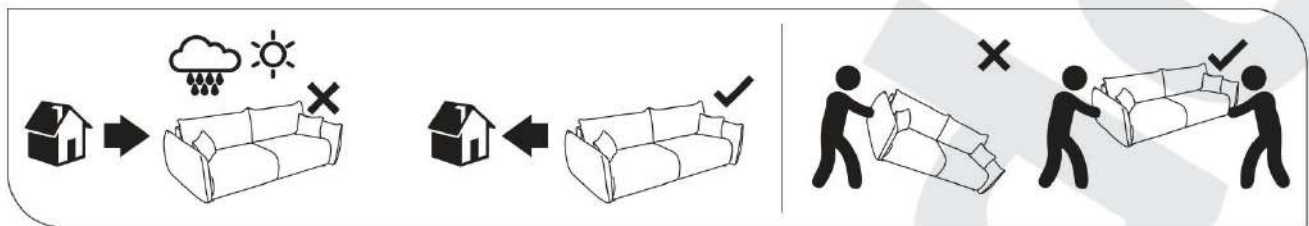



**Uwaga / Achtung / Caution / Opgelet / Attention /  
Pozor / Pozor / Vigyázat / Pažnja / Atenție**

