
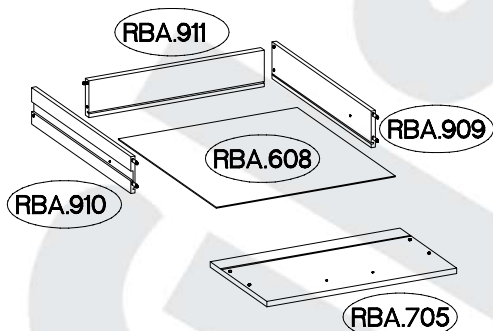
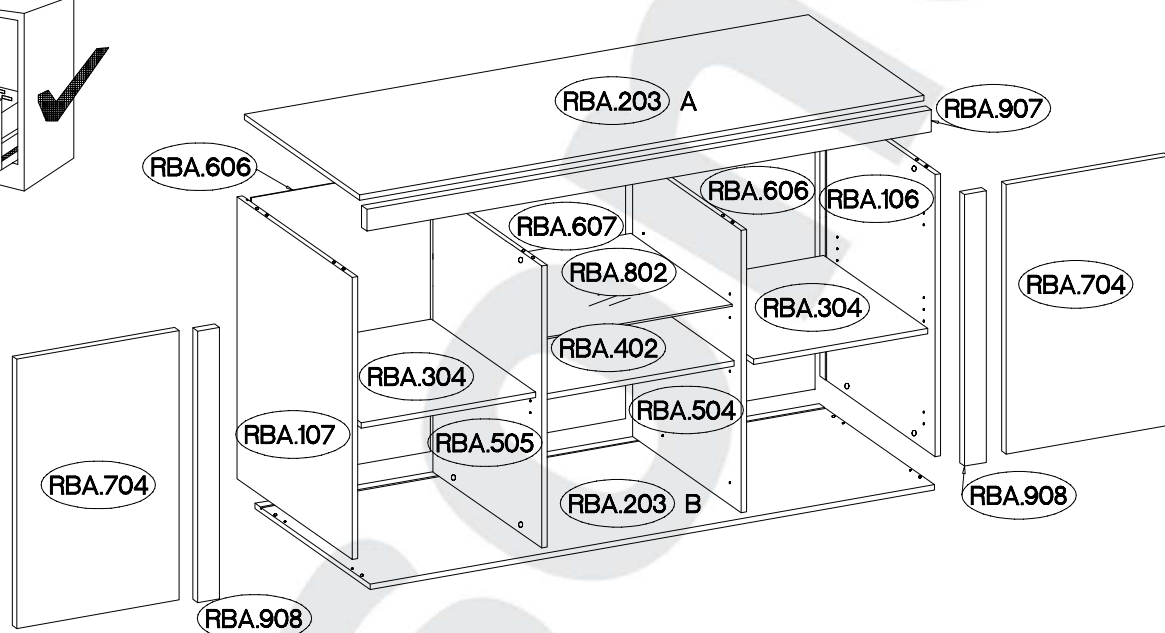
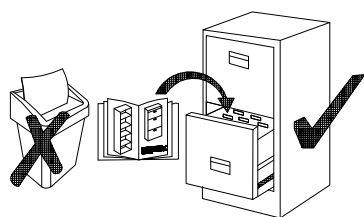
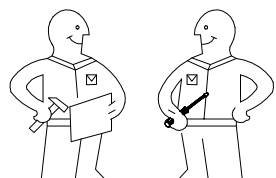
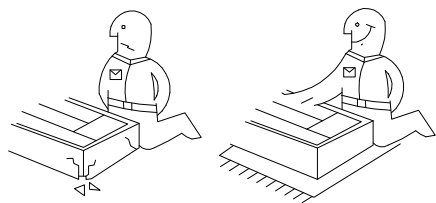












RUMBA 20 / ASTI 20




		†20/8mm  J14 8	†10x50mm  O7 2	 L9 2
†6,3x20mm  M3 8	†6x42mm  B2 4	 T9 9	 F10 6	†4.0x25mm  P14 6
 J12 4	M4x9mm  U1 4	 O1 1	310/27mm  I 2	 T4 2
†8x30mm  A 28	 L 14	L=128mm  S1 4	†5/16mm  J3 8	†35/0mm  G 4

1


310/27mm  I	 T4	8x30mm  A	15/12mm  C	L=20mm  D2	6,3x20mm  M3	 F10	4.0x25mm  P14	4.0x16mm  P1
2	2	16	20	20	8	6	6	13
 T9	20/8mm  J14							
9	8							

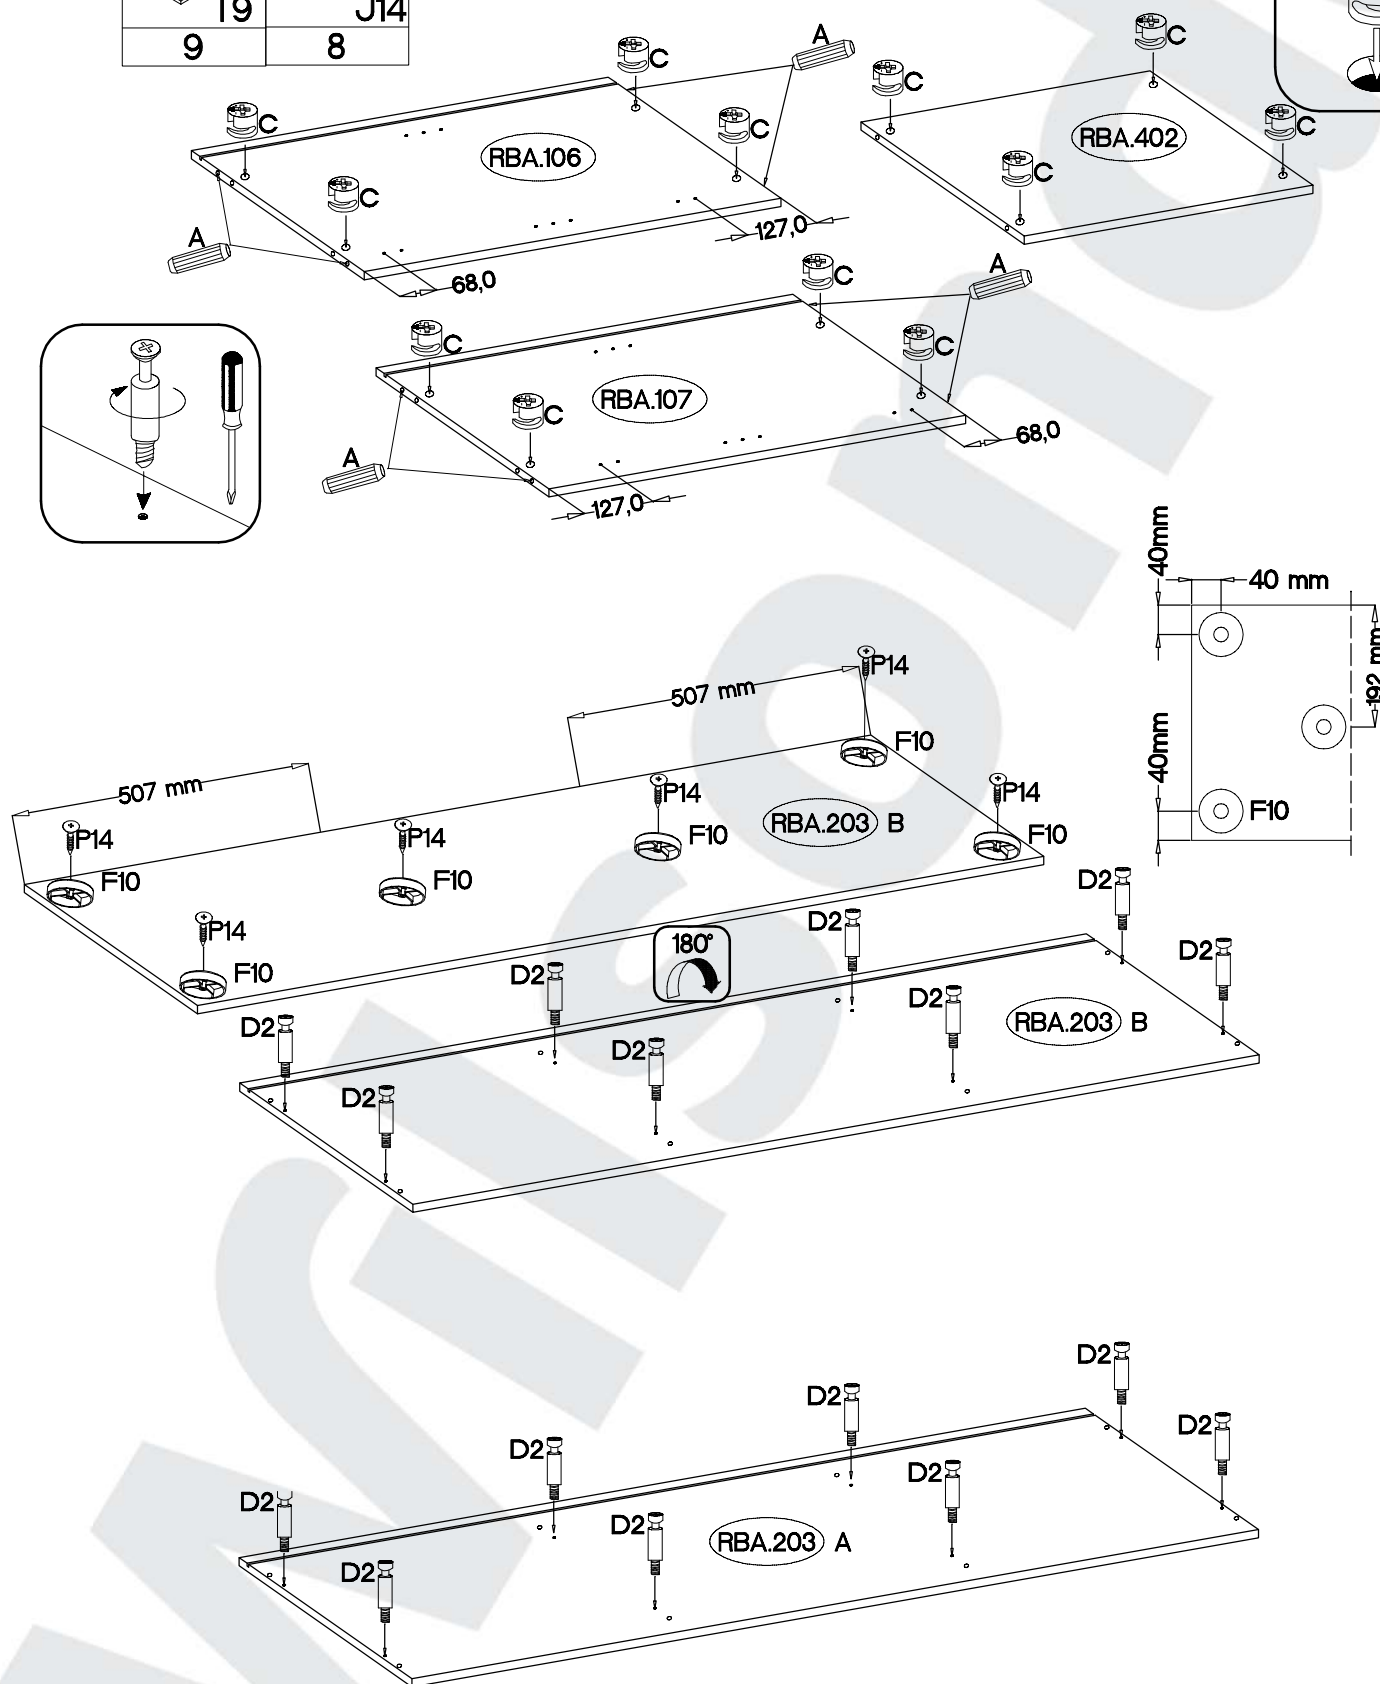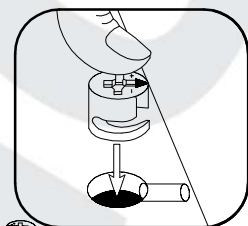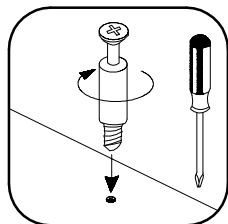


1

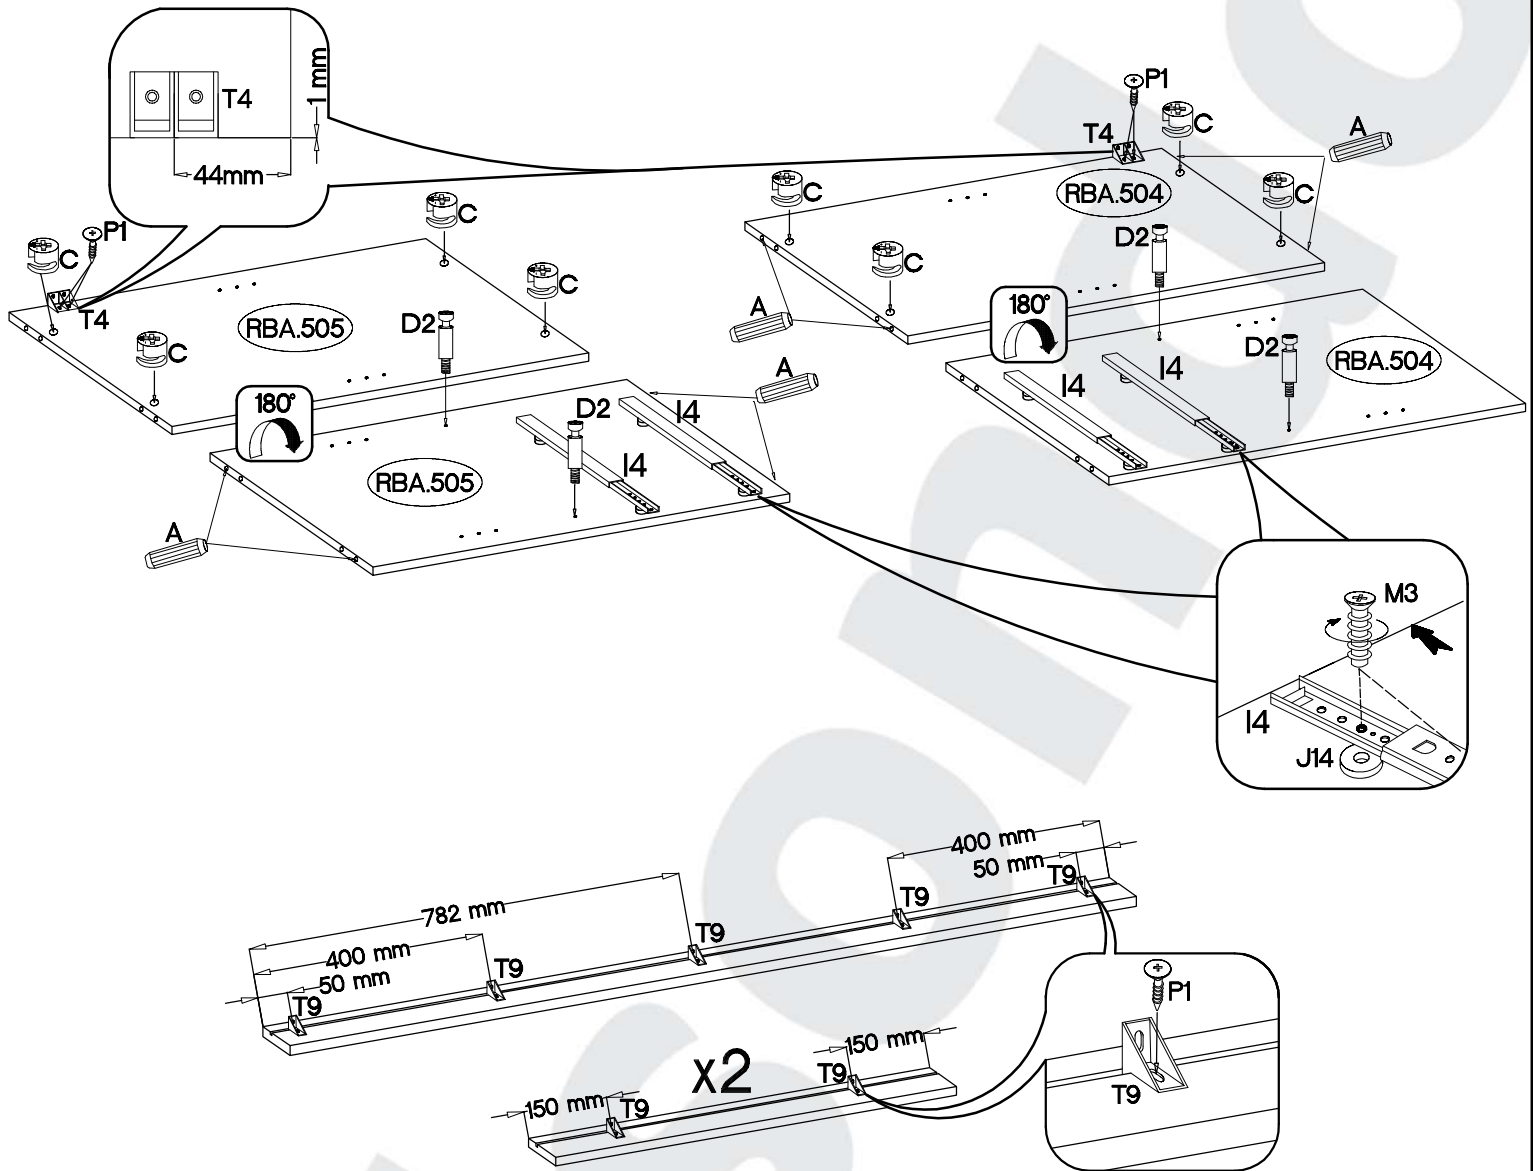


2

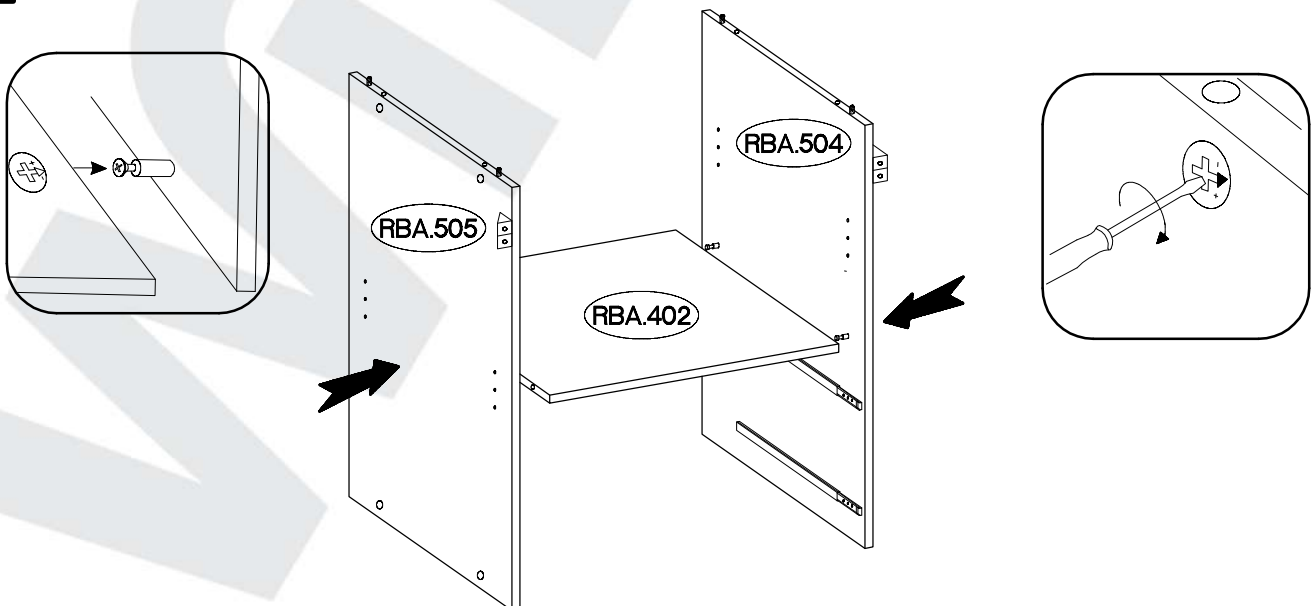

3






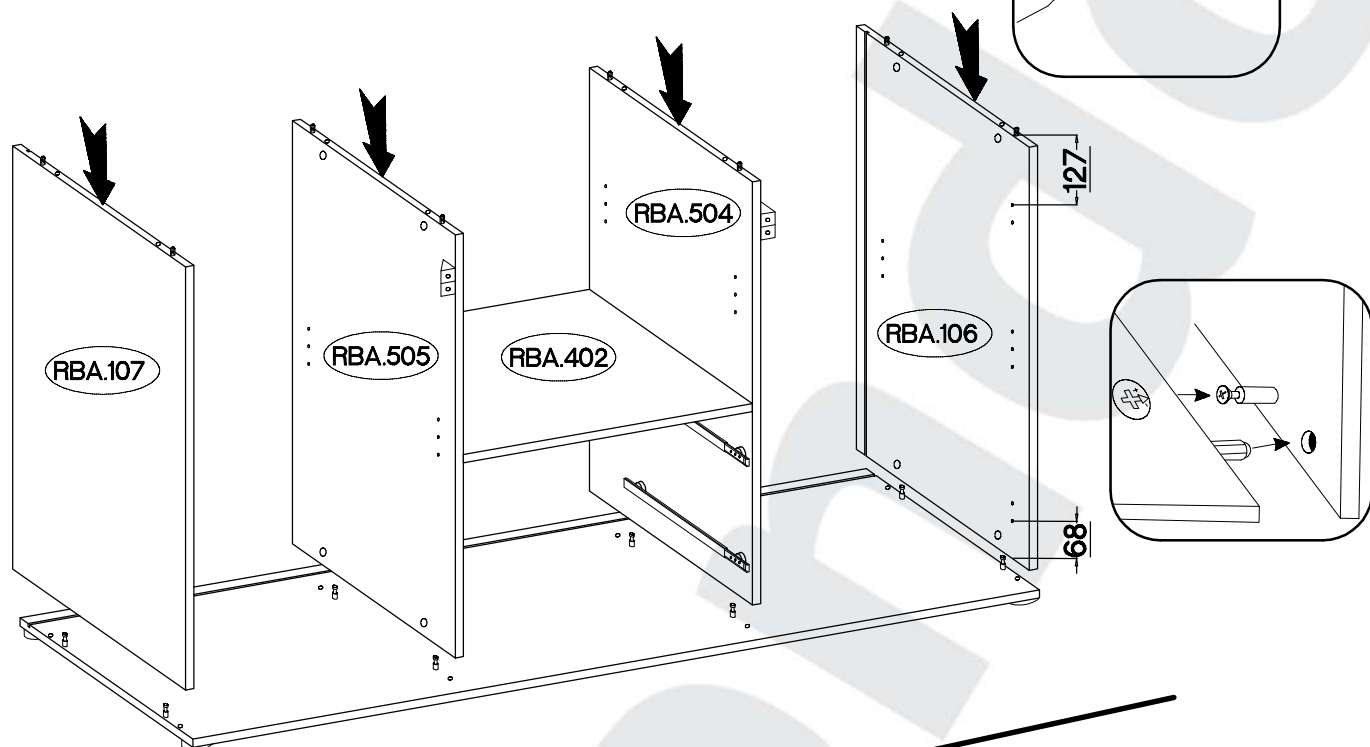


4

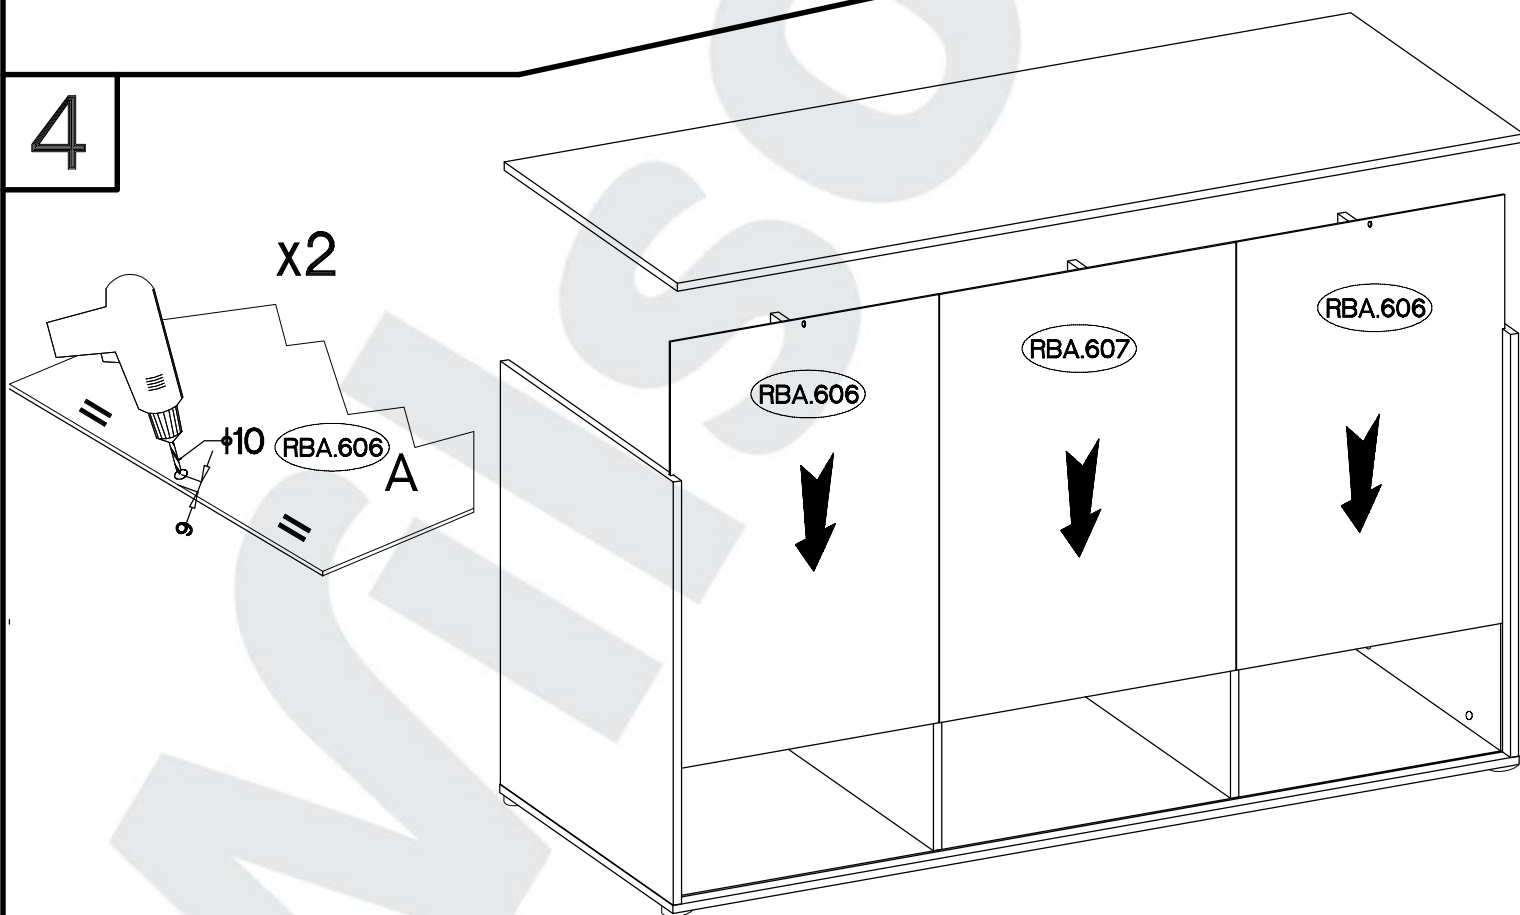


5

3.0x20mm  P7 13	 L2 10	 L 10
---	--	---

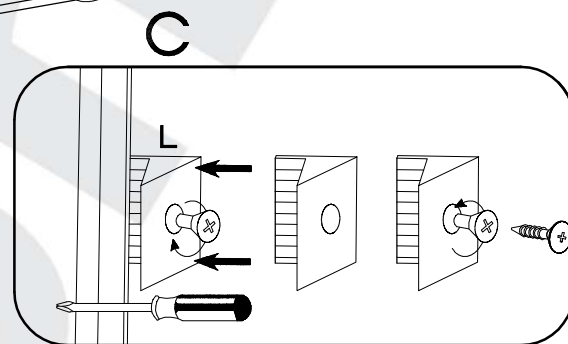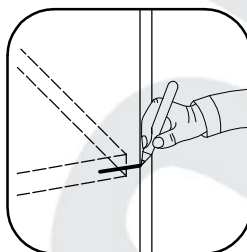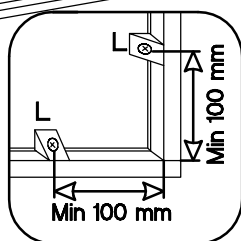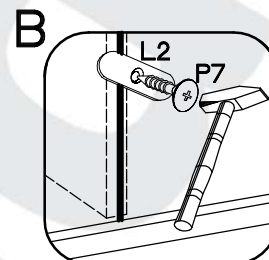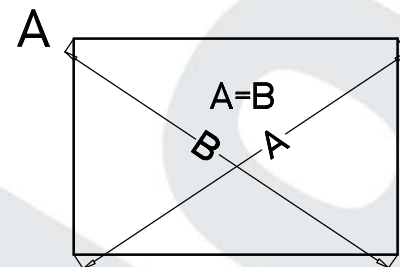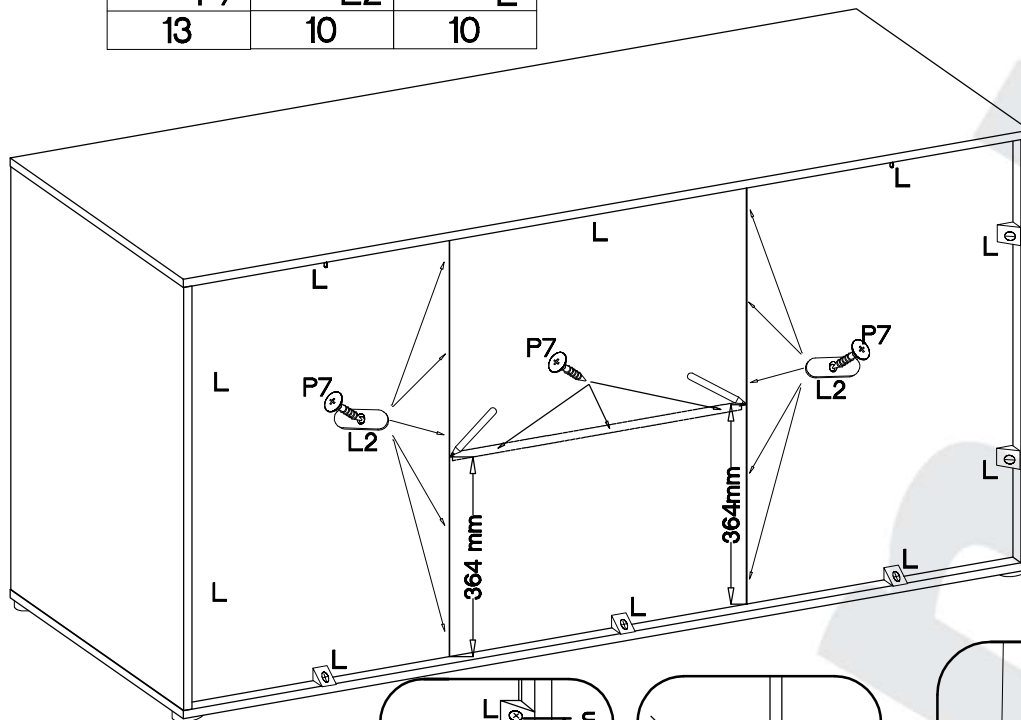


6


4.0x16mm  P1 13

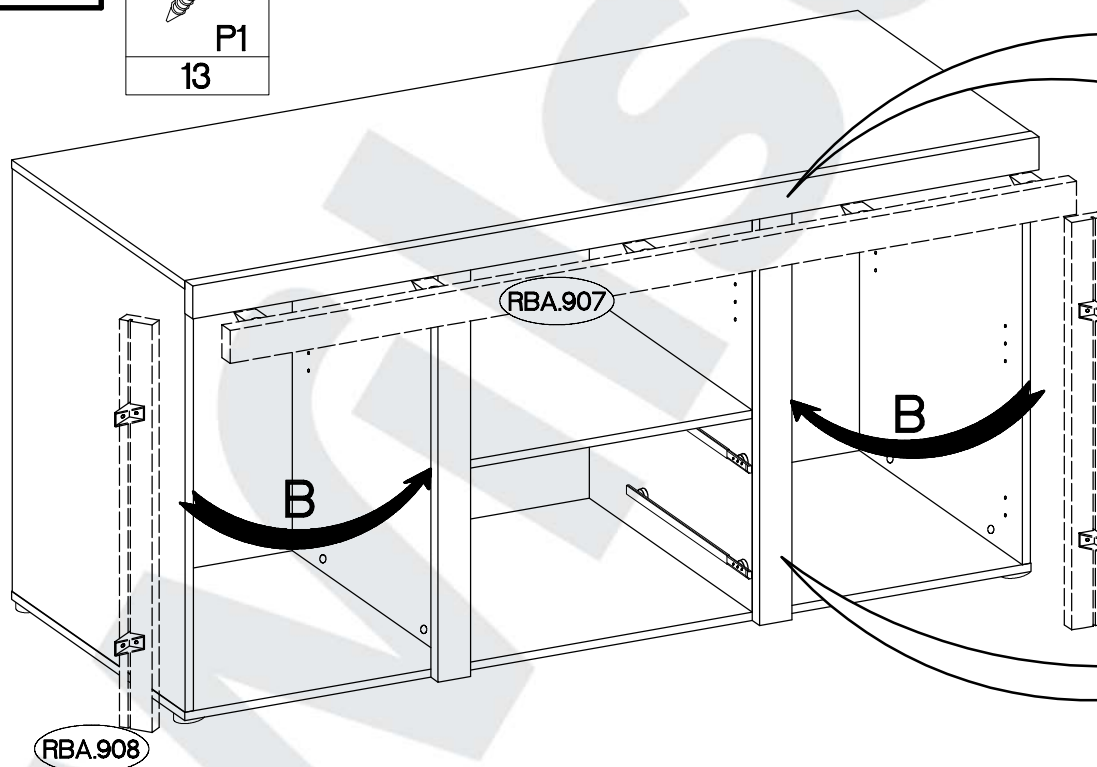









x2

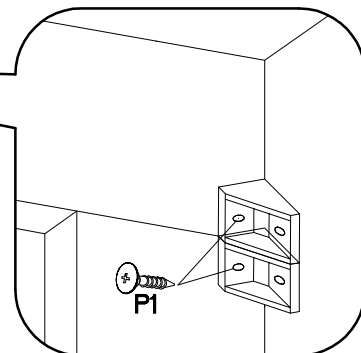


x9

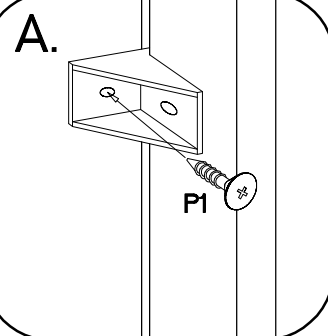



7

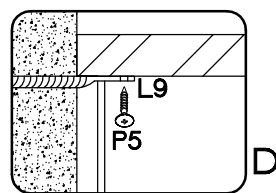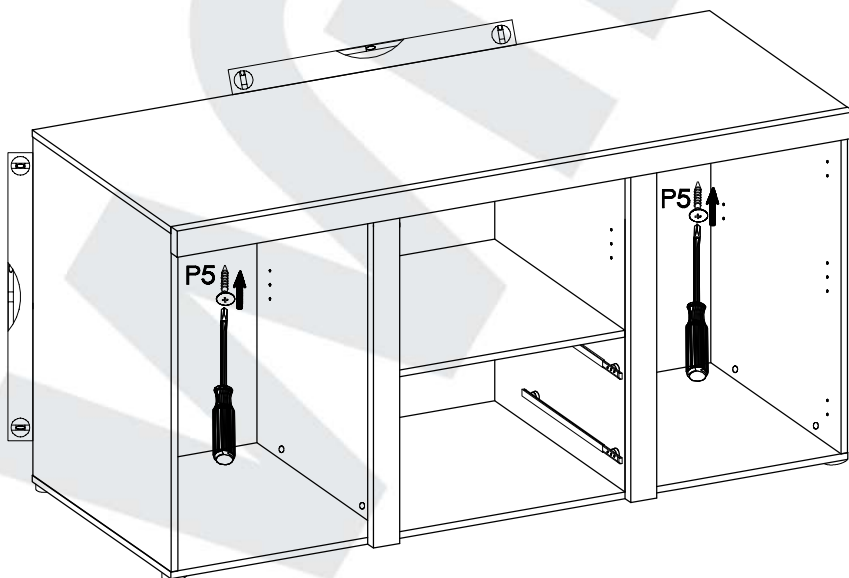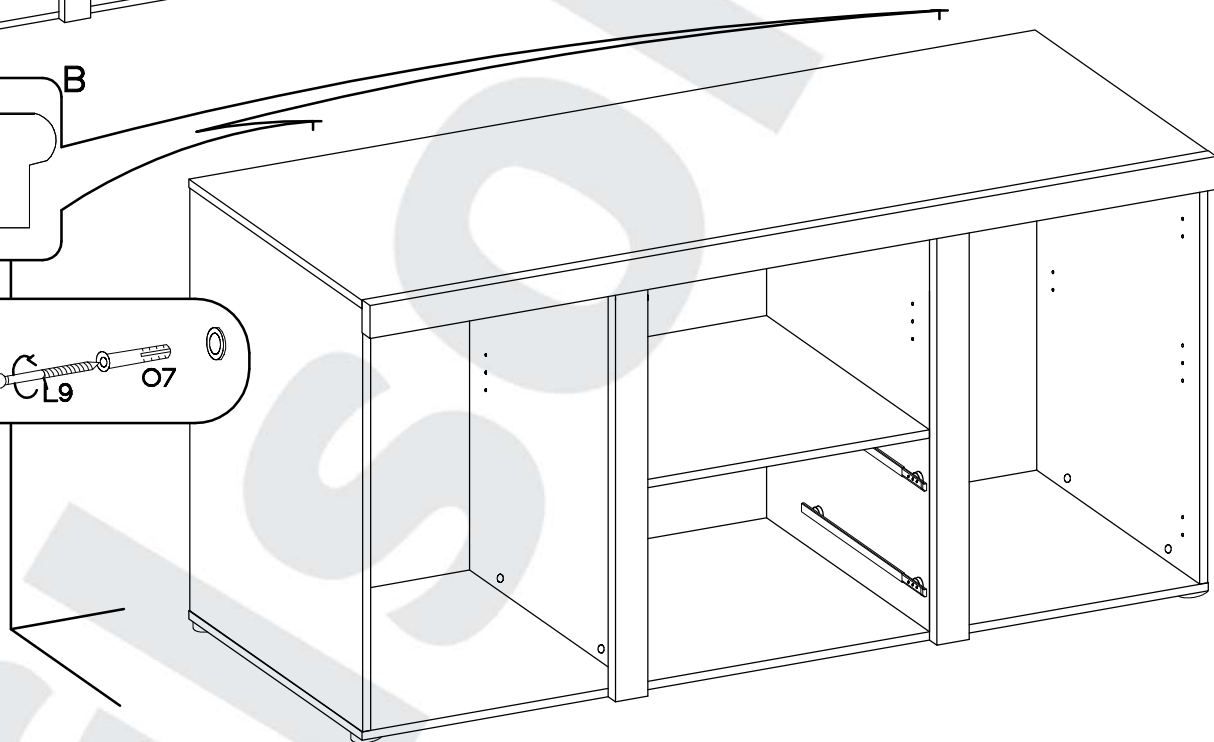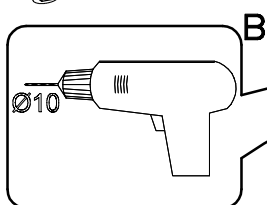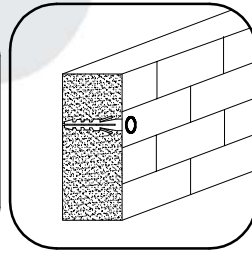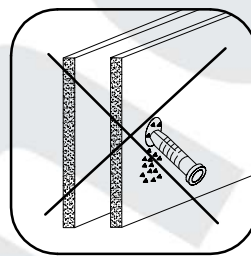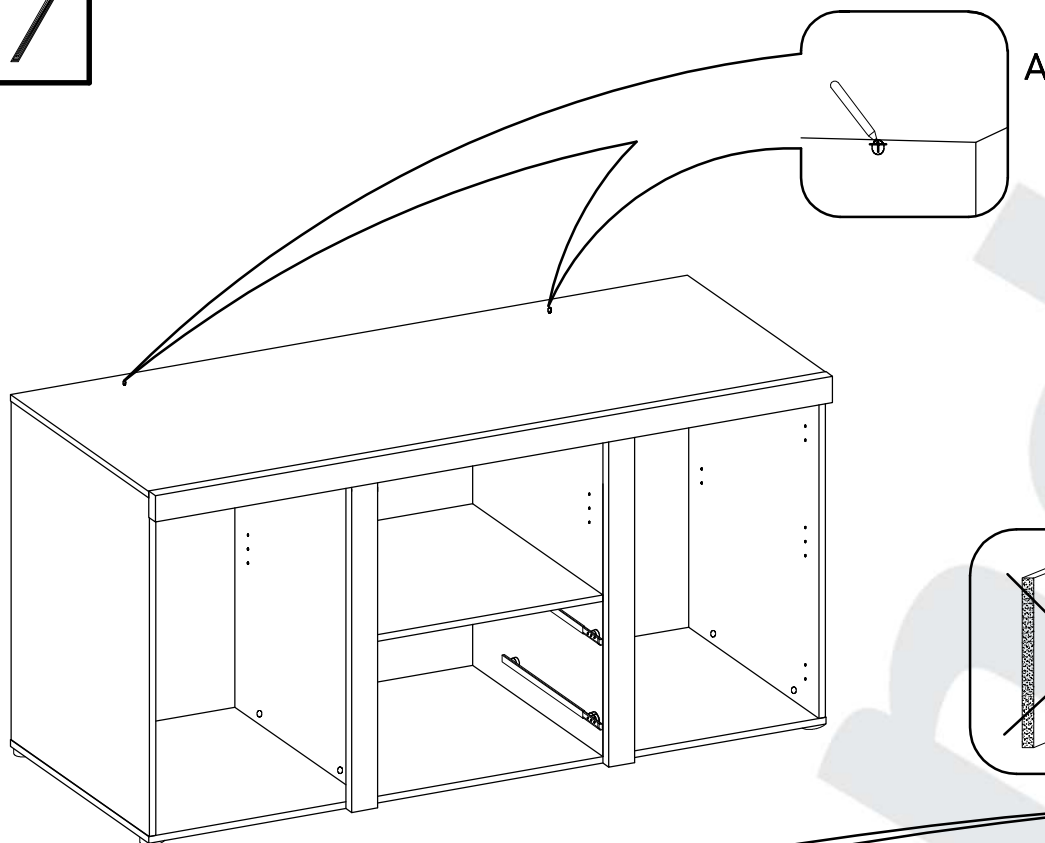


†10x50mm		†3.5x13mm
		
O7	L9	P5
2	2	2

8


$\pm 6 \times 42 \text{mm}$		$L=128 \text{mm}$	$\pm 4.0 \times 30 \text{mm}$		$\pm 8 \times 30 \text{mm}$
					
B2	O1	S1	R2	L	A
4	1	2	4	4	12

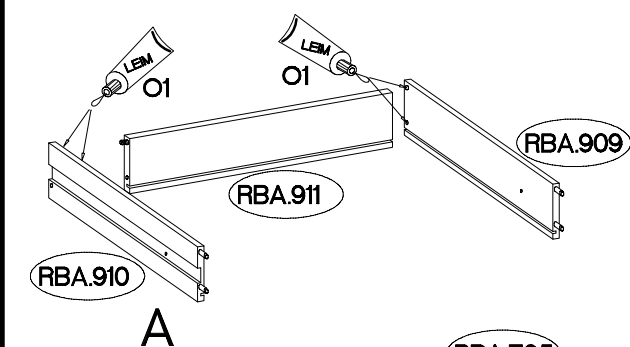


x2

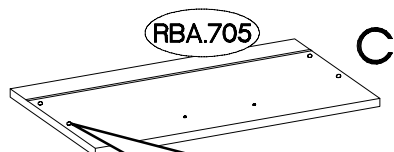


C

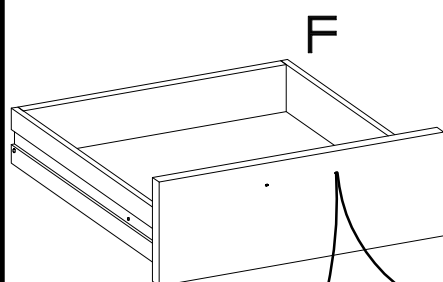

F

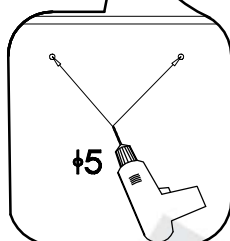


+5

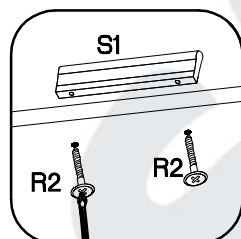

S1


R2

R2

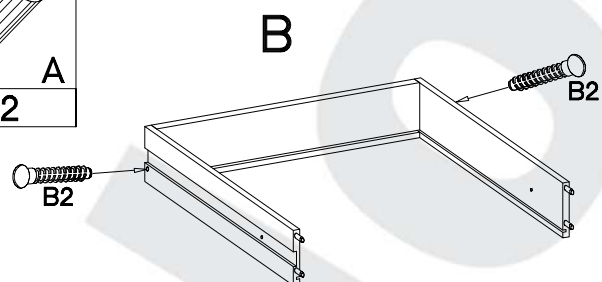


B


D

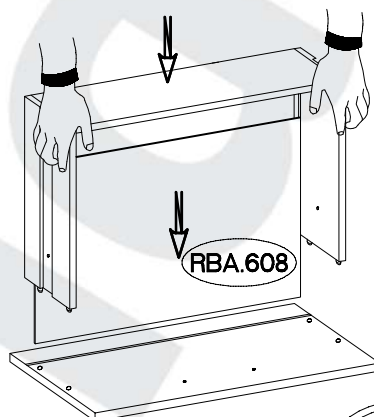

RBA.608

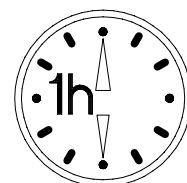


1h

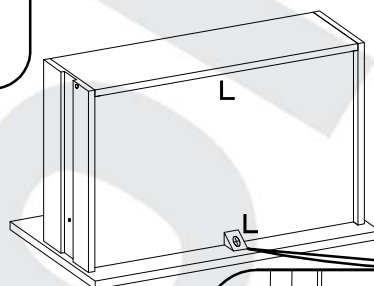

L

E

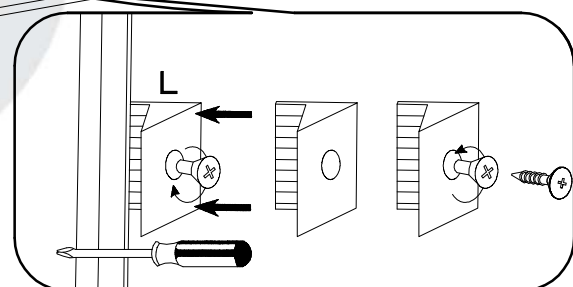


L

R2

R2


9

$H=0$	$\pm 35/0 \text{mm}$	$\pm 3.5 \times 13 \text{mm}$
		
H	G	P5
4	4	8

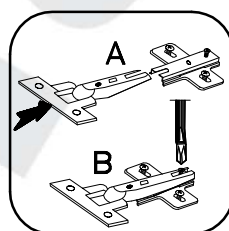

A


B

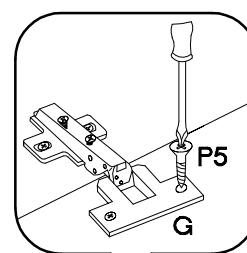

G


P5

x2

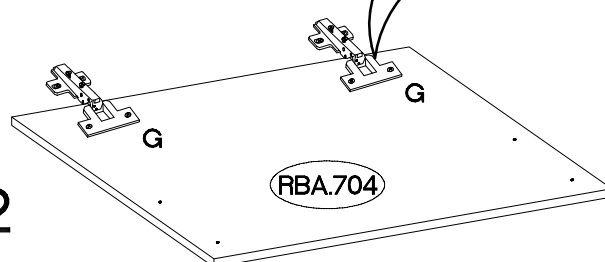

G

RBA.704

$\varnothing 5/16\text{mm}$		L=128mm	$\varnothing 4.0 \times 30\text{mm}$	M4x9mm	
					
J3	J12	S1	R2	U1	E
8	4	2	4	4	16

