
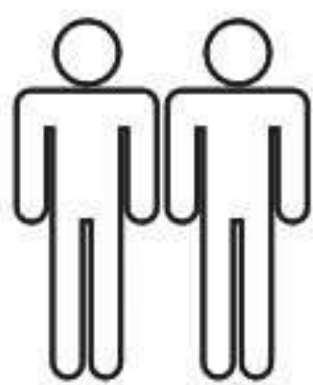
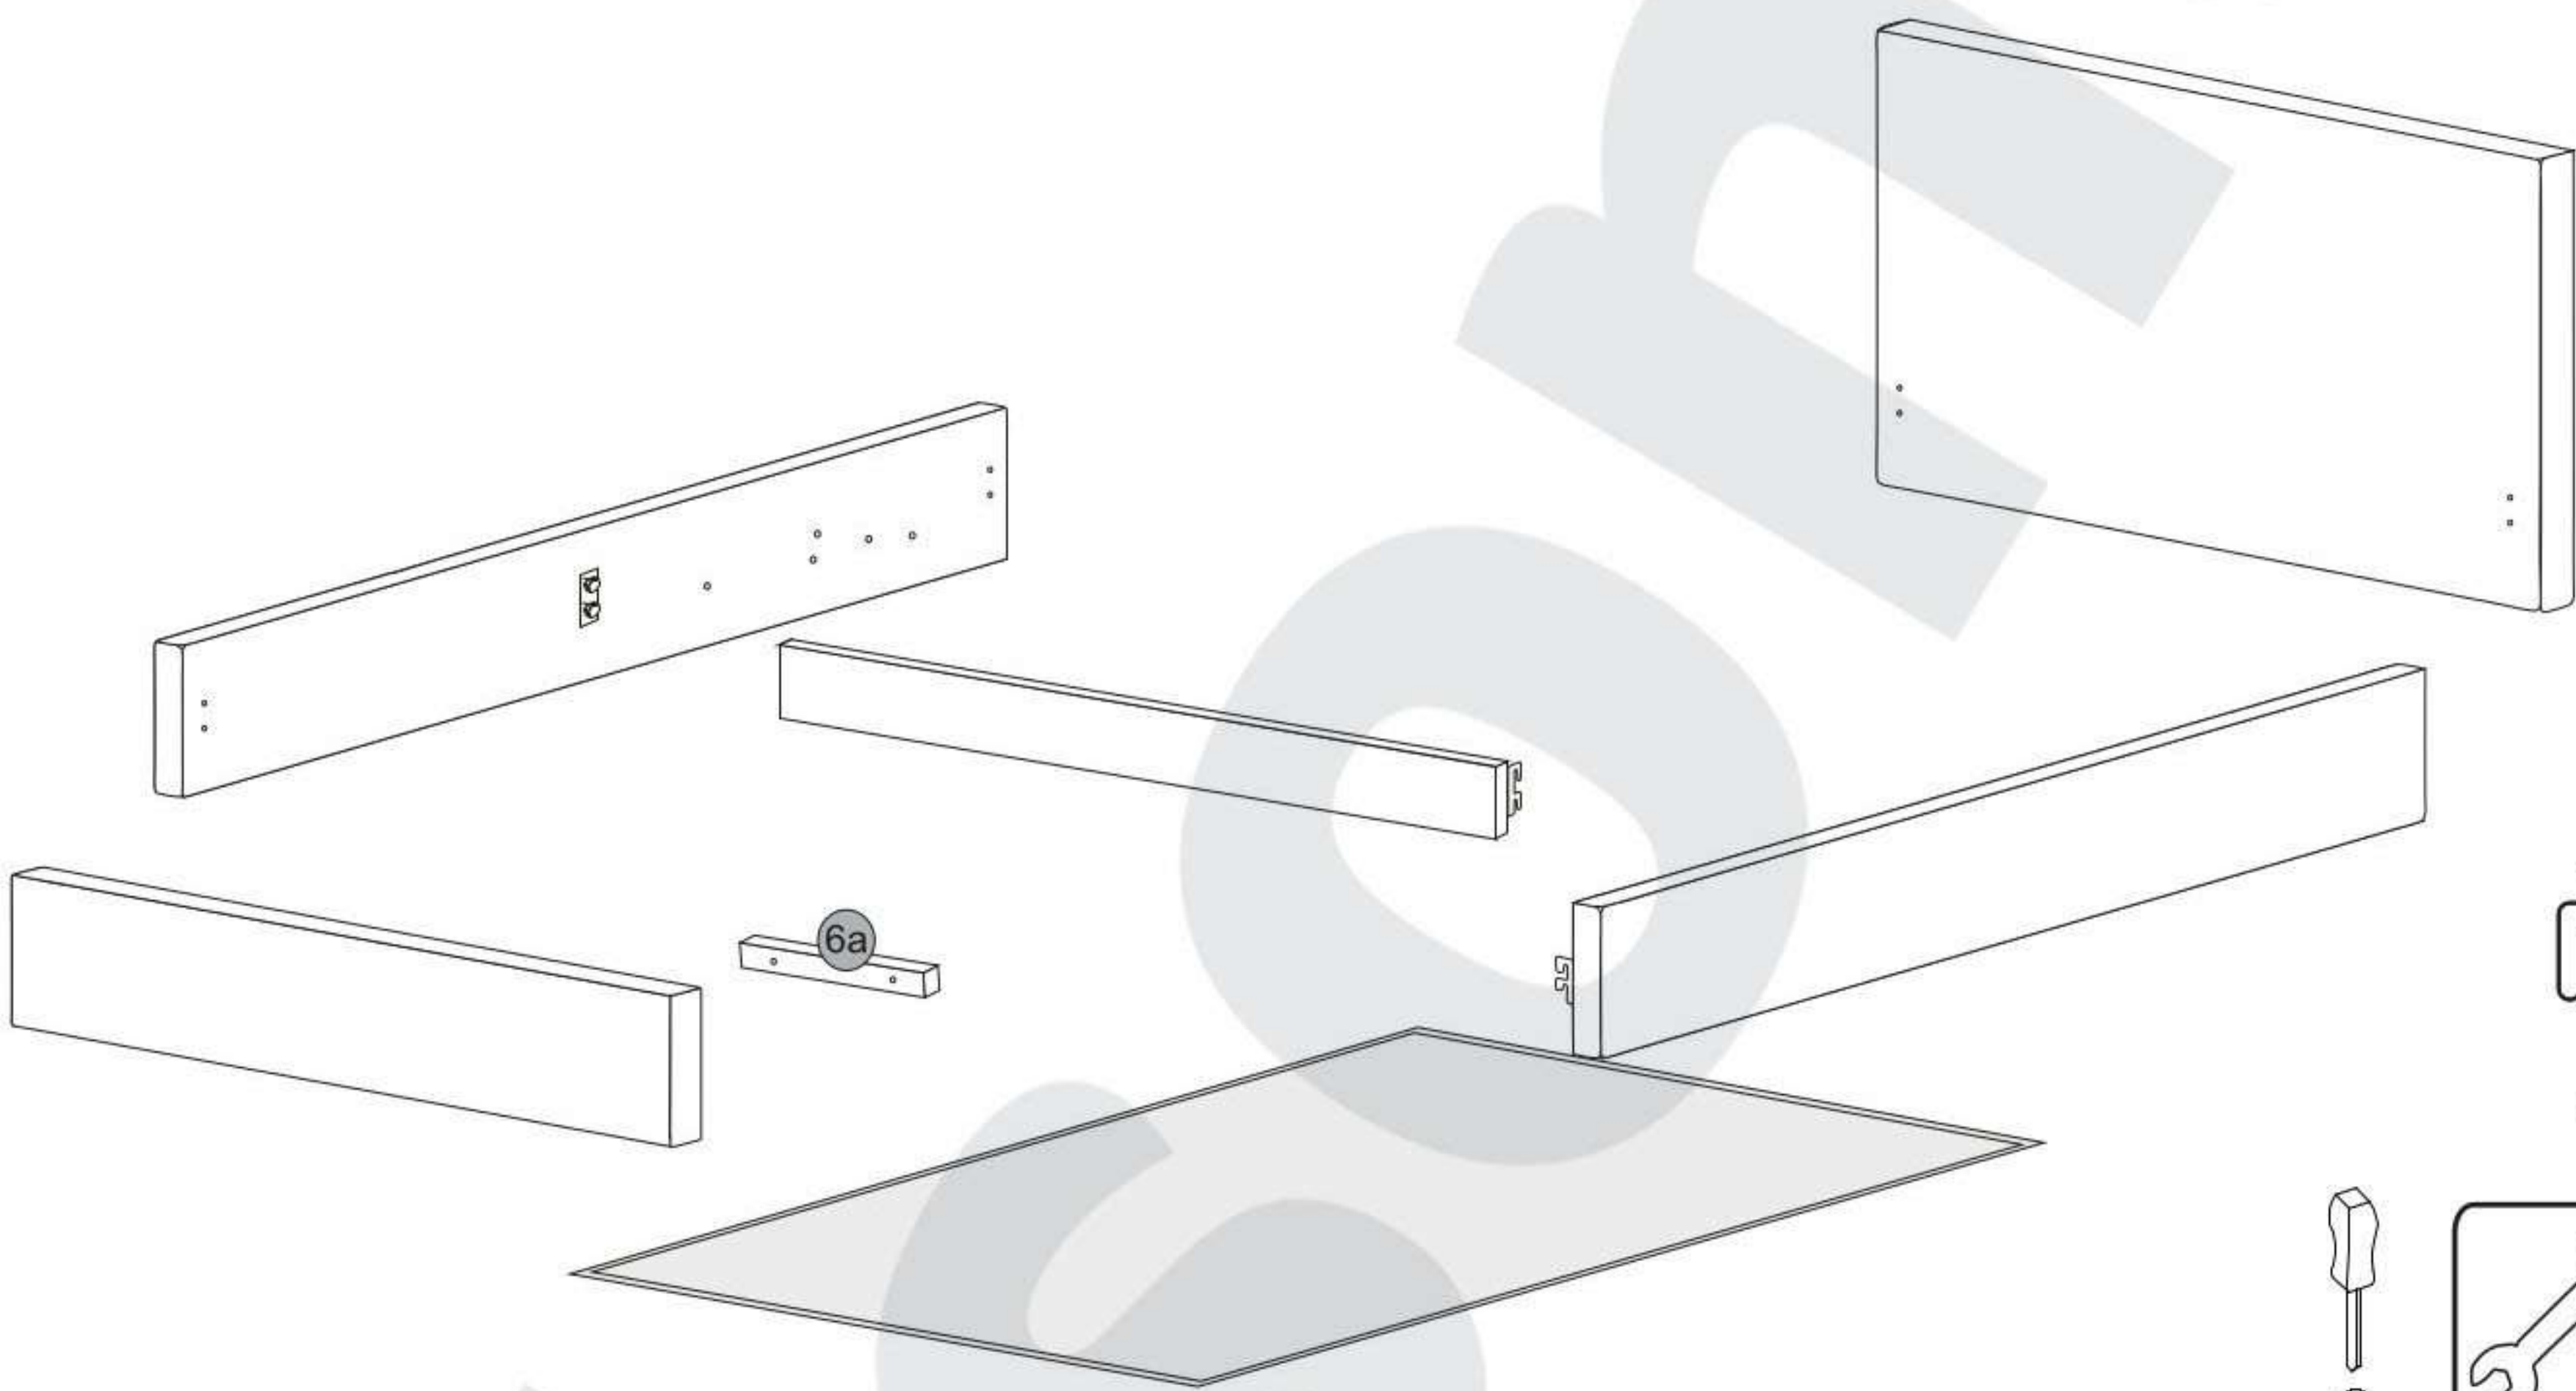
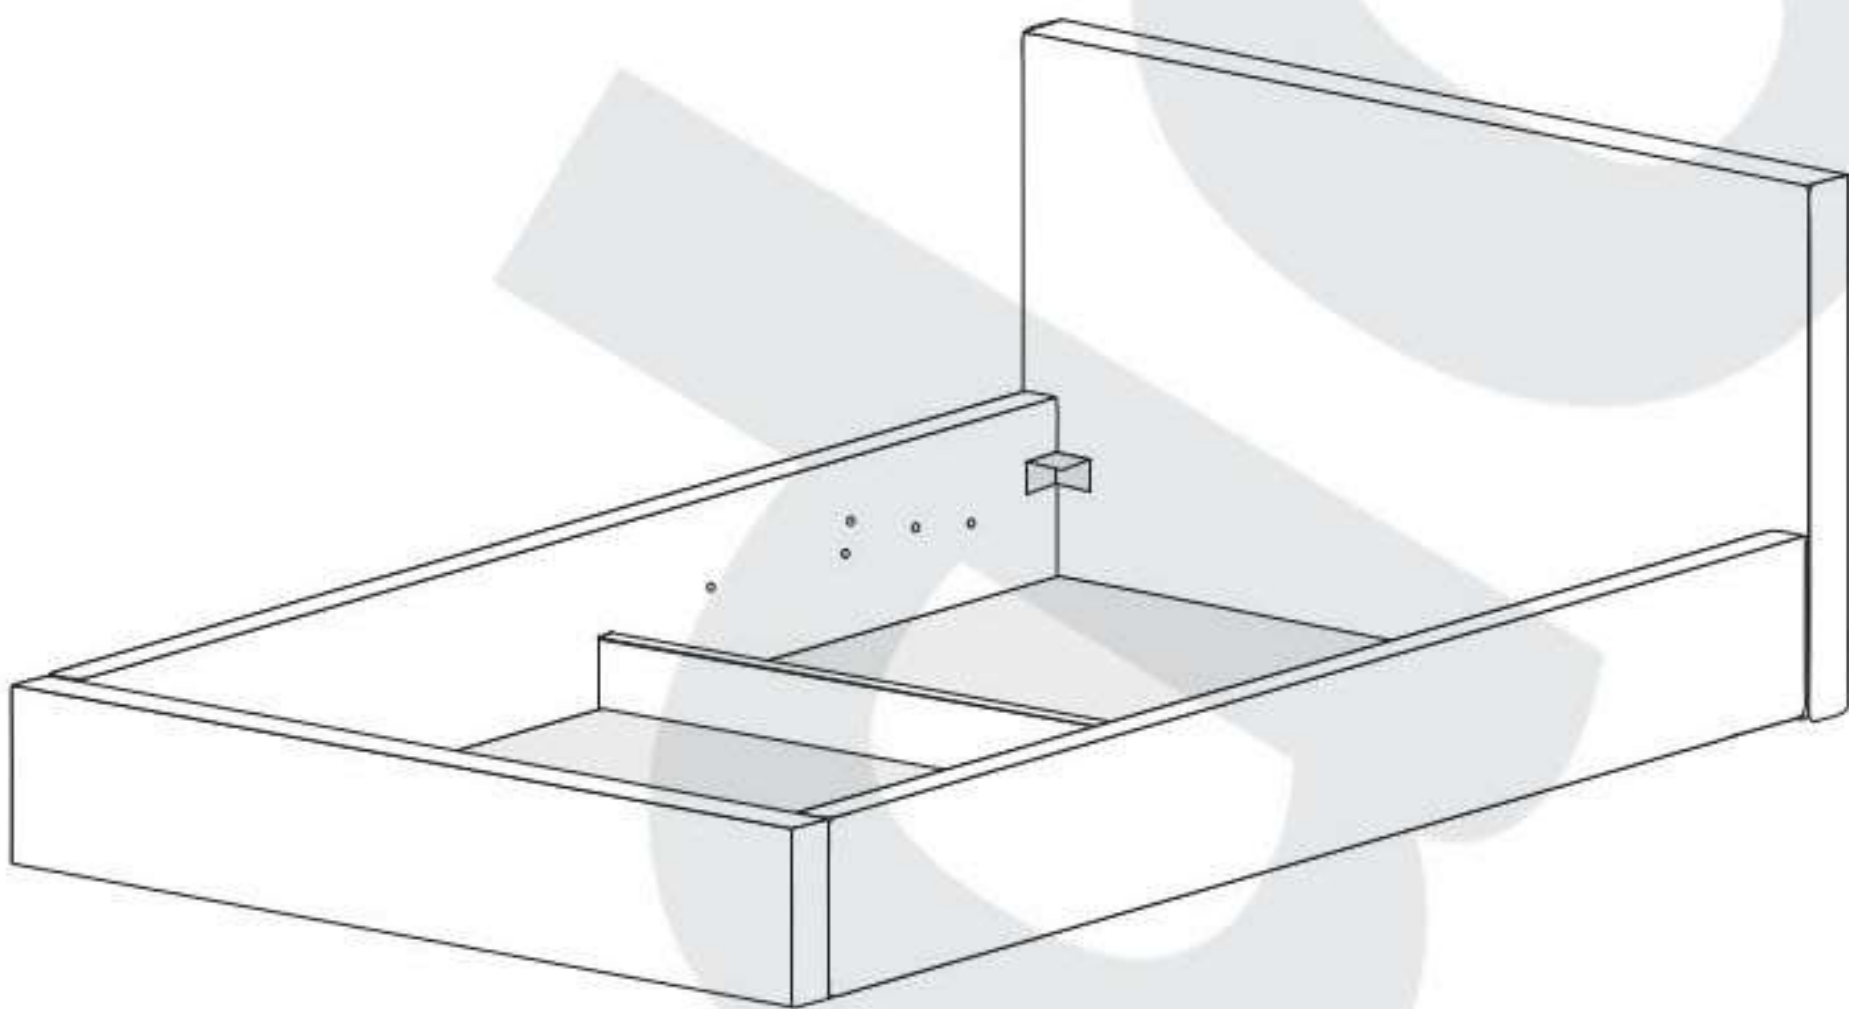
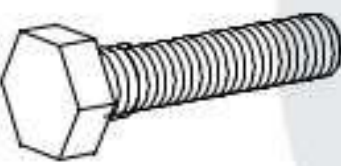
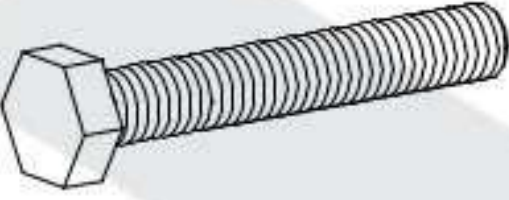
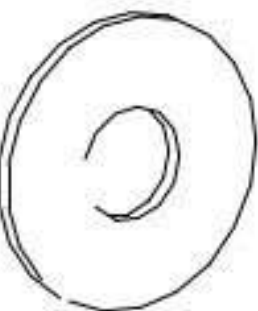


DESIO SLIM / FLAVIO SLIM / ROSO SLIM / MORENZO SLIM / RINIMI SLIM / CONTI SLIM


PL: Instrukcja montażu - łóżko
D: Aufbauanleitung - bett
GB: Assembly instruction - bed
FR: Instructions de montage - lit
SK: Návod na montáž - posteľ
CZ: Návod k montáži - postel
HU: Szerelési útmutató - ágy
HR: Upute za montažu - krevet

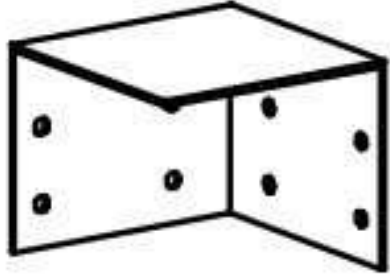


M6x35	M6x70	Y	Z
			
x16 + 1 gratis	x2	x18	x4

Date of production:				
				


I

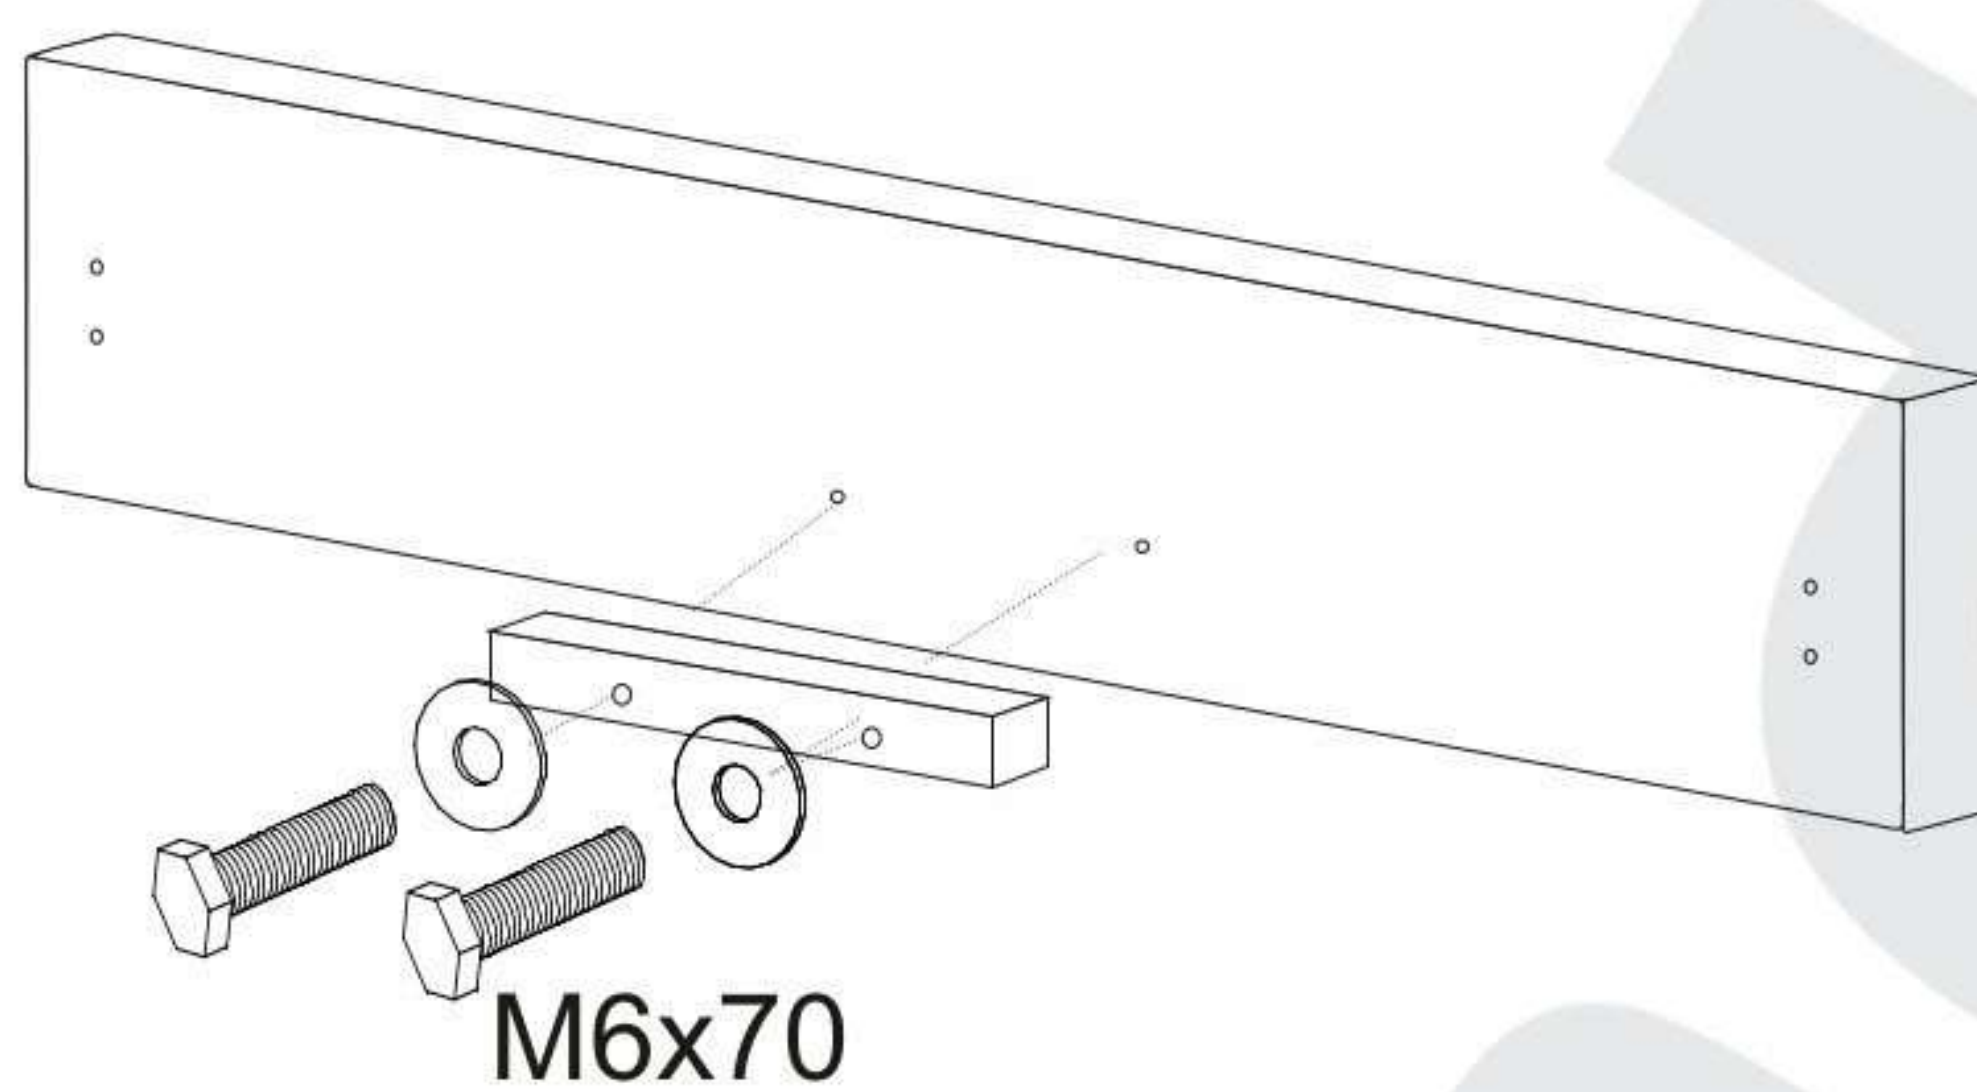


II

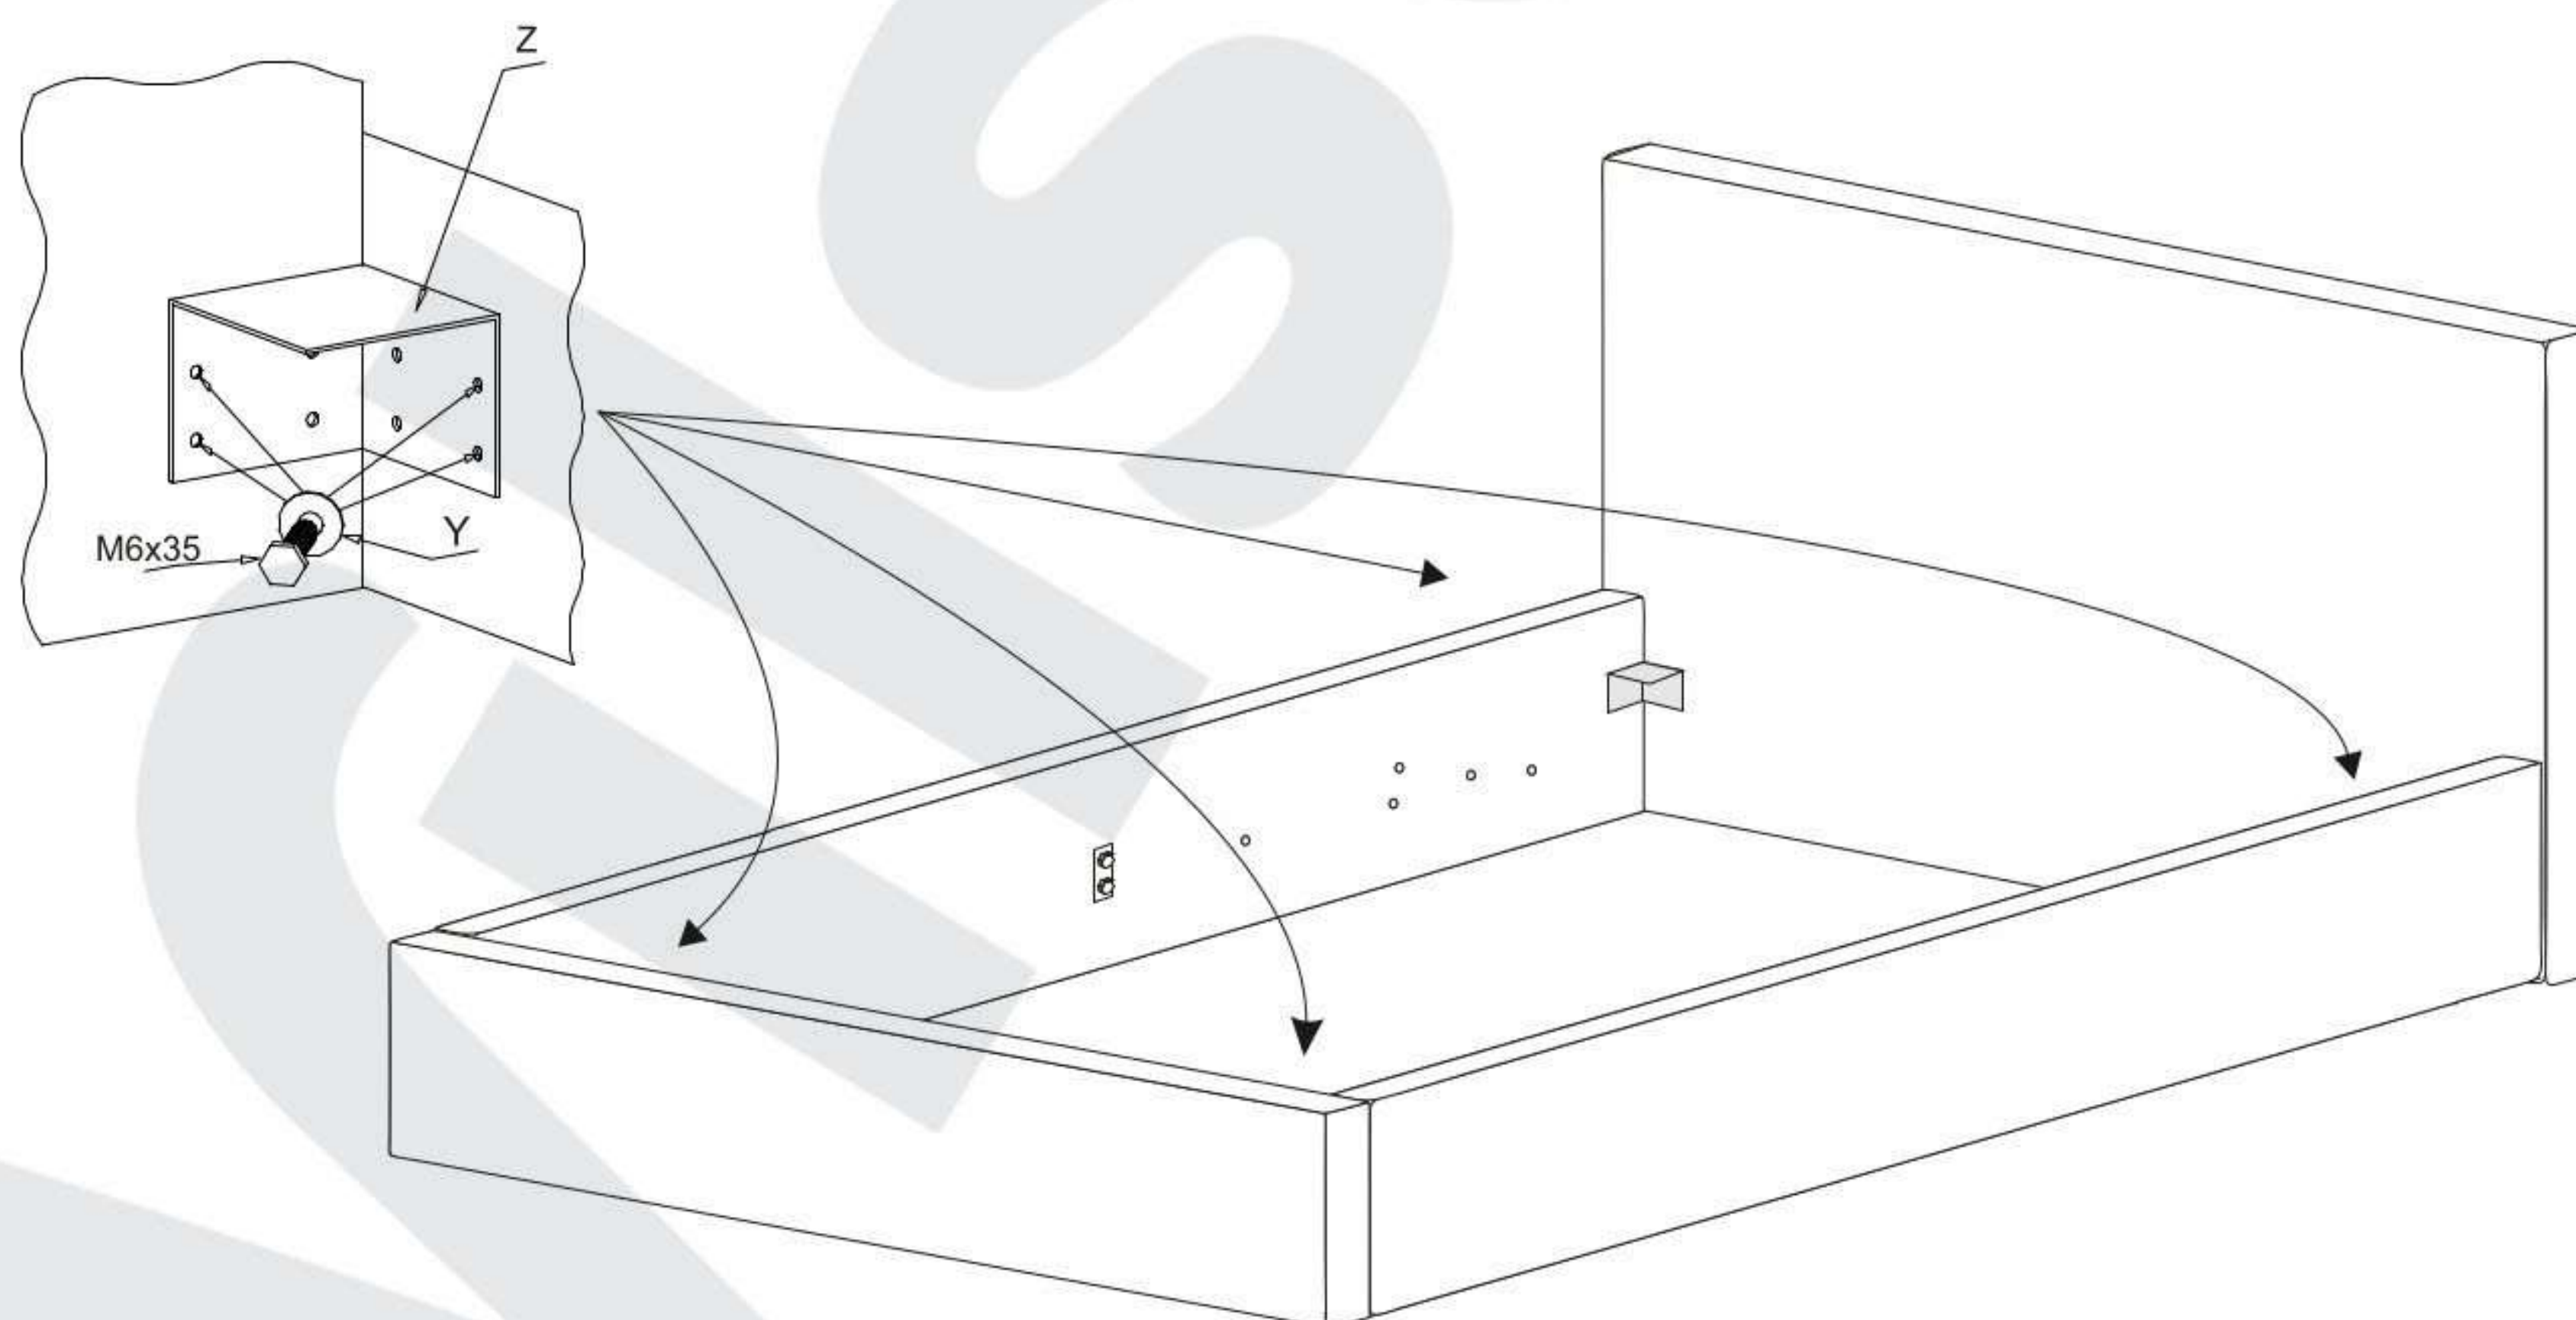

III

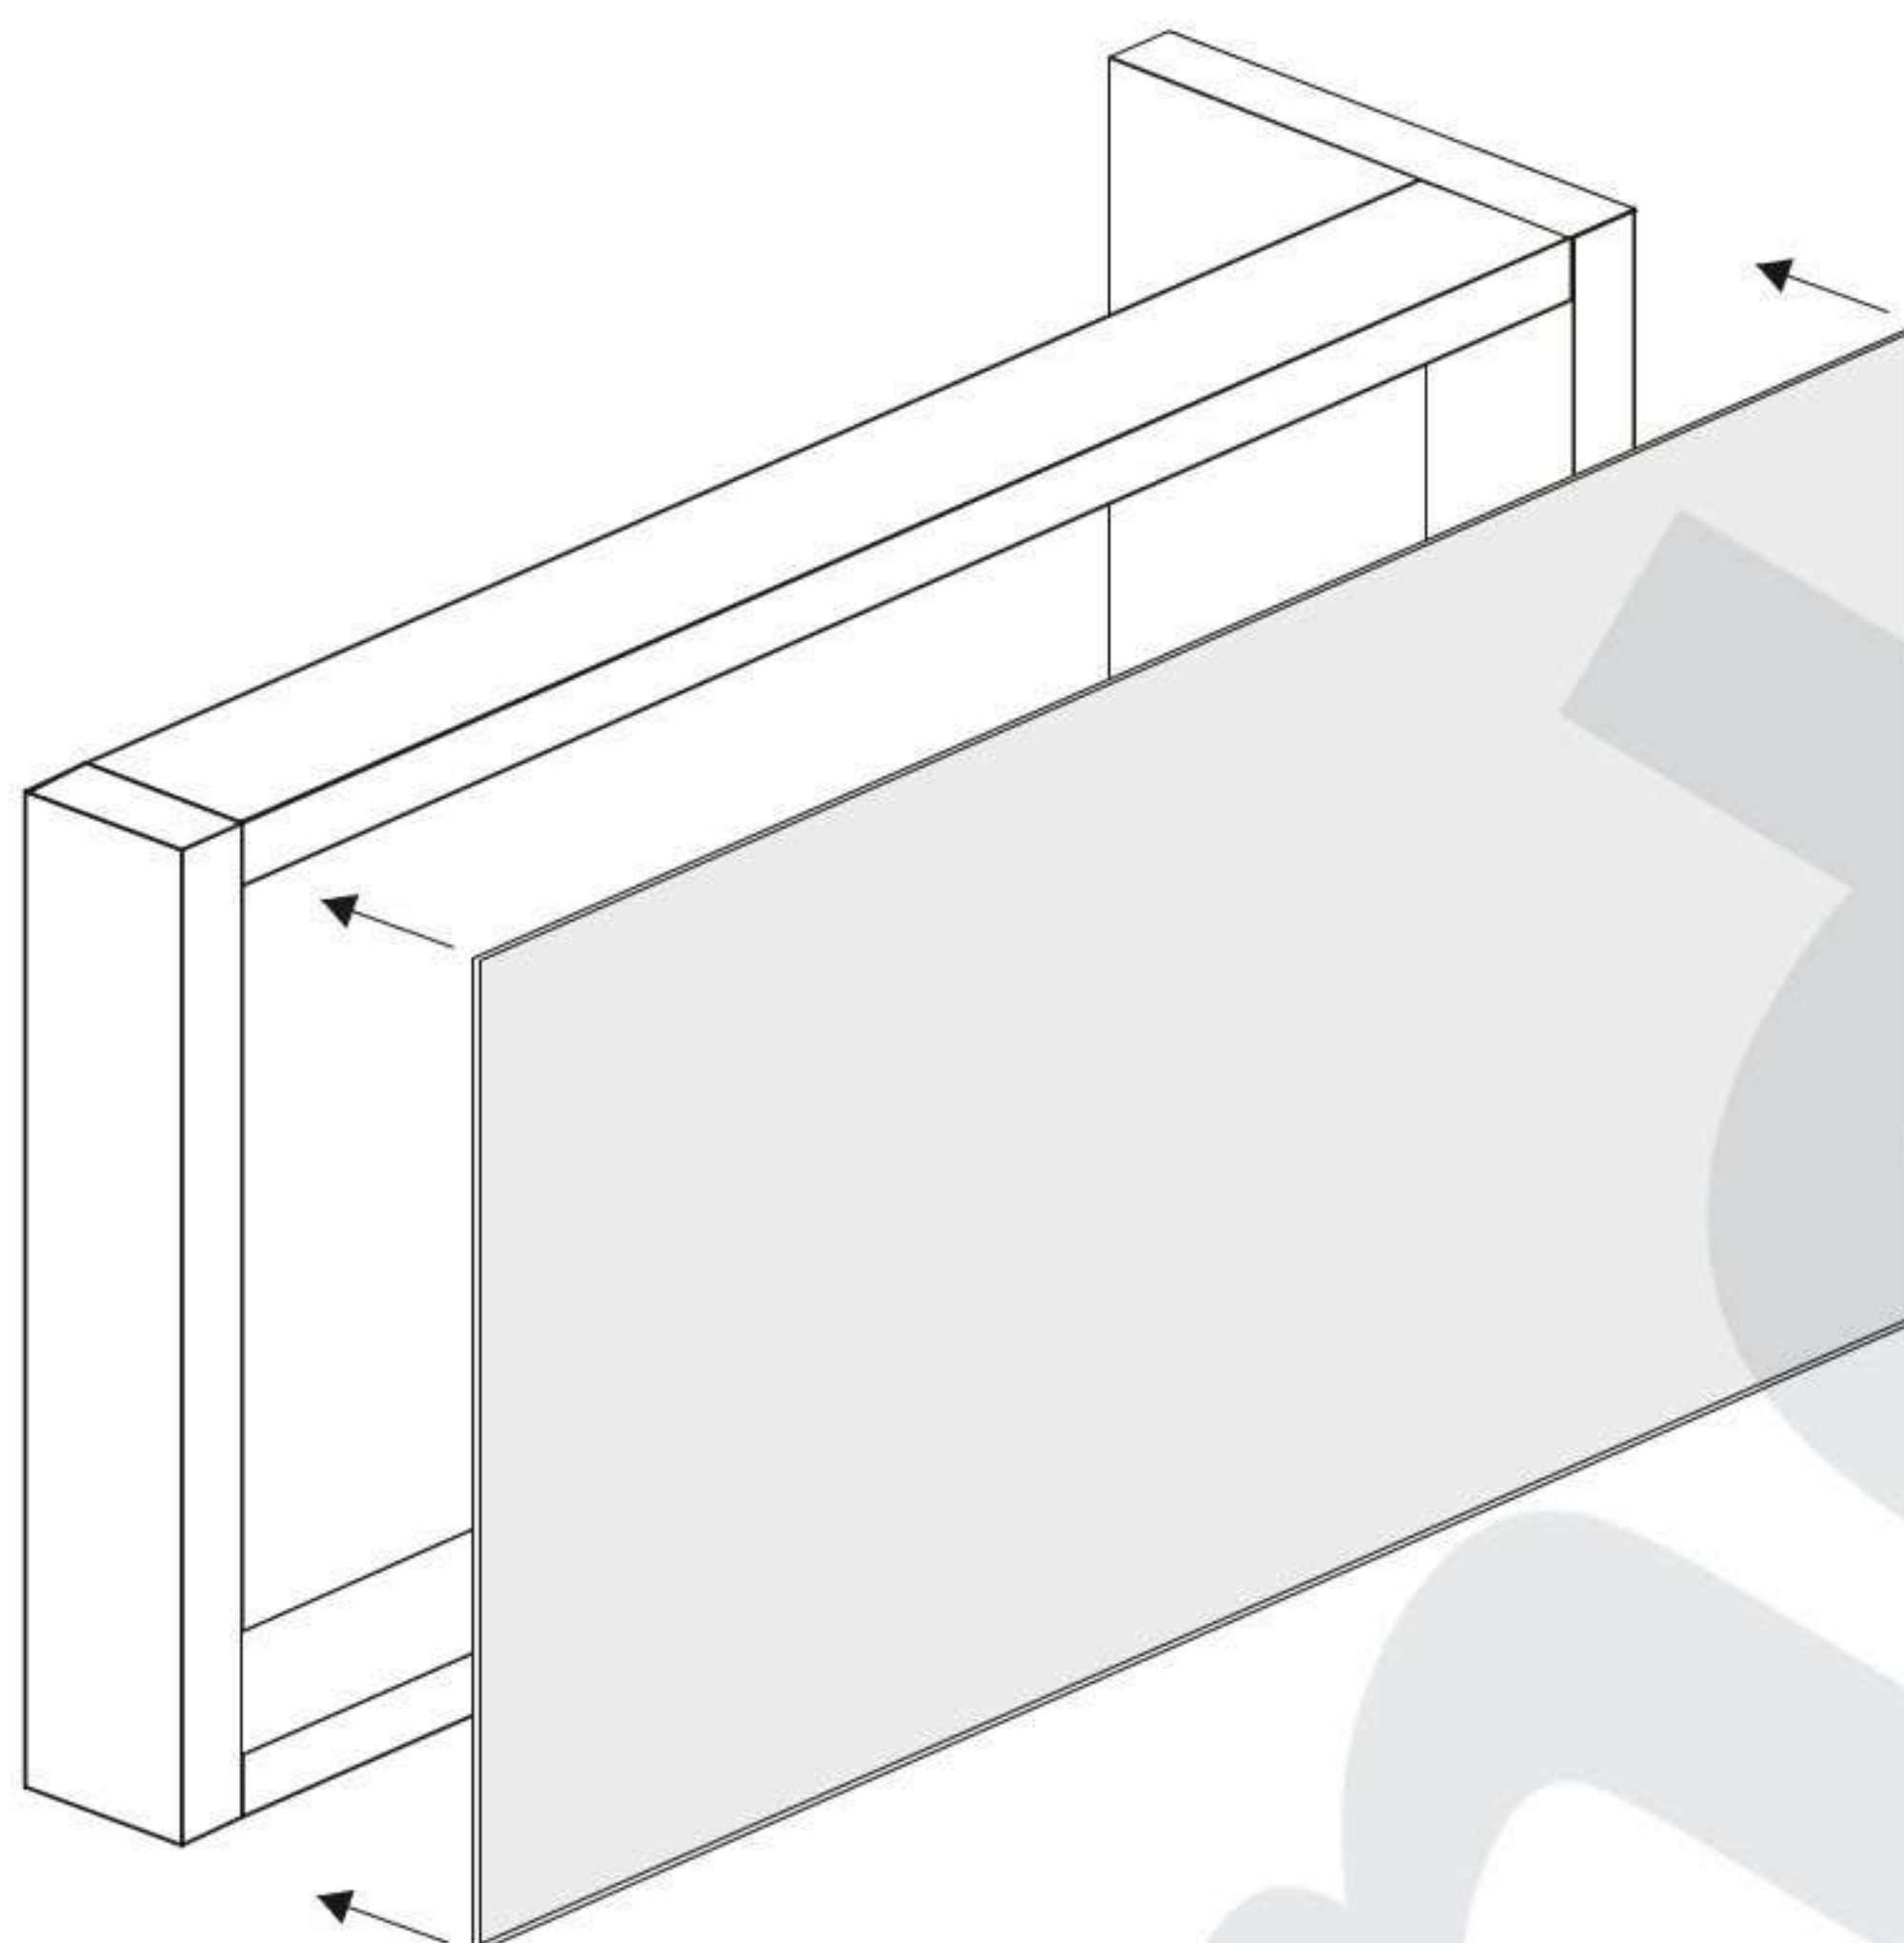

IV

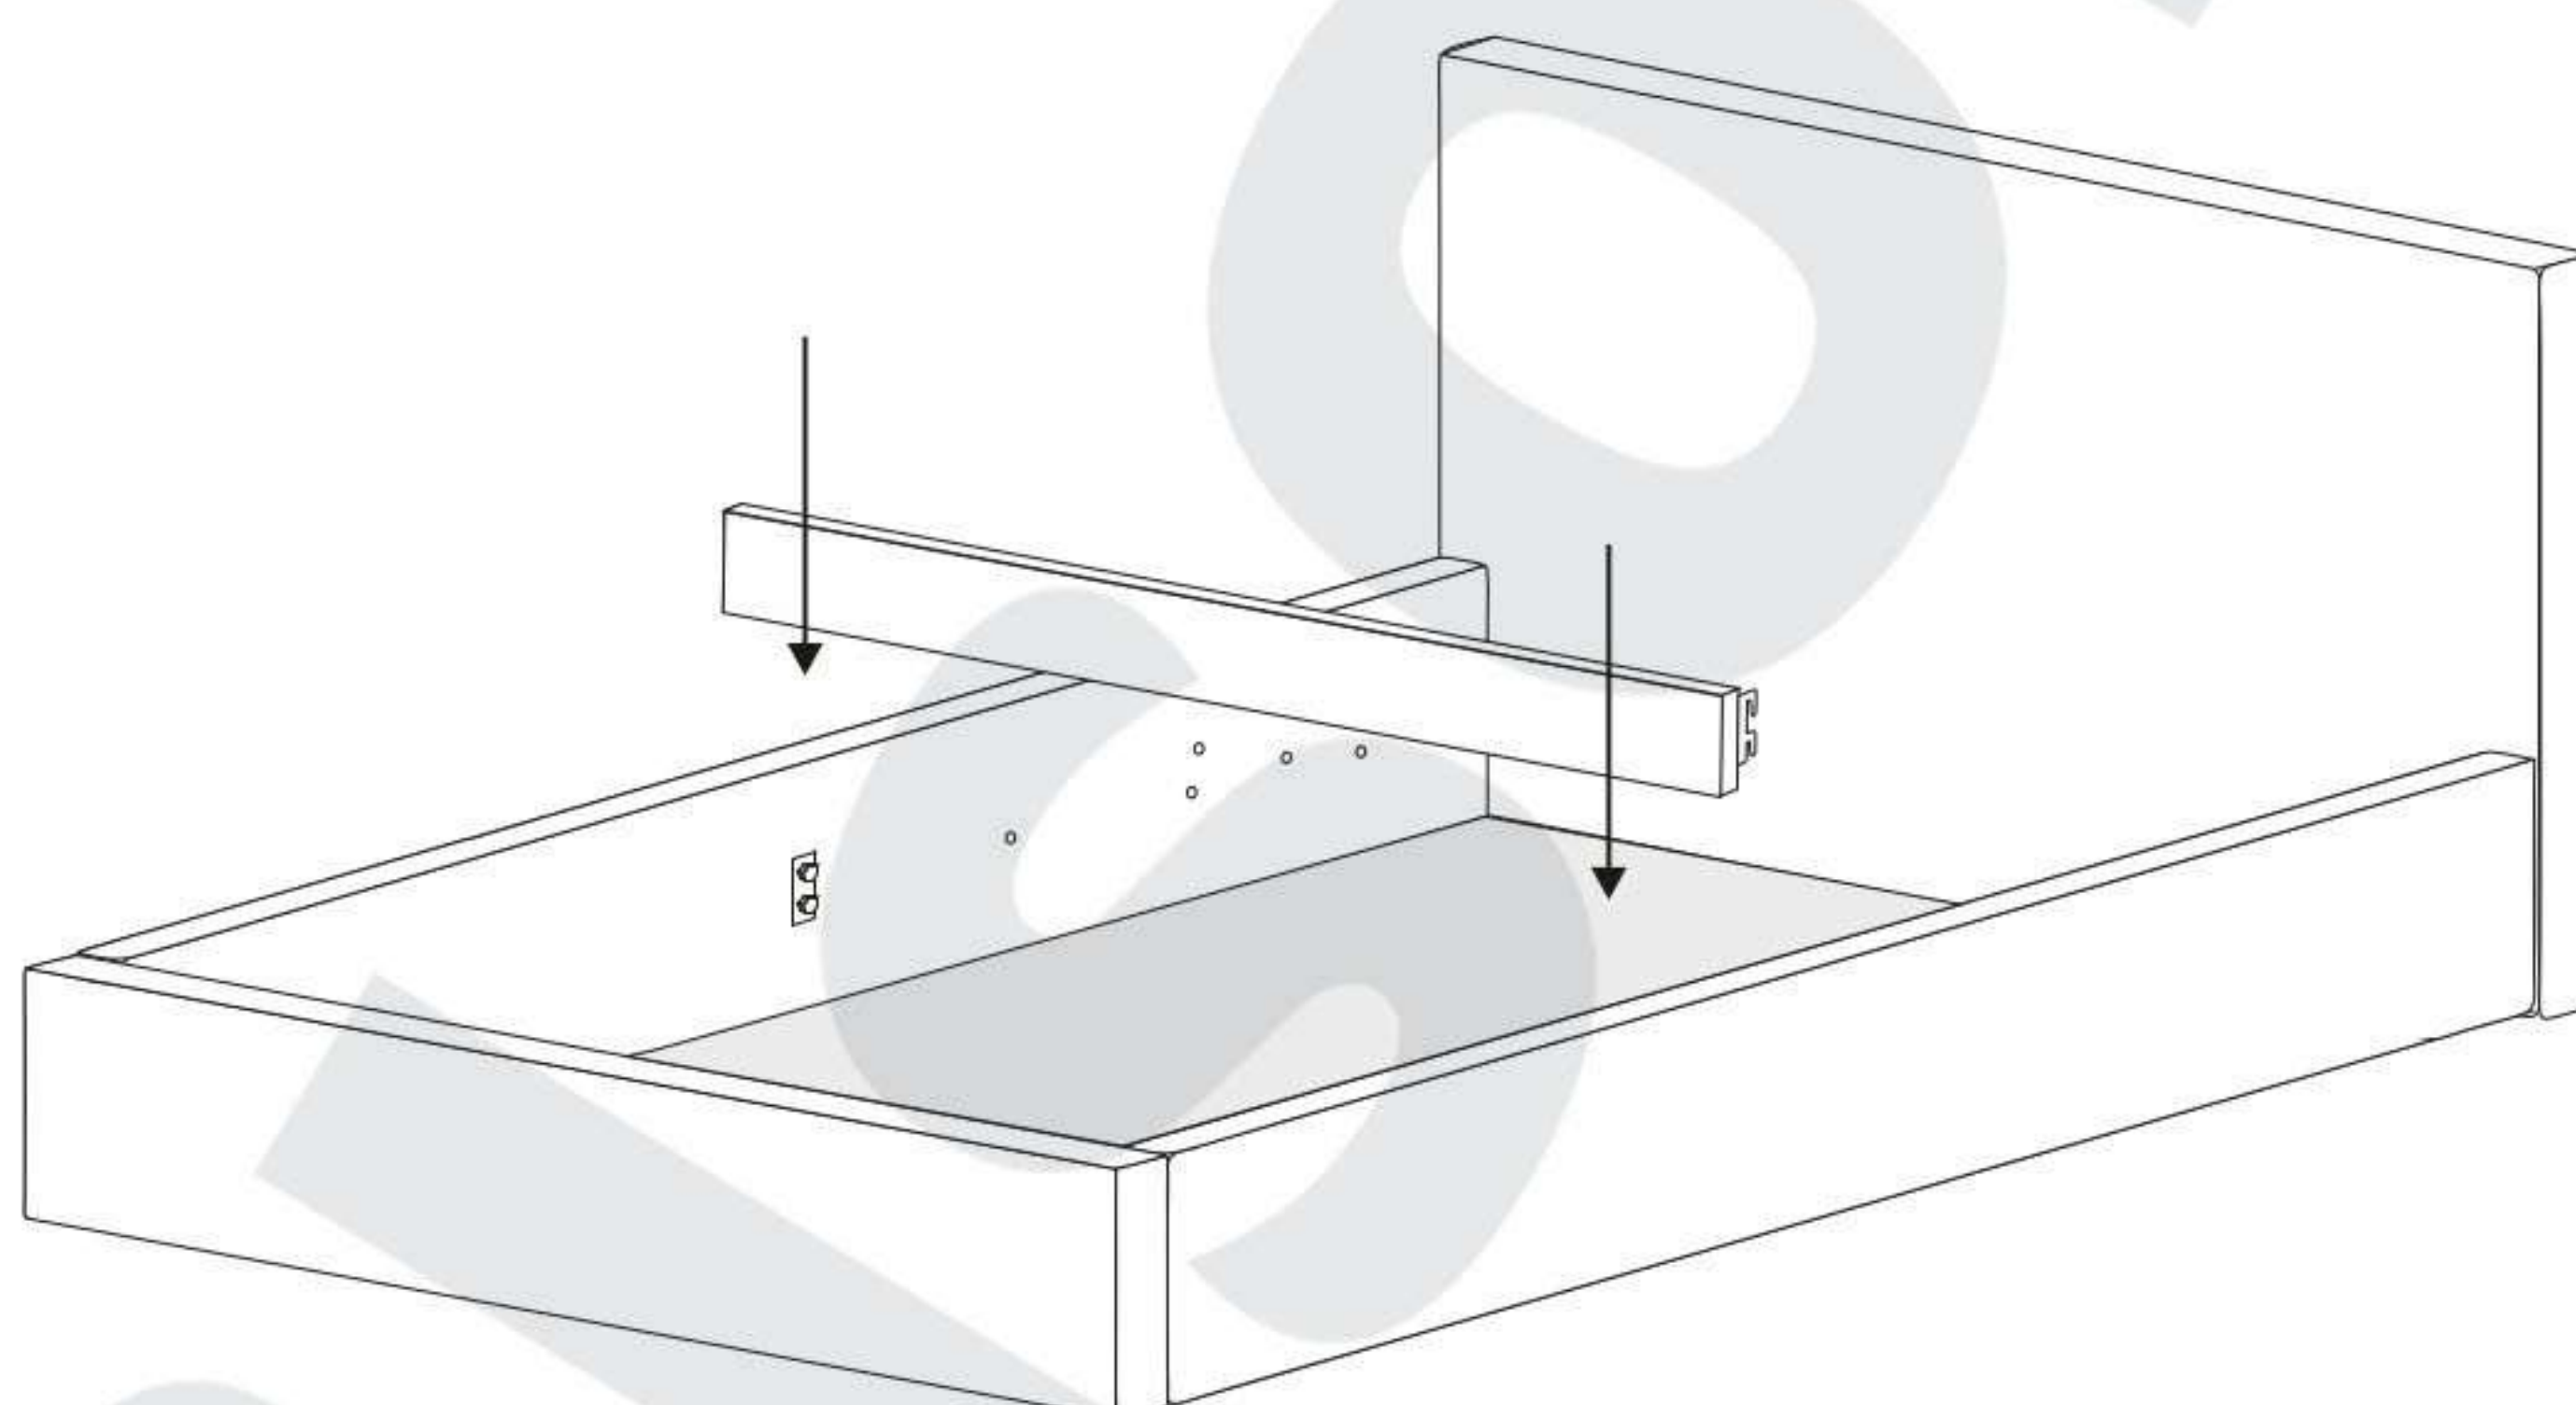


V



Stelaż łóżka / Der bettrost /
Bedstead / Sommier / Rošt /
Rošt / Ágyrácsok / Podnice

Opcja A / Option A / Možnosť A / Možnost A / A Lehetőség / Opcija A

(stelaż metalowy / holz metall /
metal frame / armature métallique /
kovový rošt / kovový rošt /
fém keret / metalni okvir)

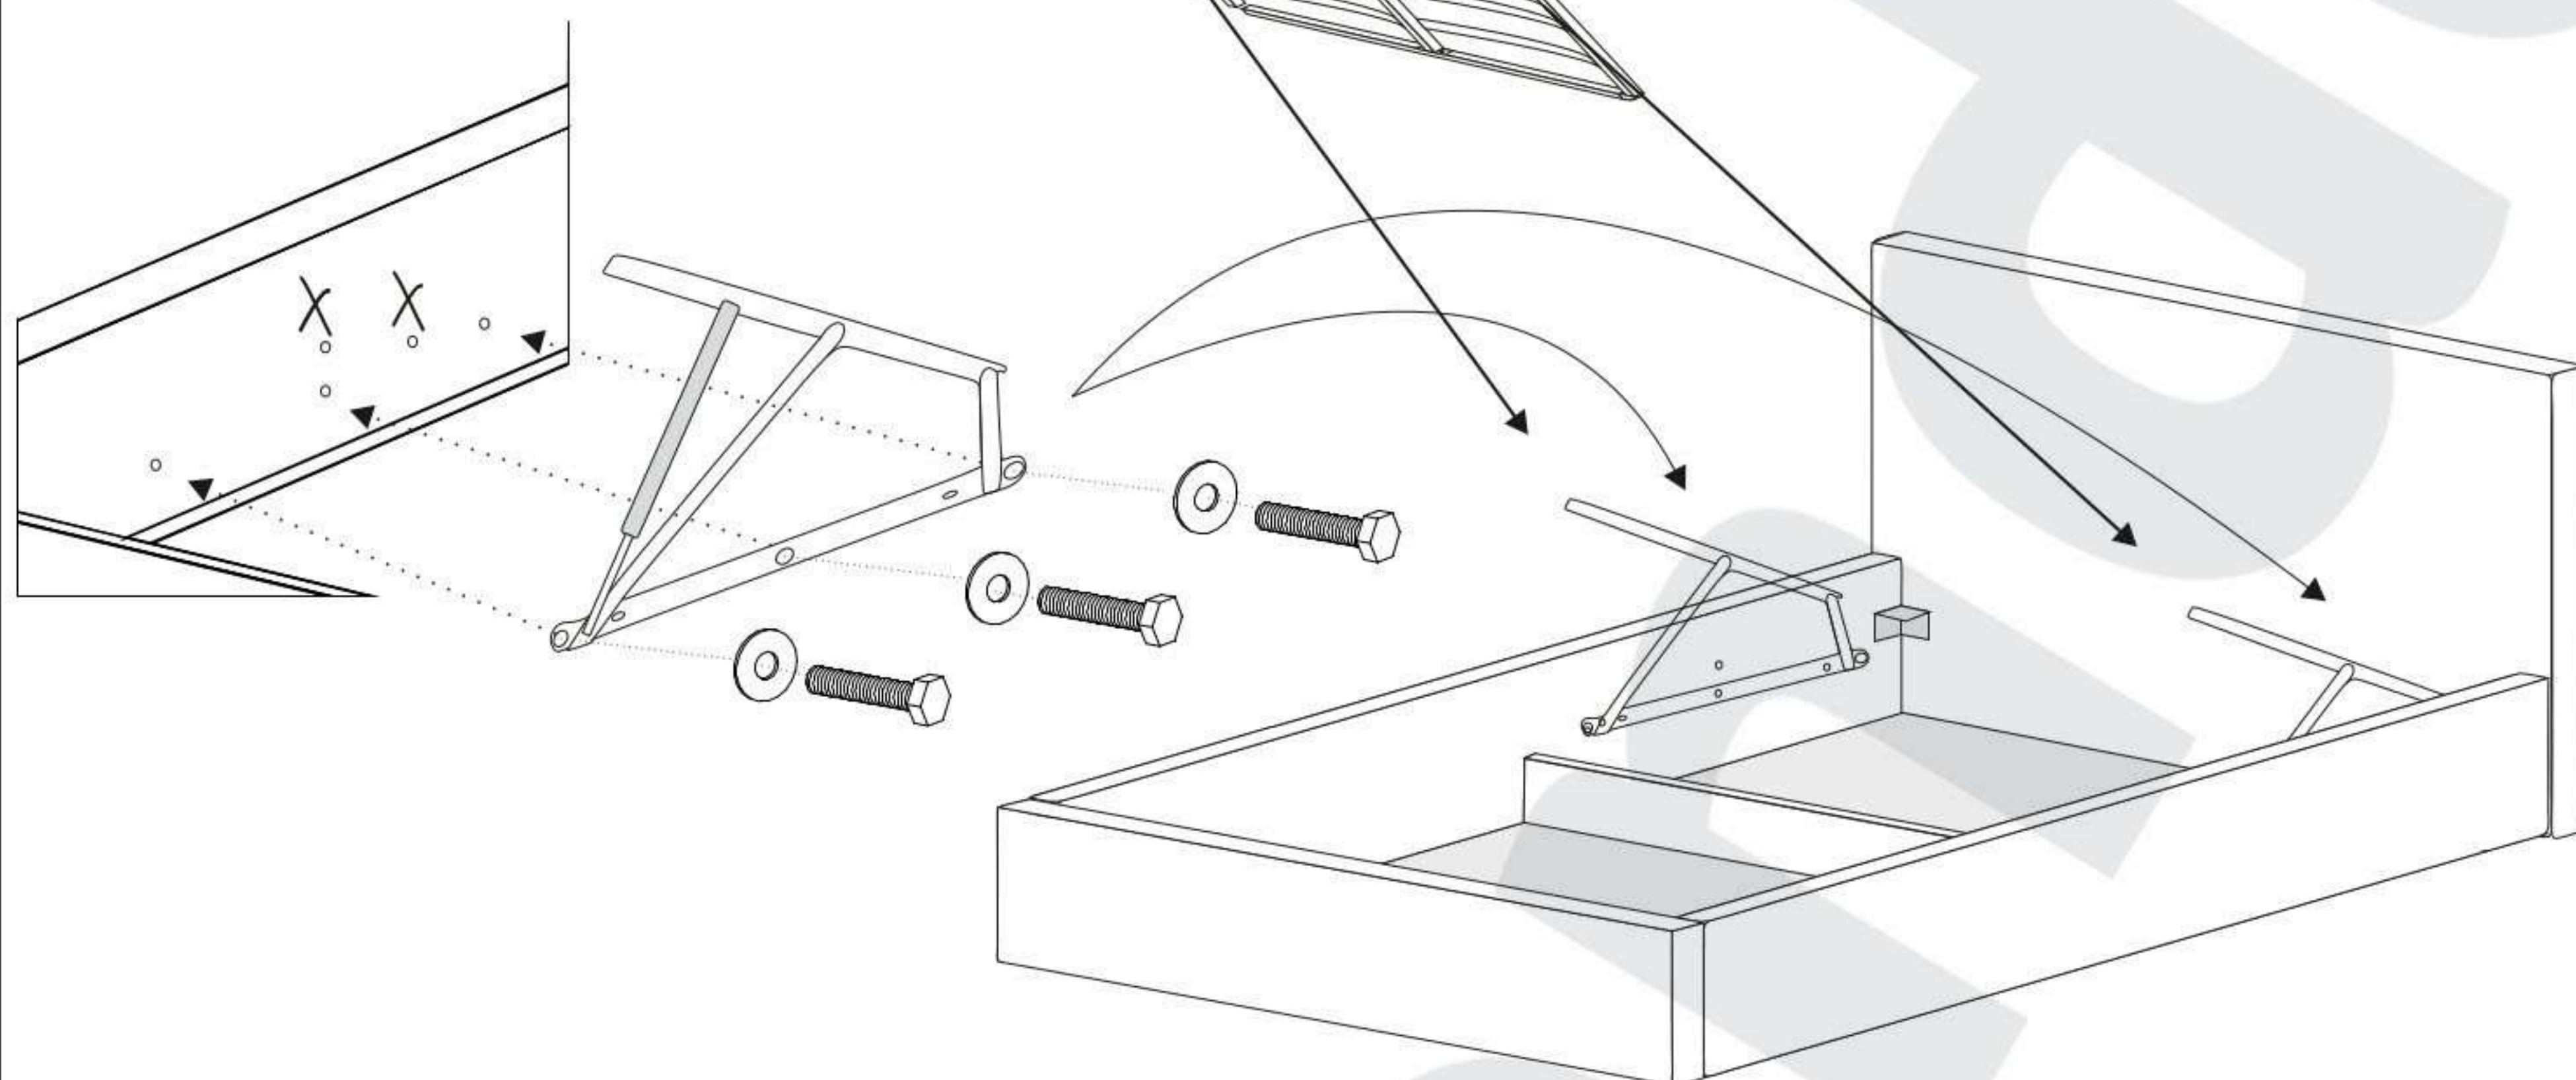

Opcja B / Option B / Možnosť B / Možnost B / B Lehetőség / Opcija B

(stelaż drewniany / holzrehmen / wooden frame / cadre en bois /
drevený rošt / dřevěný rošt / Fa keret / drveni okvir)

